



## 取扱書

よくお読みになってご使用ください。  
取扱書は車の中に保管しましょう。

# PASSO





# TABLE OF CONTENTS

## Table of contents

One	Before operating	Operations required before the operation, there are careful to explain.
Two	When driving	Method of safe driving and how to travel, and stop it are described.
Three	Using the equipment room	Explanation for using this room is comfortably equipped with have been.
Four	Care of the discs	Caring for your car, how to explain about the maintenance There.
Five	If you encounter trouble	Such as when a flat tire failure or, on what to do when an emergency There are then described.
Six	Vehicle specification	That contains information about specifications and customization features of the car There.
	Index	Alphabetical order, by way of information contained in this document You can find.

People who have installed the navigation system maker option, Please also read "manual navigation system handling the separate".

# TABLE OF CONTENTS | Table of contents

## One Before operating

### 1-1. Handling of the key

Key ..... 18

### 1-2. How to open and close the door, How to lock

Key-free system 20 .....

Wireless remote control 27 .....

Door (front door, Rear door)..... 30

Backdoor..... 33

### 1-3. Seat, handle, How to adjust the mirror

Front seat 37 .....

Rear seat.....39 .....

Headrest..... 49

Seat belt..... 51

Handle 59 .....

Inner mirror 60 .....

Door mirror..... 61

### 1-4. Opening the glass door, Closing

Power windows 64 .....

### 1-5. How refueling

Opening the filler neck 68 .....

### 1-6. Anti-theft system

Engine immobilizer System.....72 .....

## 1-7. For Your Safety

Correct driving posture 73 .....

SRS Air bag 75 .....

Only child seat 84 .....

Child seat

Mounting of 94 .....

## Two When driving

### Figure 2-1. DIRECTIONS FOR

USE	In operation 104 .....
	Engine (ignition)
	Switch (key free
	Vehicles equipped with the system).....
	114
	Engine (ignition)
	Switch (key free
	Vehicles equipped with non-system).....
	117
	Automatic
	Transmission..... 119
	Direction indicator lever 122 .....
	Parking brake 123 .....
	Horn (horn instrument)..... 124

### Figure 2-2. View of the meter

Gauges 125 .....

Warning light / indicator lights 127

With fuel consumption display function

Display 131 .....

2-3. How to put the write-  
Use of wiper

- Light switch 135 .....
- Fog light switch 138 .....
- Wiper And Washer  
(Front) ..... 140
- Wiper And Washer  
(Rear) ..... 142

2-4. Using the equipment of other  
traveling

- Toyota  
Stop & Start System  
(SMART STOP) ..... 144
- Equipment to assist in driving 155 .....

2-5. Operation in various  
situations

- To gain attention when the luggage 160 .....
- Operation at the time of cold..... 162

Th Using the equipment room

Figure 3-1. Of air-conditioners and Defogga  
How to use

- Auto air conditioning 168 .....
- Manual air conditioning 176 .....
- Rear window Defogga  
(Tri cloudy).....182 .....
- Front wiper  
Deaisa 183 .....

Figure 3-2. Using Audio

- Type of audio  
(Navigation  
Vehicles equipped with non-system) ..... 184
- Using the radio 186 .....

- CD Using the Player 188 .....
- In order to listen comfortably ..... 193
- Antenna..... 194

Figure 3-3. How to put the  
interior light

- List of Interior light..... 195
- Personal Light 196 .....
- Room Light 196 .....

3-4. Use of the equipment storage

- List of storage equipment 197 .....
- Bottle holder 200 .....
- Lower center box  
(With cup holder ) ..... 201
- Armrest pocket..... 202
- Open tray 203 .....
- Passenger Seat  
Under-tray 204 .....
- Deck side pocket 204 .....

3-5. Use of equipment or other house

- Sun visor 205 .....
- Vanity mirror 206 .....
- Accessory socket 207 .....
- Armrest 208 .....
- Shopping hook..... 209
- Floor mat 210 .....

One

Two

Three

Four

Five

Six

# TABLE OF CONTENTS | Table of contents

## Four Using the equipment room

### Figure 4-1. Care of the discs

Care of the exterior.....	214
Caring for your interior.....	217
For tire 219 .....	

### 4-2. Inspection and parts replacement

Bonnet.....	223
Garage jack .....	226
Exchange (Bulb) light bulb 229 .....	
Check the fuse, exchange 247 .....	
Key battery replacement 254 .....	
Supply of washer fluid 258 .....	
Of the air conditioner filter	
Exchange.....	260

## Five If you encounter trouble

### Table 5-1. First

When the failed 264 .....	
Very light flashes.....265 .....	
Warning flare 266 .....	
For traction 268 .....	
Fuel Pump	
Shut-off system.....	274

### Figure 5-2. Remedy Emergency

With a warning light when 275 .....	
When you punk .....	280
Engine	
If you do not take the.....	291
Shift lever is	
If you can not shift 293 .....	
If you have lost the key 294 .....	
Electronic key card	
If you do not work properly	
(Key-free system	
Vehicle-mounted) .....	295
The battery is	
When the up 297 .....	
Overheat	
When you are 300 .....	
When the stack 302 .....	
To stop the vehicle emergency.....	303

## Six Vehicle specification

### Figure 6-1. Specification

List Maintenance data	
(Capacity and stocks of oils and fats) .....	306

### 6-2 Customization feature

User customization	
Feature List .....	313

### 6-3 Initial setting

Initial items that need to be set 314 .....	
---	--

# Index

Abbreviations and Acronyms 316  
.....

Alphabetical index 317 .....

Another symptom index 330 .....

One


Two


Three

Four


Five

Six

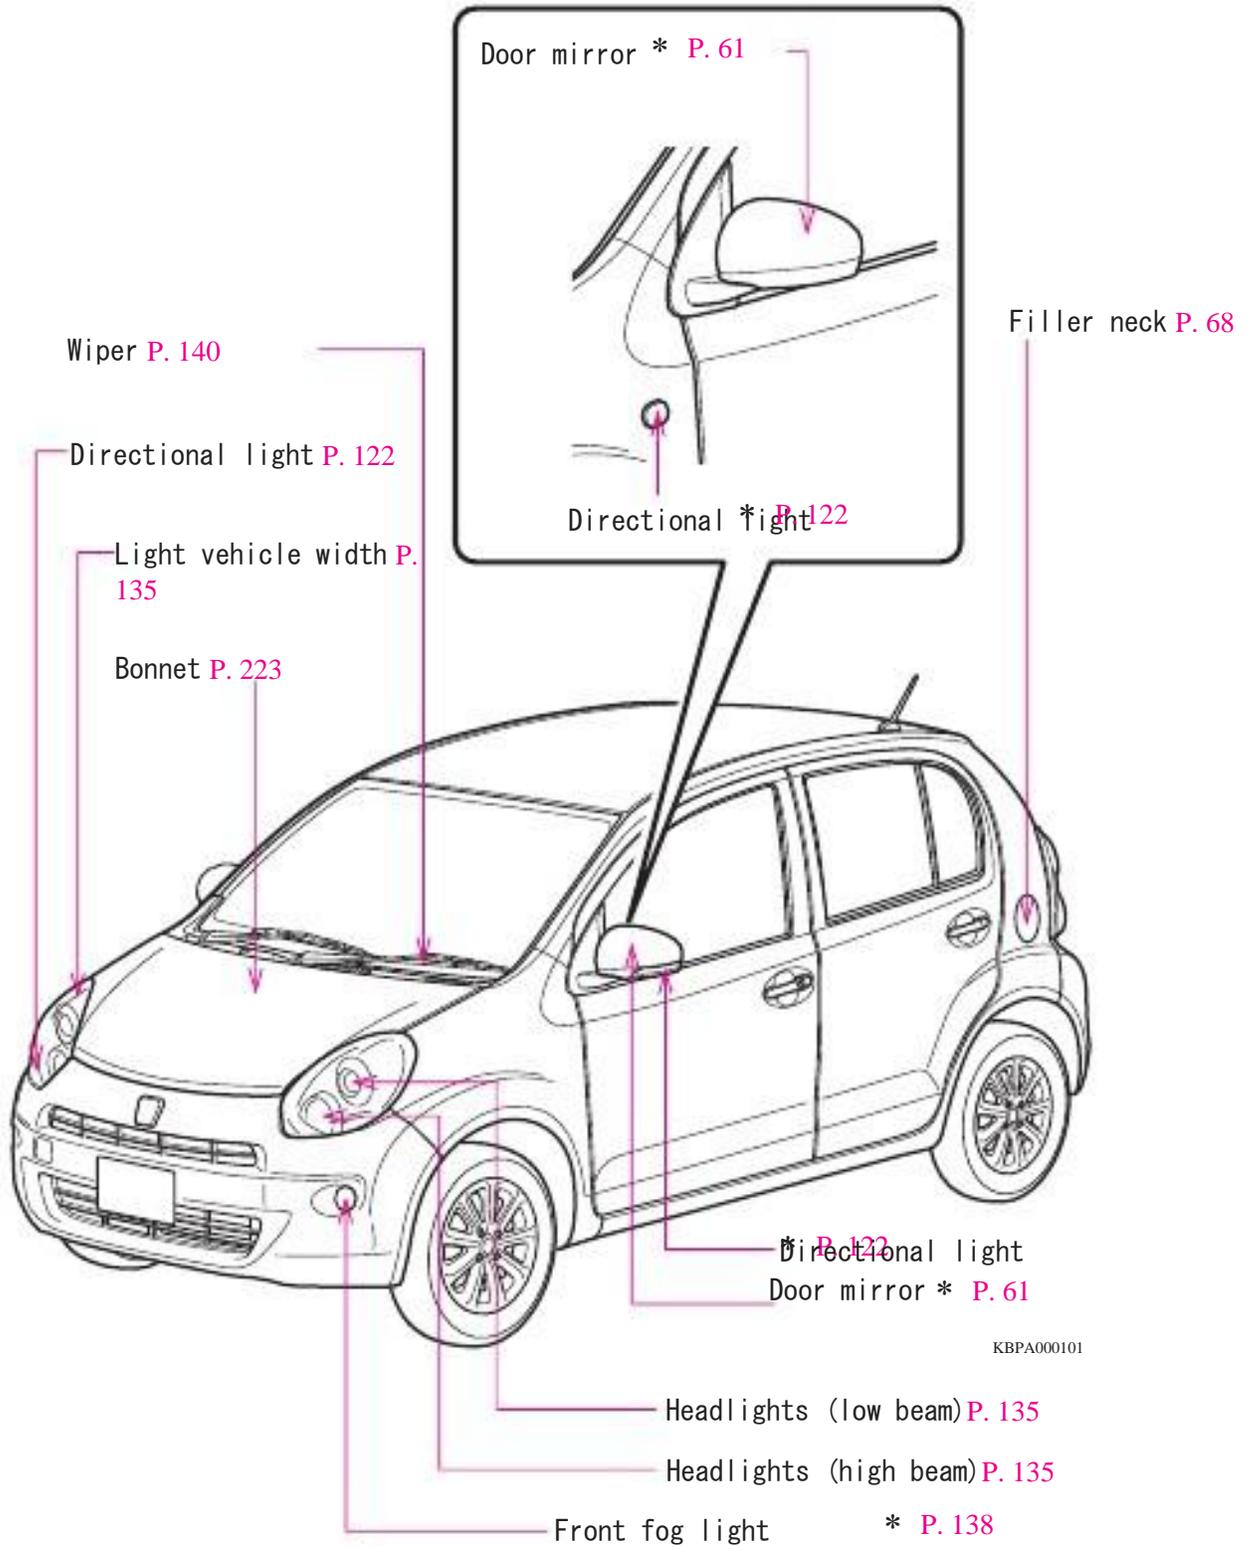

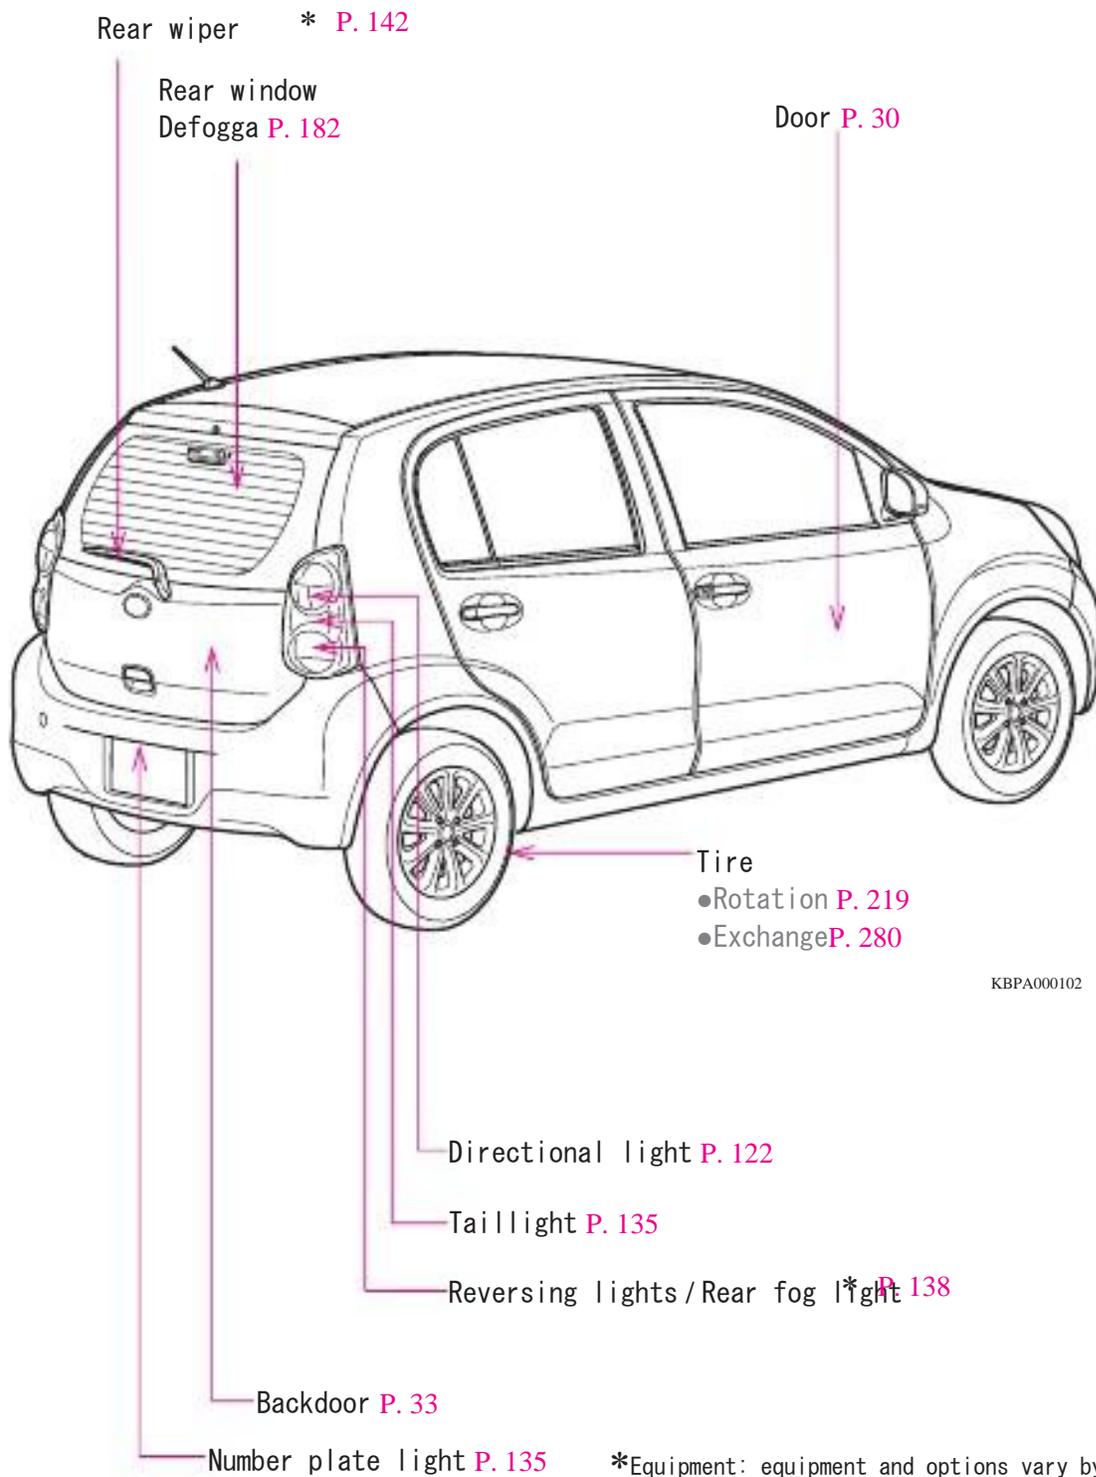

\*Equipment: equipment and options vary by make and model vehicle

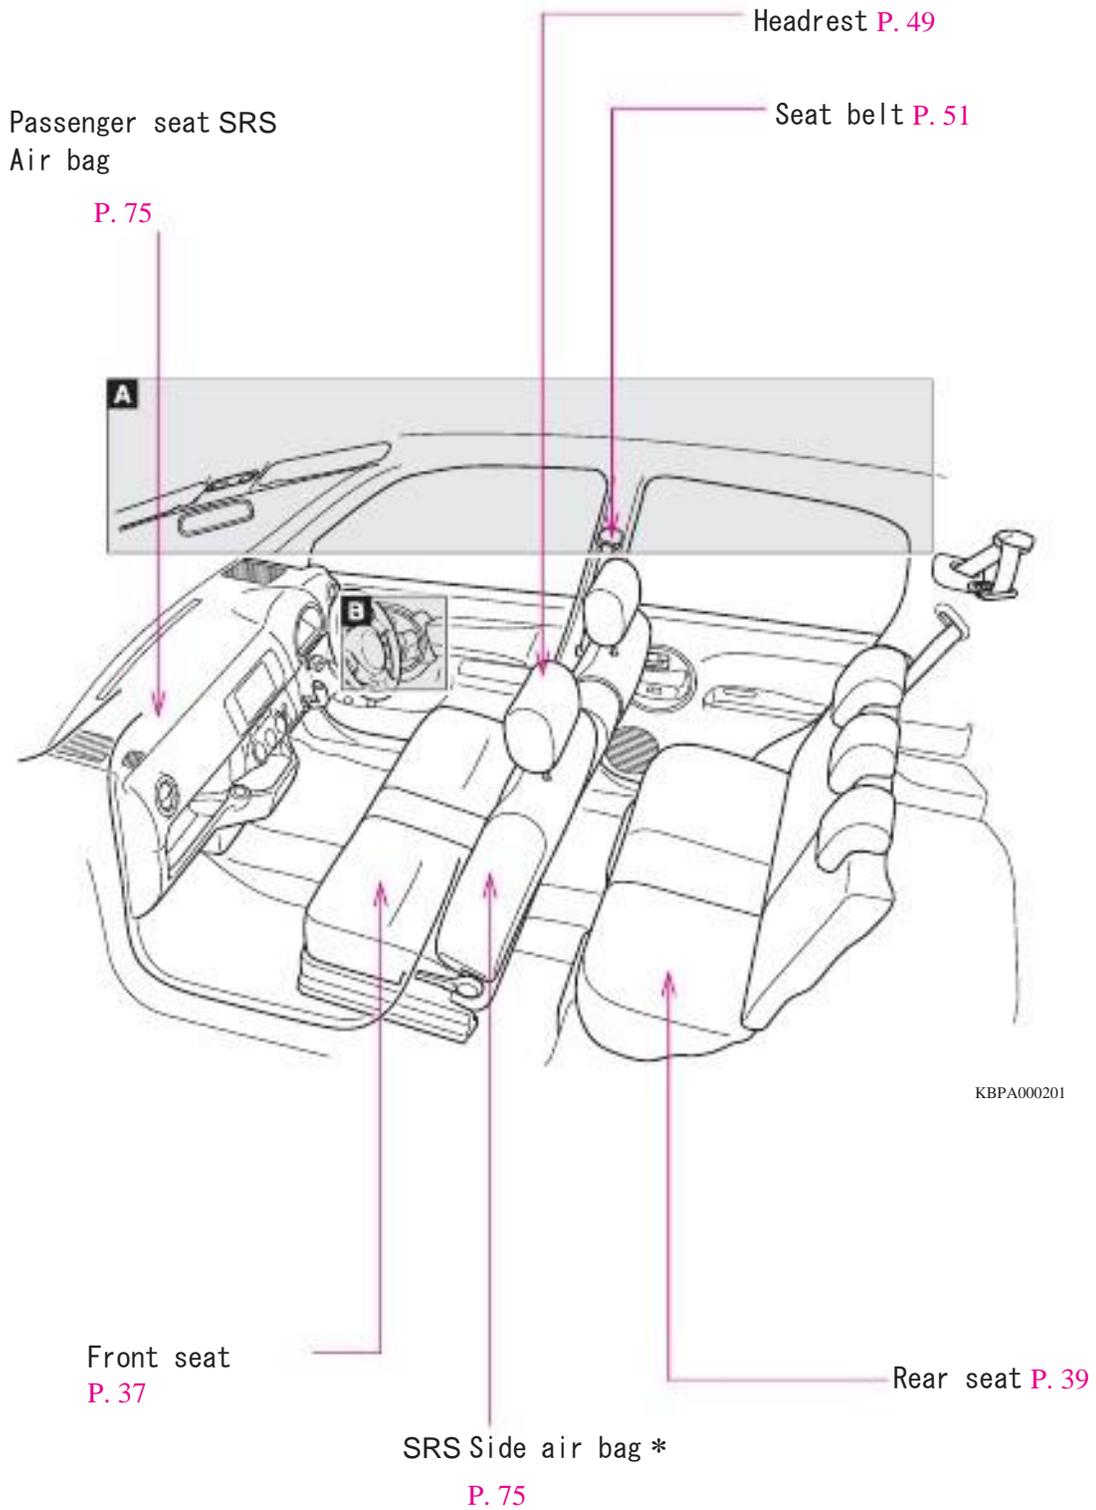


A

Room Light P. 196  
Personal Light P. 196

Sun visor  
P. 205

Vanity mirror  
P. 206

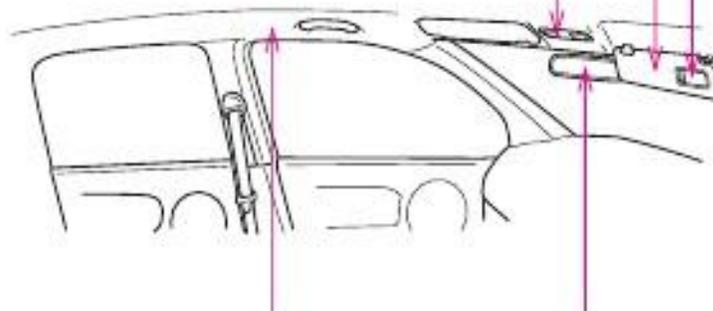

SRS Curtain shield airbags

\* P. 75

Inner mirror P. 60

KBPA000202


\*Equipment: equipment and options vary by make and model vehicle

**B**


Lever door lock P. 30

Power window switch P. 64

Window lock switch P. 64

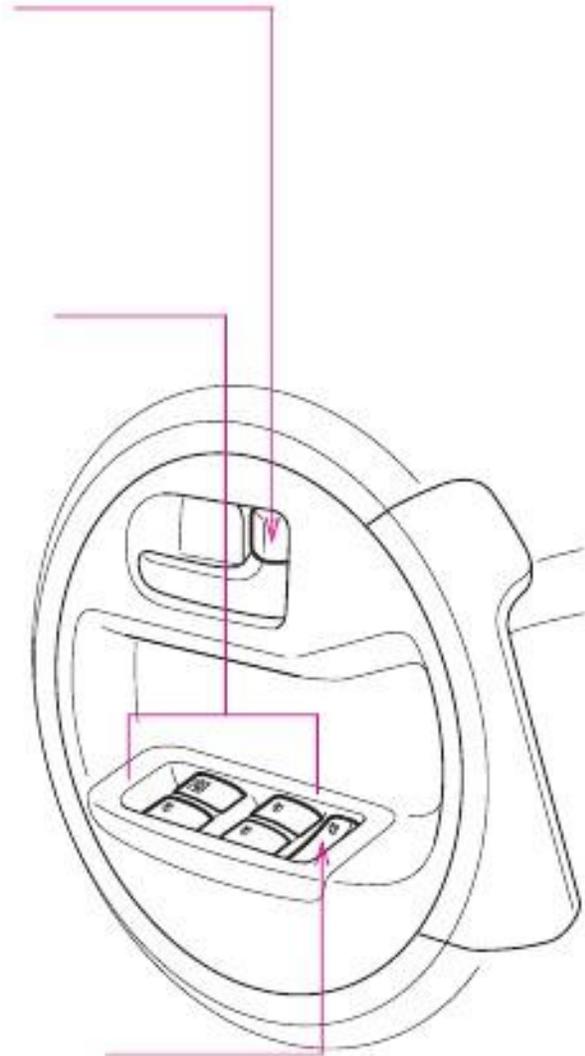


KBPA000203

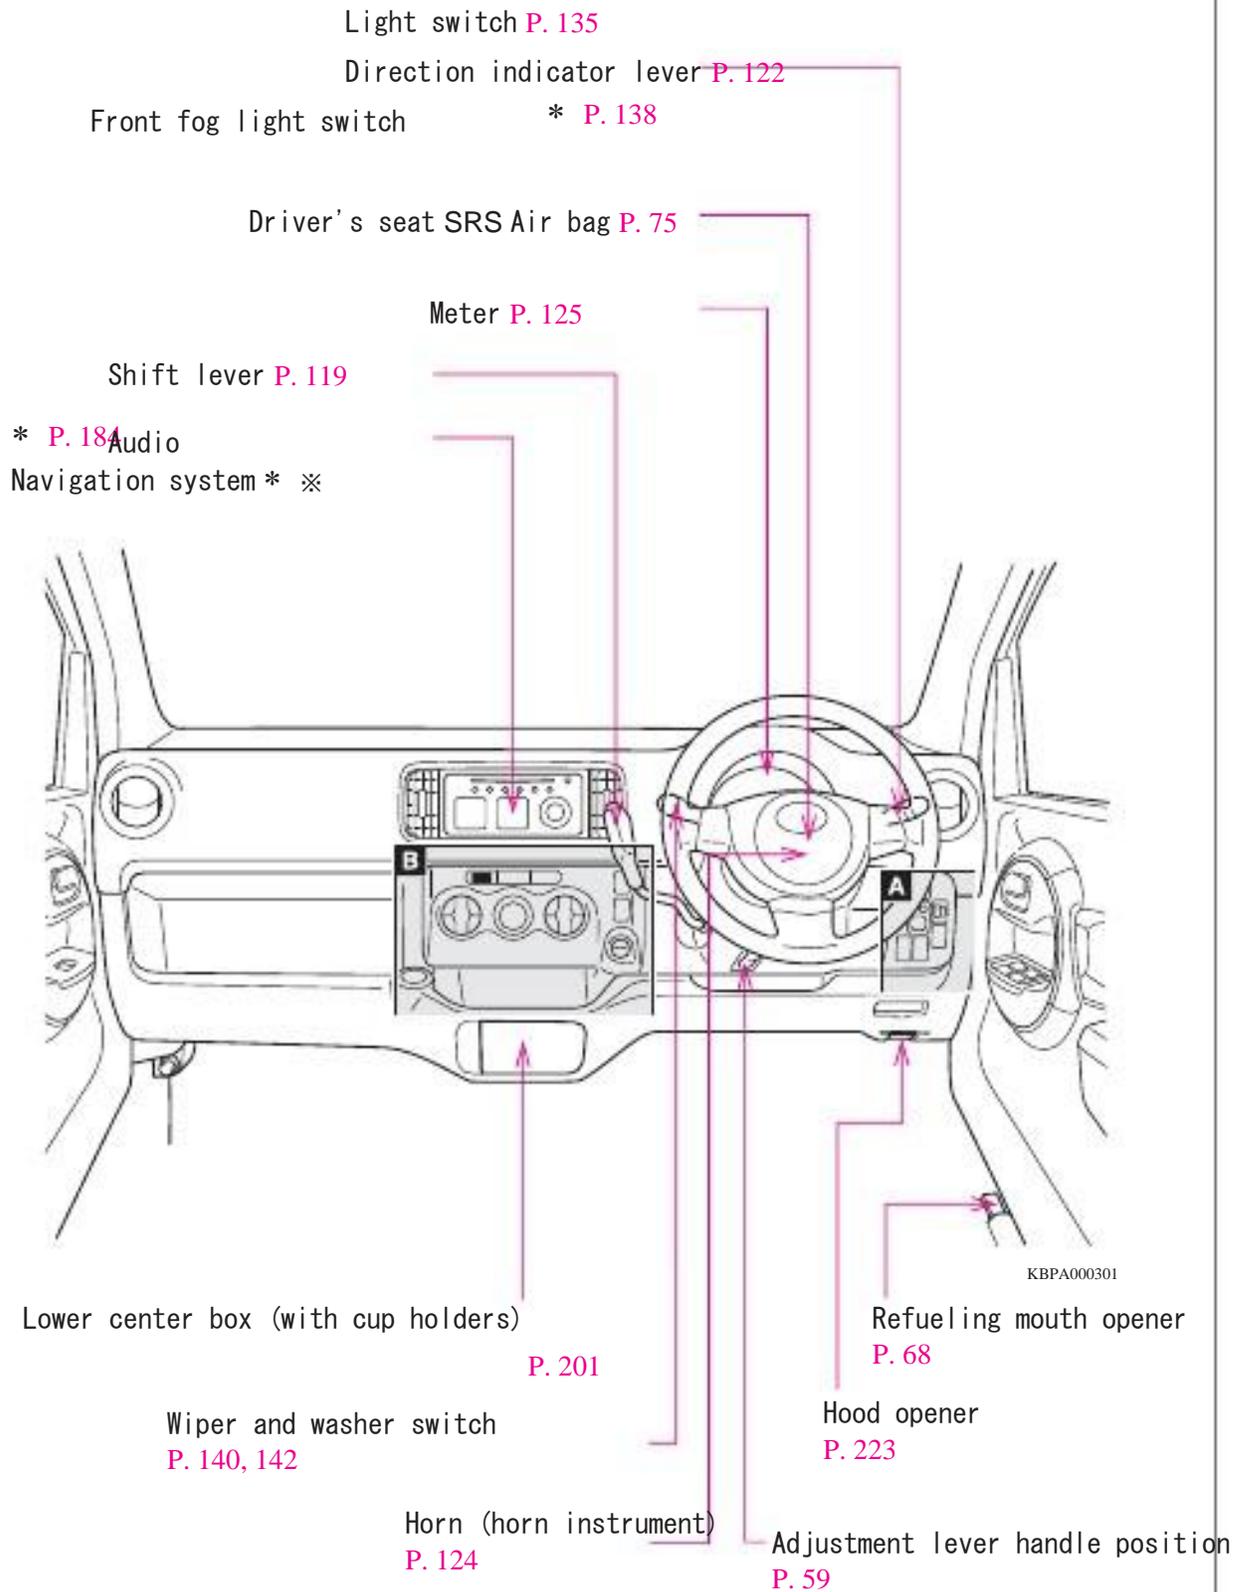

\*Equipment: equipment and options vary by make and model  
vehicle. Please refer to the "navigation system manual handling separate volume".  
※

A

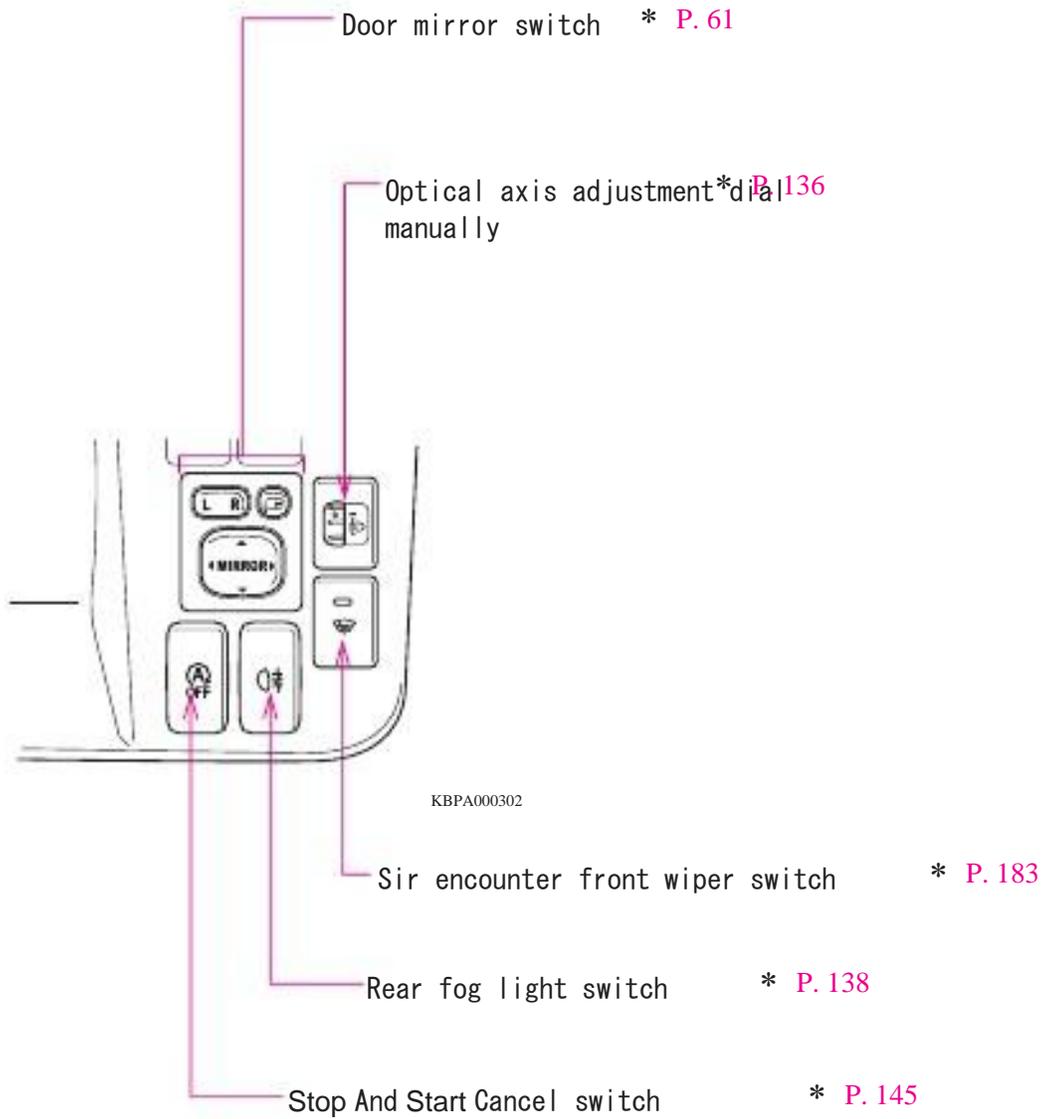

\*Equipment: equipment and options vary by make and model vehicle

**B**

## ▶ Auto air conditioning

Rear window  
Defogga switch  
P. 182

Air conditioning  
P. 168

Shopping hook  
P. 209

Flasher switch very  
P. 265

VSC OFF  
Switch \*  
P. 156

Accessories  
Socket  
P. 207

KBPA000303

## ▶ Manual air conditioning

Flasher switch very  
P. 265

Air conditioning  
P. 176

Shopping hook  
P. 209

Rear window  
Defogga switch  
P. 182

VSC OFF  
Switch \*  
P. 156

Accessories  
Socket  
P. 207

KBPA000304

\*Equipment: equipment and options vary by make and model vehicle

## That you should know

### The contents of this document

This document is a description of all equipment, including the option. So if there is a description of the equipment that is not your car have been described. In addition, you may acknowledge by the specification of the car changes, the content does not match the car

Please.

Handling (Optional dealers) equipment was installed at Toyota dealers , Please read the instruction manual that comes with the product.

Illustration, due to differences in specifications, etc. that has been described, consistent with the equipment of your car

You may not.

### For illegal modifications

- When installed in something other than a Toyota parts for which notification was given to the Ministry of Land, Infrastructure and Transport, illegal modifications

You may be.

- Or decrease the height of the car, such as mounting the wide tires, the car is not suitable for performance and functionality

By installing the parts, or caused the failure, caused the accident, received a serious injury

- Remodeling of the handle, please do not absolutely. To handle SRS Air bag

May cause dangerous kick. Because it is being built, but is handled improperly, or not function properly, the wrong

Te bulge, serious or lasting injury, there are worst-case scenario could lead to death The Lee.

- The following cases, please consult your Toyota dealer.

- Replacement of tires and disc wheel mounting nut wheel.

If you use anything other than the specified type and different, had a negative impact on travel

Lee may be illegal to remodeling.

- Installation of electrical equipment such as radio-, removed.

Have an adverse effect on electronic devices or components, connected to the vehicle such as fire damage or accident

There is the danger that injury or death.

- Phil colored glass window of the driver's seat and passenger seat-glass front window, Please do not paste and systems (including transparency film). Interfere with the visibility stupid

Than not, it may lead to illegal modifications.

## Notes on operation

Always pay attention to, such as other cars and pedestrians, to the situation around,  
Do you drive safely

Bloom.

Driving under the influence of alcohol, please do not absolute. Attention and judgment  
is dull and drink,

Doing so can cause unexpected accident. In addition, in-drowsy drugs

Please refrain from driving and I also have.

Or use the mobile phone while driving, etc. Please do not adjust the device. The state  
of the surrounding

Attention to such 況 becomes insufficient, is very dangerous. Other than the hands-free  
car phone

Be used while driving and mobile phones is prohibited by law.

## When the children are put

Please do not leave the children in the car. Heat stroke become hot car  
Becomes dehydrated and can lead to death in the worst case.

In addition, the children will operate the unit in the car, or sandwiched between the  
glass and door, writer,

Such as flares or burns, move the device operation, the worst by the unexpected accident

There is the danger that could lead to death if.

If you put a child in your car, and precautions in order to ensure the safety of children

Installing the child seat and a summary of the "Installing a car seat"

(→ P. 94Please read).

## Warranty and Inspection

For assurance and inspection and maintenance are described in the "Maintenance Notes"  
separate

So, please read in conjunction.

Routine inspection and maintenance and periodic inspection and maintenance, please  
conducted at your own risk.(Law

Have been required by law.)

## Symbols used in this document

Warning, caution, knowledge

 Warning

If you do not observe that it is imperative described in this section, or life-threatening, serious  
May lead to injury. Or to avoid the danger to the people of your own and the surrounding  
Please read to or reduced.

 Caution

If you do not observe that it is imperative described in this section, failure or damage of your car and equipment  
May lead to fear and can not be secured, the correct performance.

 Knowledge


That you should know how to work outside explanation or description of the function, you need to know  
We explained that the useful and.

For display in the illustrations



Safety symbol

"That should not be" "Please do not like this" "Such a thing  
Please do not cause" Represents the mean.

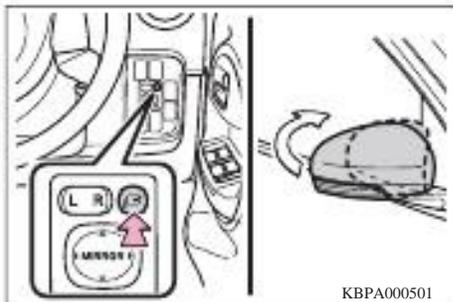

Arrow indicating the operation



Operations such as the switch (press and rotate)  
Shows.




Shows (such as opening the lid) the operation of the post-operation  
The.

<p>1-1. Handling of the key Key..... 18</p> <p>1-2. How to open and close the door, How to lock Key-free system..... 20 Wireless remote control..... 27 Door (front door, Rear door)..... 30 Backdoor 33 .....</p> <p>1-3. Seat, handle, How to adjust the mirror Front seat 37 .....</p> <p>Rear seat 39 .....</p> <p>Headrest 49 .....</p> <p>Seat belt 51 .....</p> <p>Handle..... 59</p> <p>Inner mirror 60 .....</p> <p>Door mirror 61 .....</p>	<p>1-4. Opening the glass door, Closing Power windows..... 64</p> <p>1-5. How refueling Opening the filler neck..... 68</p> <p>1-6. Anti-theft system Engine immobilizer System..... 72</p> <p>1-7. For Your Safety Correct driving posture..... 73 SRS Air bag..... 75 Only child seat..... 84 Child seat Mounting of..... 94</p>
---	--

# Key

You will be given the following keys to our customers.

▶ Vehicles equipped with key-free system

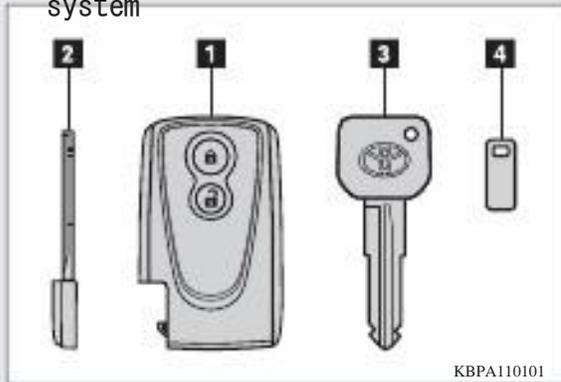

**1** Electronic key card


- Operation of the key-free system (→ P. 20)
- Operation of the wireless feature (→ P. 27)

**2** Mechanical key

**3** Main key

**4** Key number plate

▶ Vehicles equipped with wireless door lock

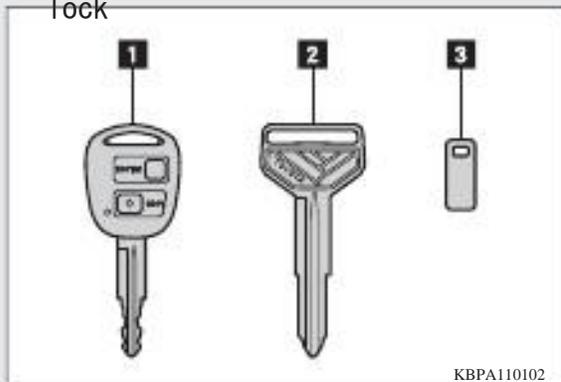


**1** Main key

Operation of the wireless feature (the → P. 27)

**2** Spare key

**3** Key number plate


▶ Vehicles equipped with non-wireless door lock

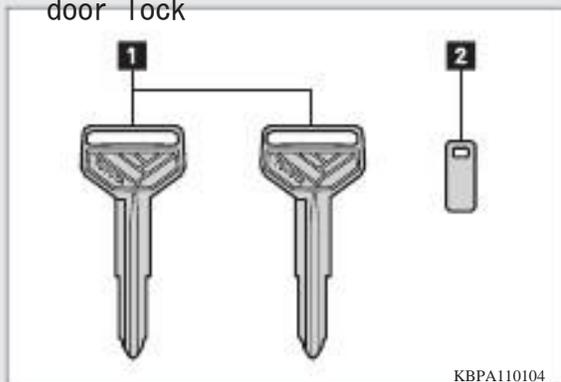

**1** Master key (Two Sheets)

**2** Key number plate

### To use the mechanical key

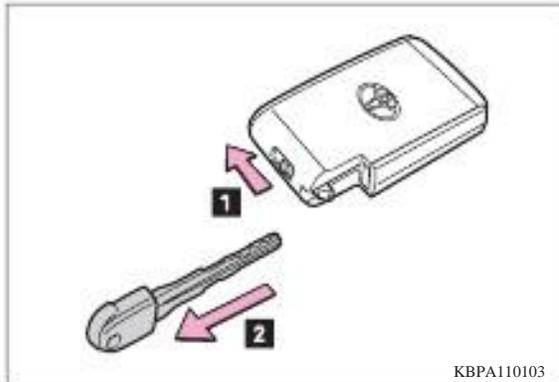

To remove the mechanical key,  
Remove the key and slide the release knob  
Issue than

After use, return to the original, electronic  
key card  
Please carry on with. E-Car

Keefe has expired or when the battery of Doki

If you do not Lie system is operating

correctly.  
Have, you need the mechanical key

Be. (→ P. 295)

One

Luck  
Transl  
The  
Ru  
Before  
To

### Knowledge

#### ■ Key number plate

Please keep (such as in a purse) in a safe place other than in the car. The key event  
of disputes  
If deleted, a new key from the key fabrication and the rest of the key numbers in the  
Toyota dealers  
You can. (→ P. 294)

#### ■ When riding in the aircraft

To aircraft electronic key card (vehicles equipped with key-free system), the main key  
(wireless  
If you bring in) vehicles equipped with Sudoarokku, do not press the switch of a key in  
the aircraft.  
Please do not. Also, even when a store such as a bag, easily switch is pressed.

Please keep so that it does not. Radio waves will be outgoing when the switch is  
pressed, aviation  
There is a risk of causing a hindrance to the operation  
of the machine.


### ⚠ Caution

#### ■ To prevent failure of key

- Exposed in places where high temperatures or shock to the key or, in direct sunlight,  
wet  
Please do not re-
- Key stuck to the surface or close to what some of the magnetic key, to block  
electromagnetic waves  
Please do not give.

## Key free system \*

The following operations can be performed simply by the mobile electronic key card, such as pocket You. (Be sure to carry a driver, please.)

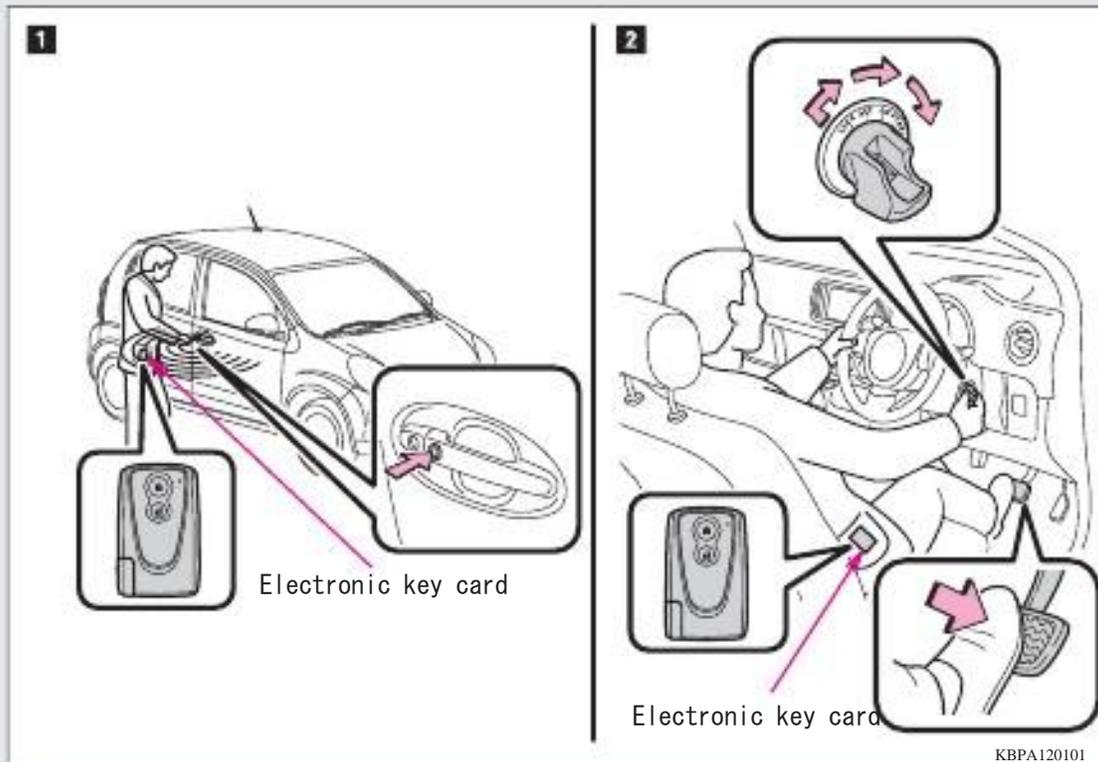


**1** Locking-unlocking of the door (→ P. 21)

**2** Starting the engine (→ P. 114)

\* :Different equipment and optional equipment such as vehicle type

Locking-unlocking of the door (front door handle only)

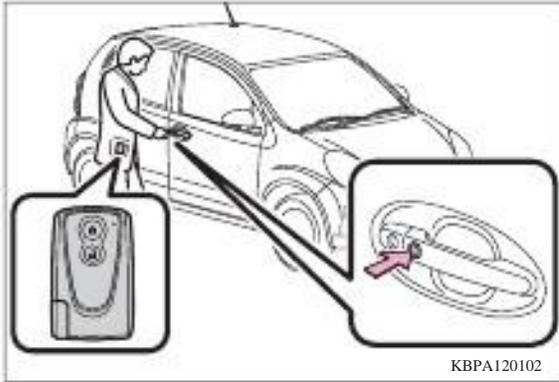


To lock-unlock switch is pressed

One

Lock  
Transl  
The  
Ru  
Before  
To


Operating range and the position of the antenna

■ Position of an antenna

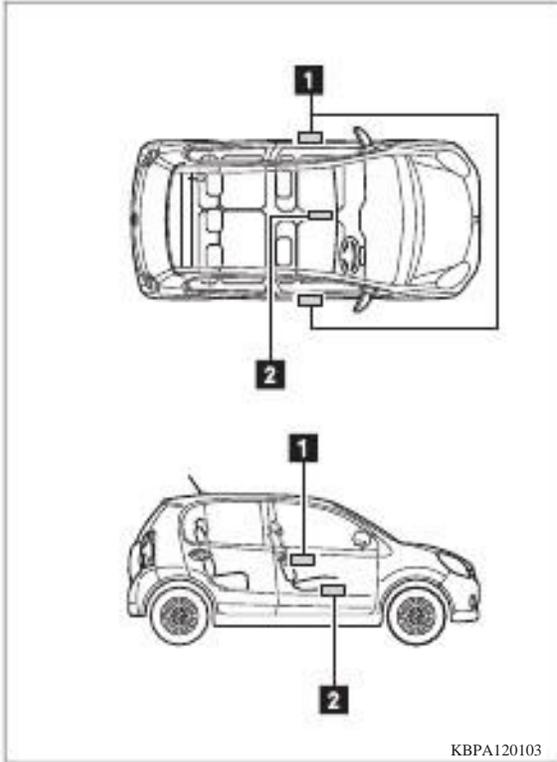

- 1 Antenna outside the car
- 2 Car antenna

■ (Detection area of electronic key card) operating range

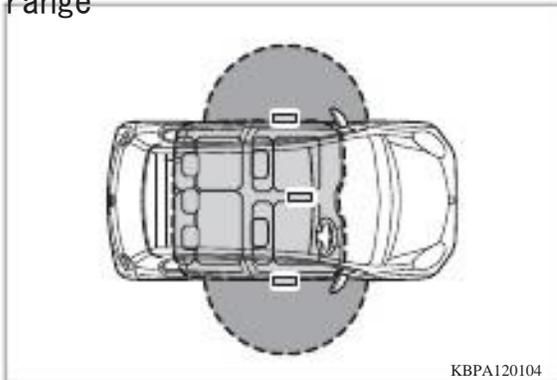

- :When locking the door-unlocking  
From around the door handle about each 70 cm Mobile electronic key card in less than Will work if you have band. Electronic key card has been detected ( The door works only file. )
- :When the engine is started  
Carrying the electronic key card in the car Will work if you are.

 Knowledge

### ■ Actuation signal

Will be informed by flashing lights flashing very. Locking (the One Times, unlocked Two Times)

### ■ Situation that may function does not work properly

Key-free system is using a weak radio. In such a case the following e-

Interfere with communication between the card and the vehicle key, key-free system and wireless remote is not working correctly. How to deal with (→ P. 295)

- When the battery of the electronic key card is depleted

- TV tower and power plants, gas stations, broadcasting station, close to a large display,

Some, such as airports, where you want to occur when strong radio waves

- And have your radio and mobile phone wireless communication equipment, such as cordless phones

- Or when in contact with the electronic key card is made of metal, has been covered or

- When there is close to a plurality of electronic key card

- Or use with products that originate at the same time mobile phone radio waves, such as: electronic key-card

When you are for

- Electronic key card of other cars

- Wireless remote control radio wave

- Personal computer

- When the film including a metal that is attached to the rear glass

One

Lock  
Transl  
The  
Ru  
Before  
To

■ Power saving function

For the protection of vehicle batteries and battery of electronic key card, in the following situations: Keefe Stop the Lee system.

- Ten Did not use the key-free system days or more
- Outside of the vehicle about 70cm An electronic key card within Five Was allowed to stand more than a minute  
If you do any of the following, key-free system will be restored.
- To be locked with a lock switch on the door handle
- Unlocking locked-in wireless feature (the → P. 27)
- Mechanical key unlocking-locking, in the main key (→ P. 295)

■ About the battery life

- Standard battery life is One~Two Years. Even if you do not use the electronic key-card battery ( Is exhausted. Unable to work or wireless capabilities) and key-free system, If the report or to narrow operating range, can cause a battery is low Be. Please replace the batteries with new ones when the (battery is weak. (→ P. 254)

- In order to prevent significant consumption of the battery, that generates a magnetic field of electrical appliances such as the following: One m Please do not put the electronic key card within.

- TV
- Personal computer
- Mobile phones and cordless phone while charging
- Desk lamp

■ For the correct operation of system

Please let me always be active on the mobile electronic key card. In addition, the operation from outside the vehicle. If you are, please do not get too close to the vehicle electronic key card.

Depending on how the position and have electronic key card at the time of operation, electronic key card is correct. Without being detected, the system may not work properly. Accidentally rang the alarm ( Or, you may prevent function key does not work collapsed. )

■ Keep in mind that

- Even (in the detection area) within the operating range, if the electronic key card is similar to the following:

Otherwise, it may not work properly.

- Close to the door handle glass door and electronic key card at the time of unlocking of the door-locking

- On the instrument panel and floor electronic card key when the engine is started

If on, was placed in the lower box, such as in a center or

- Within the operating range if the electronic key card, than people who are carrying the electronic key-card
- You can also unlock locked-out.

- Electronic key card when there is close to the glass door in the exterior, the engine started

You may motion becomes possible.

- Locked with a wireless features such as electronic key card when there is close to the vehicle

If you do, you may not be able to unlock by key-free system.

(The return and unlocking using the wireless feature.)

- Steep approach and switch operation within the operating range of the antenna to the exterior is not unlocking

You may. In that case, press the switch again, that it has been unlocked

Please pull the door handle from the Check.

■ When not driving long-term

To prevent theft, electronic key card from the vehicle 2 m Please keep away or more.

■ Security features of the unlocking operation

After the unlocking operation, approximately 30 seconds because of the anti-theft, auto

will be locked automatically.

■ For information about viewing warnings and warning sound

In order to prevent unexpected accidents or theft, such as erroneous operation by, or in the car beeps, warning

You may have light or warning lights. If the warning light is lit, depending on the situation

Please take appropriate actions Te. (→ P. 275)

One

Lock  
Transl  
The  
Ru  
Before  
To

And Workarounds situation where an alarm will sound only is as follows.

Warning sound	Situation	How to deal
From car "Peak, Peak" And continues to Ru	One of the open door Switch engine in the idle state The "ACC" You ("ACC" "LOCK" Open the door of either the t Had)	The engine is switched After you, the driver's seat Please close the door.

■ When the key-free system is not working correctly

- Locking the door, unlocking: → P. 295
- Engine start-up: → P. 295

■ When the battery has expired

□ II. 254

■ Function that can be set in the shop

You can operate a non-key-free system.

List (customized □ II. 313)

 Warning

■ Warning about the effects on radio waves


- That is mounted in the implantable defibrillator and implantable cardiac pacemaker  
Single edged knife, exterior antenna car antenna (→ P. 22 About) 22 cm Close to the  
Please do not accepted. Radio waves and implantable cardiac pacemaker  
May affect the operation of the implantable defibrillator.
- Non-medical electrical defibrillator implantable cardiac pacemakers and implantable  
If you are using the equipment, electrical equipment manufacturers about the impact  
of radio waves for medical use. Etc. Please check in advance. Affect the operation of electrical equipment for  
medical use by radio waves.  
There is injury or death.

You can also key in the non-free operating system. Your dealer for details Toyota  
Please contact.

## Wireless remote control \*

You can unlock the door-locking.


- ▶ Vehicles equipped with key-free system

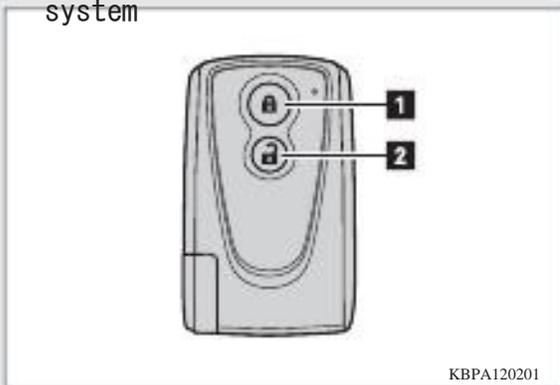

**1** Locking all doors

**2** Unlock all doors

- ▶ Vehicles equipped with wireless door lock

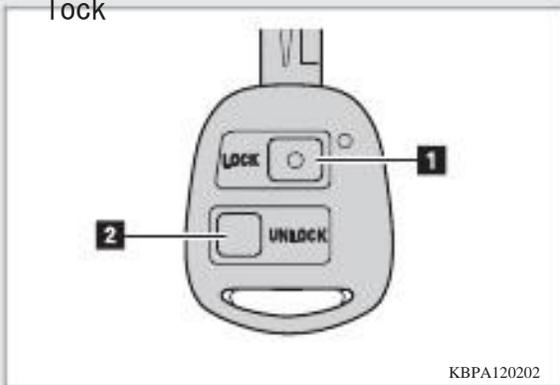

**1** Locking all doors

**2** Unlock all doors

One

Lock  
Transl  
The  
Ru  
Before  
To

\* :Different equipment and optional equipment such as vehicle type

## Knowledge

### ■ Actuation signal

Will be informed by flashing lights flashing very. Locking (the One Times, unlocked Two Times)

### ■ Situation that may function does not work properly

▶ Vehicles equipped with key-free system  
□ II. 23

▶ Vehicles equipped with wireless door lock

The following cases, it may feature wireless does not work properly.

● Strong radio waves or television tower and power plants, gas stations, broadcasters, such as airports close to Electronic equipment that generates radio equipment which generates noise, such as audio equipment, radio formula When the vessel, and large display

● And have your radio and mobile phone wireless communication equipment, such as cordless phones

● Or when in contact with the wireless key is made of metal, are covered

● When more than one key is nearby wireless

● If you are using a wireless radio wave equation near key

● When you are placed close to electrical appliances such as a personal computer the wireless key

### ■ About the battery life

- ▶ Vehicles equipped with key-free system
  - II. 24

- ▶ Vehicles equipped with wireless door lock

Standard battery life is One ~ Two Years. Battery without using the function (wireless Is exhausted. If the feature) wireless is not working, can be battery is low

You may. Please replace the batteries with new ones when the battery is weak. (→ P. 255)

### ■ Security features of the unlocking operation

- ▶ Vehicles equipped with key-free system
  - II. 25

- ▶ Vehicles equipped with wireless door lock

After the unlocking operation, approximately 30 seconds because of the anti-theft, auto will be locked

### ■ When the electronic key card does not work properly (vehicles equipped with key-free system)

- II. 295

### ■ When the battery runs out (vehicles equipped with wireless door lock)

- II. 255

One

 Lock  
Transl  
The  
Ru  
Before  
To

## 1-2. How to open and close the door, how to lock Door (front door, rear door)

Function keys and wireless systems \* free, key, door lock lever

You can use the locking-unlocking.

### ■Key-free system\*

□ П. 21

### ■The wireless feature\*


□ П. 27

### ■Key

#### ▶ Vehicles equipped with key-free

system  
You can unlock the door-locking mechanical key and using the main key.  
(→ P. 295)

#### ▶ Vehicles equipped with non-key-free system

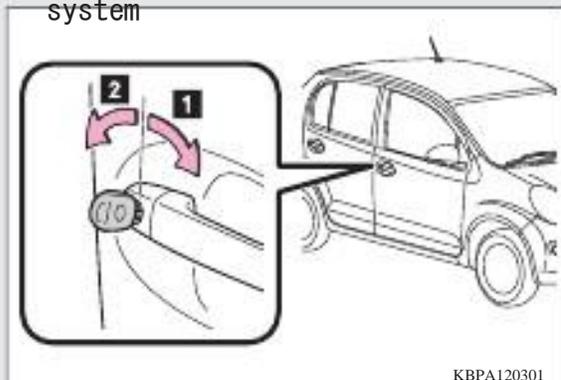


**1** Locking

**2** Unlocking

(Or locked) unlock the door of the driver's seat  
Then, the unlocking all doors (also  
Are) locking.

### ■Lever door lock

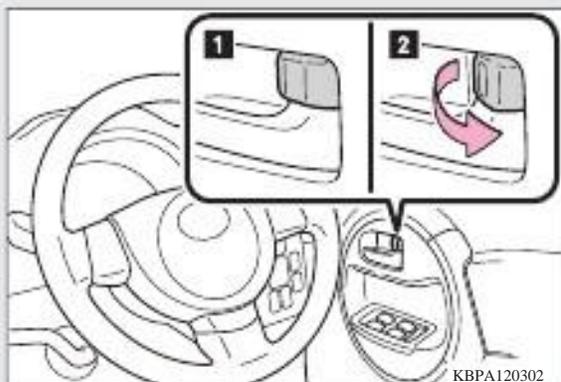

**1** Locking

**2** Unlocking

(Or locked) unlock the door of the driver's seat  
Then, the unlocking all doors (also  
Are) locking.

\* :


---

Proced One

Proced Two

---

One

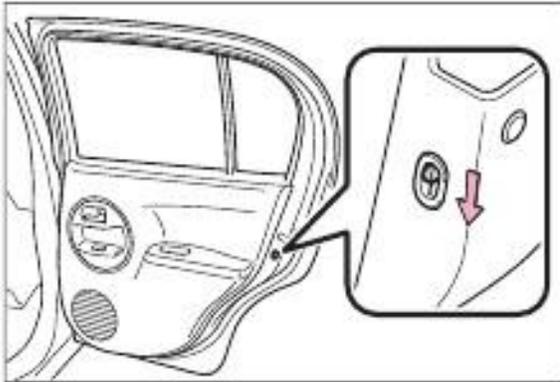

Luck  
The  
Ru  
Before  
To

 Knowledge

- - You.
  - ▶
  - Or
  - 
  - ▶
  - 
  - 
  - 
  -

- 

- 

- 



### Warning

- 

- 

- 

- 

- 

- 

- 

Please.

# Backdoor

■\*

■\*


■Key  
30

■  
30

One

Luck

The  
Ru  
Before  
To

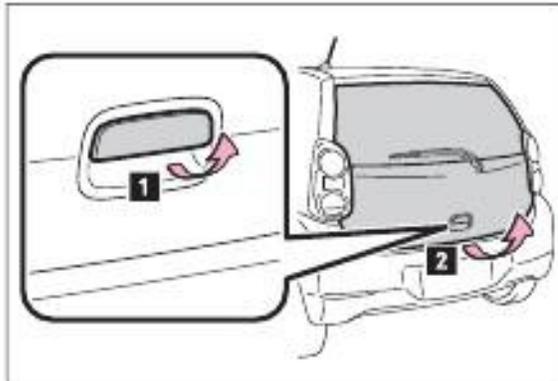


1

2 Raise

 Knowledge

■

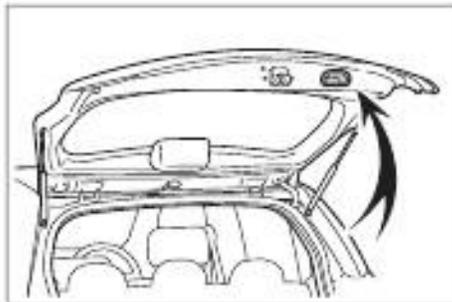

The stomach.

\*



## Warning



The Lee.

The stomach.



 Warning

■

●

Be.

●

●

Bloom.

●



●

The Lee.

May result.



●

●

One

Luck

The  
Ru  
Before  
To



## Warning



Please do not.

You may not want.

- If you install a heavy object such as a carrier to the back door, the door to fall open after You may beat, hands, head, neck and pinch. Accessories to the back door Installation of equipment, it is recommended that you use genuine Toyota.




## Caution

### ■ Damper Stay for the back door

Attach to the back door back door back door damper stays to support the Has been kicked.

Observe the following: Kuda in order to prevent damage or malfunction of the back door Damper Stay

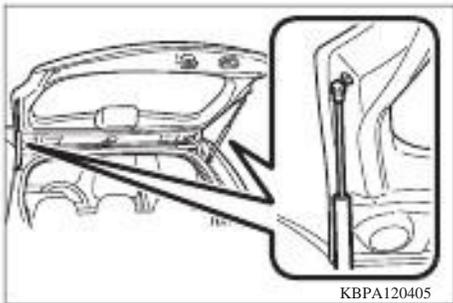

- Strip, such as adhesive vinyl sticker Attached to the rod part of the stay (stick part) the foreign body
- Not let
- Do not touch the rod portion, such as gloves
- Access of non-genuine Toyota on the back door Without supplies Sally
- Or put my hand on the stay, or a force in the transverse direction Not only can

## Front seat



KBPA130101

- 1** Before and after the position adjustment.
- 2** Reclining adjustment.
- 3** Adjust the top and bottom of the entire sheet.\*  
(Driver's seat only)

One


Luck  
Transl  
The  
Ru  
Before  
To

 **Caution**

- When adjusting the front and rear position (vehicles equipped with front bench seat)  
Please be sure to accommodate the center lower box. Center is Loabox seat  
Upon device can be damaged. (→ P. 201)

\* :Different equipment and optional equipment such as vehicle type

### Active head restraints \*

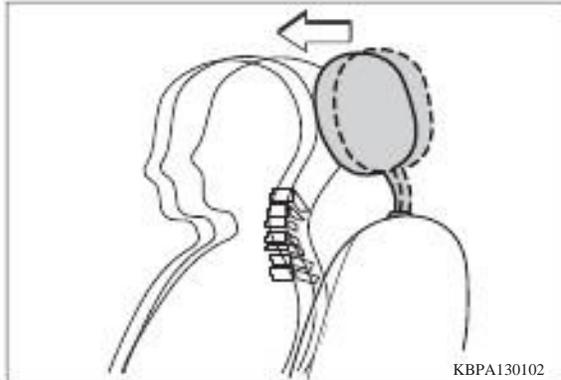

By the impact of the collision, the occupant's head is pushed forward a little bit. This will contribute to reducing injury.

### Knowledge

#### Active headrest

That the active headrest to operate even if the impact to the seat back is weak there is.

### Warning

#### For seat adjustment

- Please be careful not to hit the seat occupant and luggage.
- Please do not tilt the backrest more than necessary.


Body dive under the seat belt when the accident, not subjected to strong pressure to the abdomen, such as the abdomen, it may cause serious personal injuries serious life-threatening degree.

- After adjusting sheet, please ensure that the sheets are securely fixed.

\* :Different equipment and optional equipment such as vehicle type

## Rear seat

► Sheet credit available  
on earth

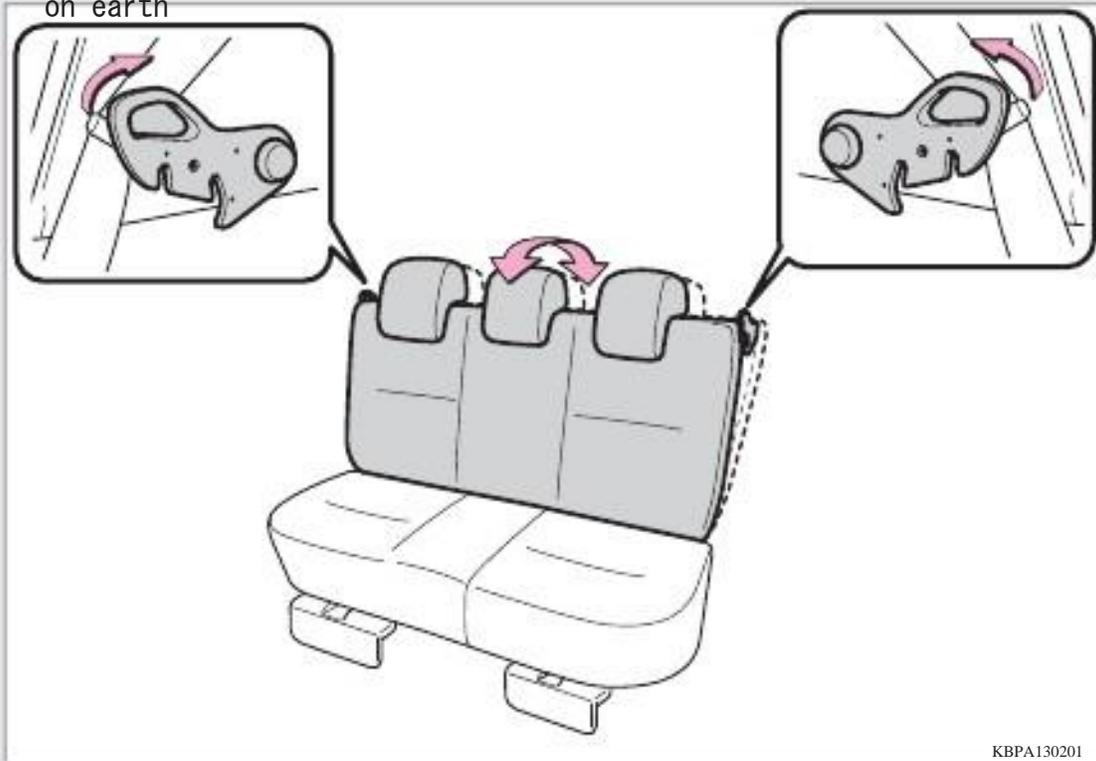


### Reclining adjustment

Adjust the seat back and pull the hook at the same time.

One

Luck  
Transl  
The  
Ru  
Before  
To

► Sheet credit can be divided

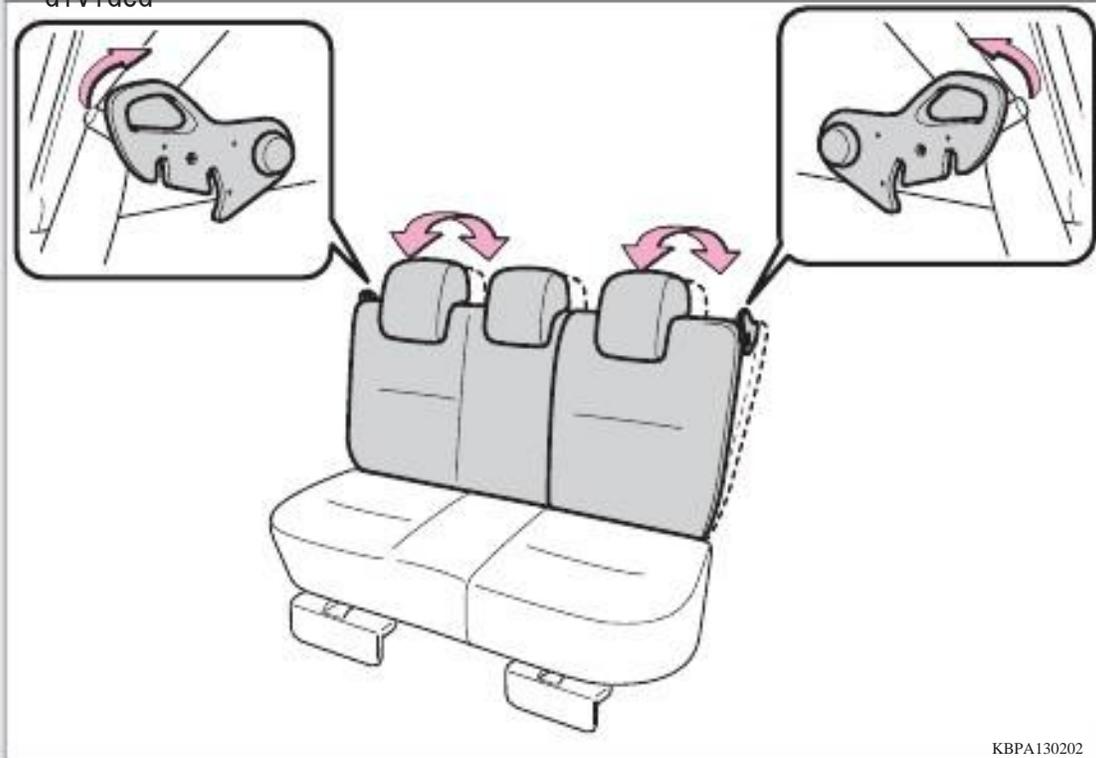

### Reclining adjustment


Adjust the hook by pulling the seat back.

Ahead of the rear seat

■ Before defeat in front of rear seat

Procedure To avoid hitting the seat cushion reviewed before and after the front seat Adjust position, a reclining position. (→ P. 37)

Procedure To store the seat belt rear middle seat. (→ P. 53)

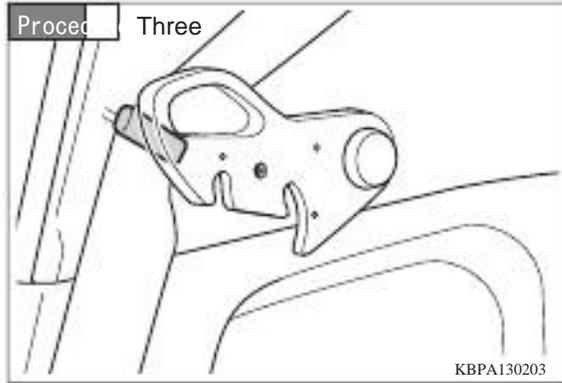


Re Ya System — port Vector The default The Vector The default Ha Application Sandwich to guard.

One


Luck  
Transl  
The  
Ru  
Before  
To

■When the rear seat is down before

▶ Sheet credit available

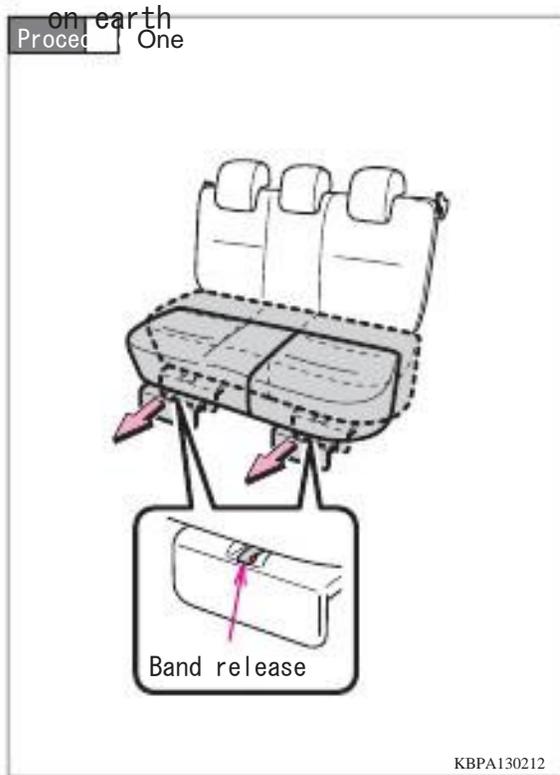

Pull the band released, Shitoku~tsu  
Withdraw prior to the application.

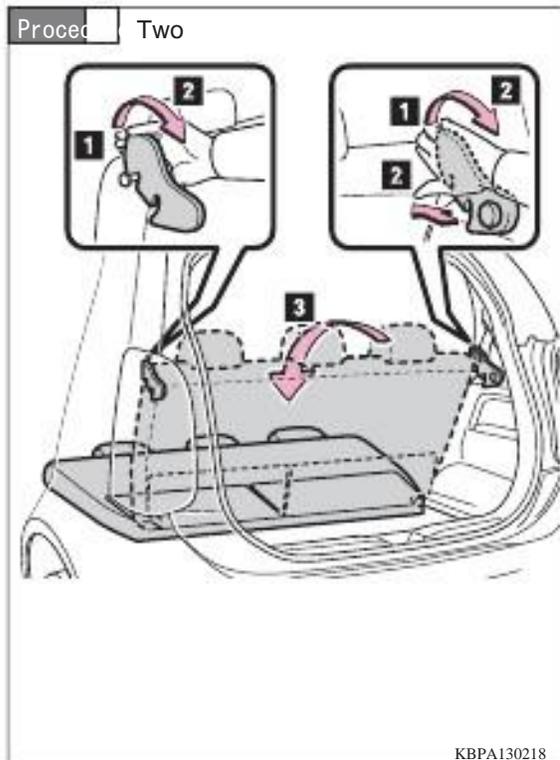

Be operated simultaneously with both hands  
from the rear vehicle

File.

1 Finger at the front of the seat back  
hook


Make a

2 The upper hook to pull the seat back

The stomach, the backrest forward with  
your thumb

3 Defeat the backrest forward


▶ Sheet credit can be divided

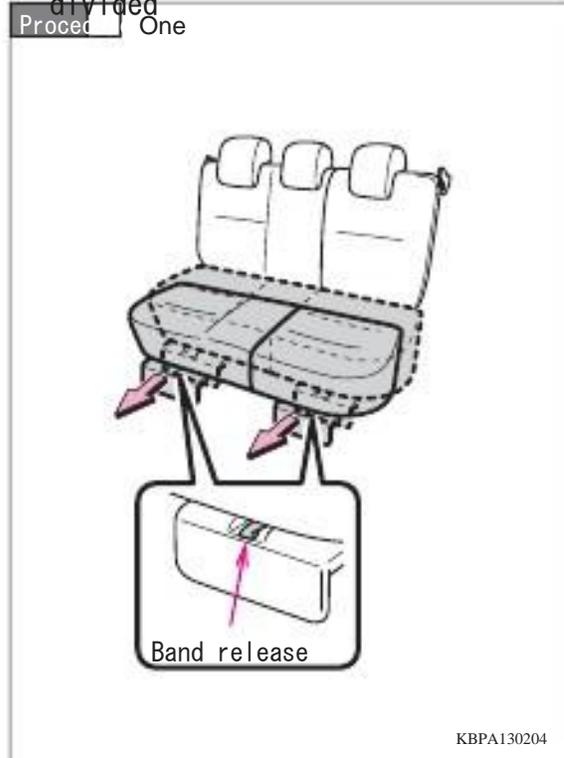

Pull the band released, Shitoku~tsu  
Withdraw prior to the application.

One


Luck  
Transl  
The  
Ru  
Before  
To

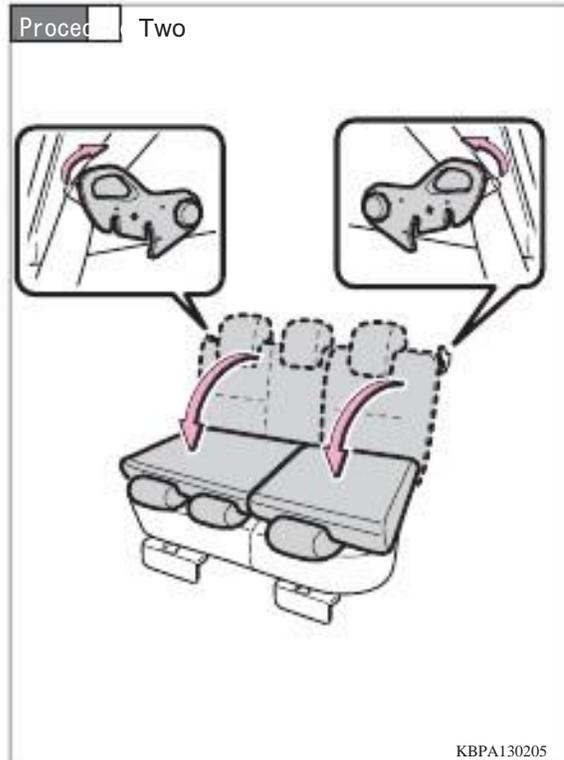


While pulling the seat back hook  
Defeat in front of the backrest.

■When you replace the rear seat is

▶ Sheet credit available

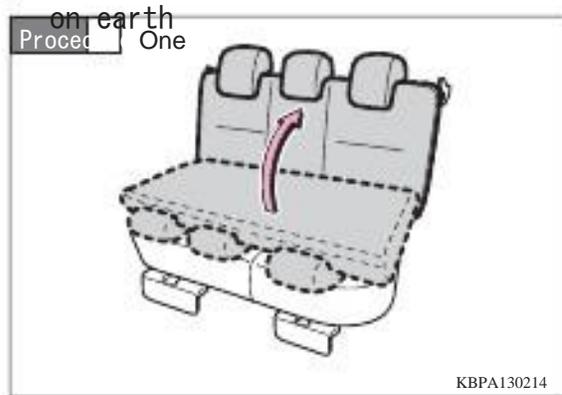


Raise the backrest, fixed.

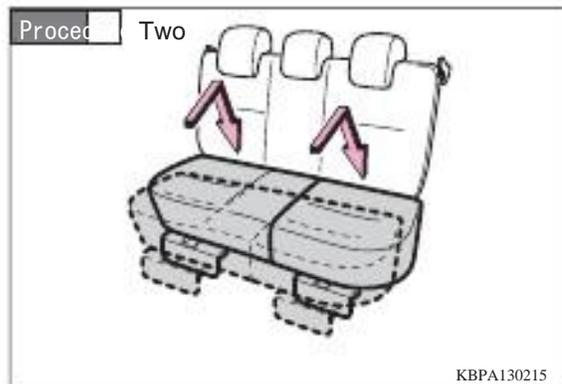


Under the rear seat cushion from the latent  
For cell-incorporated back to Lee.

Proced Remove the rear seat belt from the belt hanger.

► Sheet credit can be divided

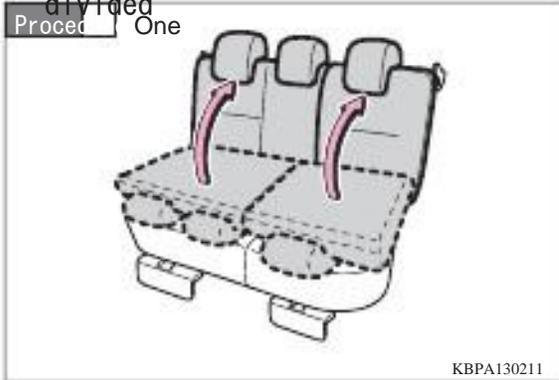

Raise the backrest, fixed.

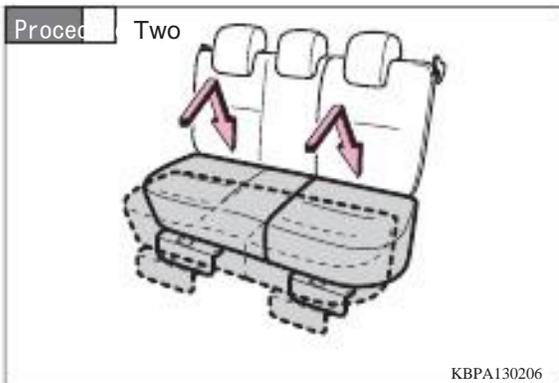

Under the rear seat cushion from the latent  
For cell-incorporated back to Lee.

Procedure Three Remove the rear seat belt from the belt hanger.

One

Luck  
Transl  
The  
Ru  
Before  
To

 Warning

■ When the rear seat is ahead of schedule

Please observe the following.

If you do not observe imperative, serious or lasting injury, the worst case lead to death is a fear.

- If you do not operate while driving
- Put in place to ensure the parking brake is flat, the shift lever P To



- Before you pull out only the seat cushion  
Do not sit in one state

- Not traveling with another person on the rear seat and luggage room was ahead of schedule
- Be careful not to go into the luggage room when the child

■ For reclining adjustment

Please do not tilt the backrest more than necessary.

Body dive under the seat belt when the accident, such as the abdomen subjected to strong pressure to Danger it may cause serious personal injuries such as severe life-threatening.

■ For seat back hook

When working with the seat back hook, make sure to be careful not to pinch your fingers or hands.

 **Warning**

■After returning to its original position rear seat is

Please observe the following.

If you do not observe imperative, serious or lasting injury, the worst case lead to death  
There is a fear.

- Lightly shake back and forth to make sure that the sheet is fixed to ensure
- To check whether there have been sandwiched between the seat belt under the seat.

One


Luck  
Transl  
The  
Ru  
Before  
To

 **Caution**

■When you operate the rear seat is

Please observe the following things.


If you do not imperative talisman, or cause injury to a passenger, baggage damage to the

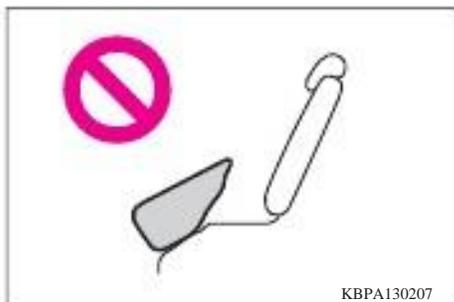

- Lift the seat cushion to remain

Please do not.


Seat cushion has not been fixed  
First fear, suddenly move the seat cushion  
There is. In addition, damage to your seat  
The rising it.

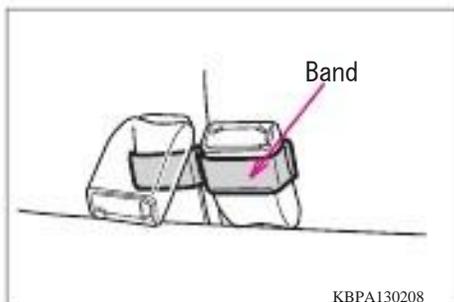

- Rear seat belt buckle, band

Always make sure that they are held at  
Dasai.


 Caution

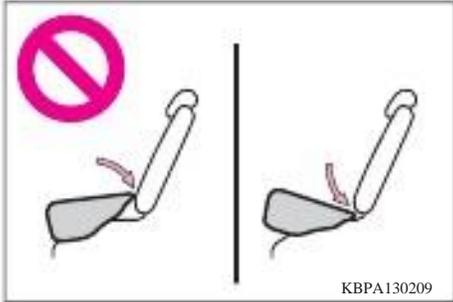

- Pressing from above the rear end of the seat cushion. Please do not wear. Oppression from above. When, to secure the seat cushion. Can not be.

- When returning the seat cushion, verify that there is nothing on the floor, and those. Please do not insert the buckle of the seat belt. And tucking, The seat cushion may no longer be drawn.


- When I pulled out the seat cushion is no longer

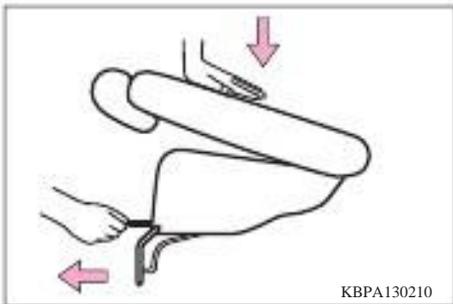

- Defeated in the state before the backrest, backrest. Press firmly on the upper side of, I pull the band released. When you release the hand while, from the backrest, seat. You can pull out the cushion. Even if you do not withdraw it, Toyota sales. Please contact the shop.

## Headrest \*

### ► Front seat \*

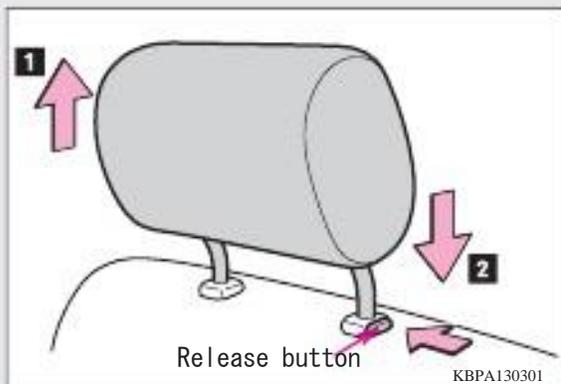


**1** Increase

**2** Lower

When lowering, press the release button  
And then work your way.

### ► Rear seat

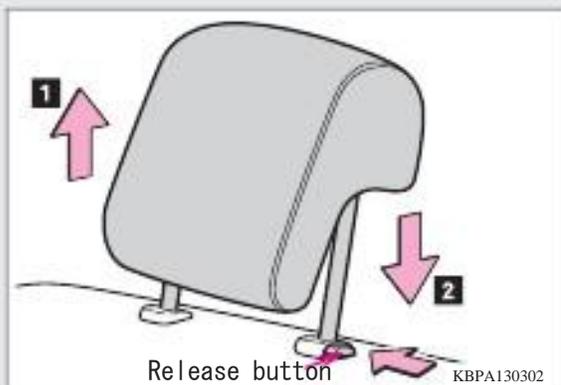

**1** Increase

**2** Lower

When lowering, press the release button  
And then work your way.


One

Luck  
Transl  
The  
Ru  
Before  
To

\* :Different equipment and optional equipment such as vehicle type


 Knowledge

■ For removal of headrest

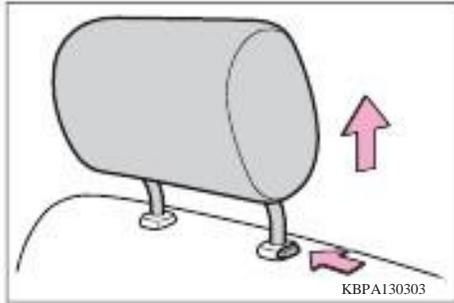

While pressing the release button and remove Be.

■ For the height of the front headrests

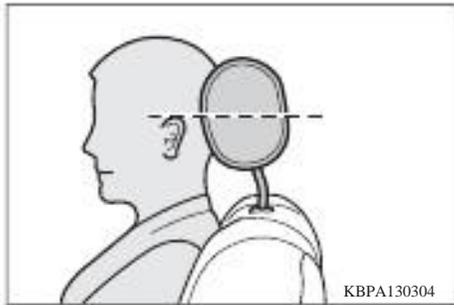

Market of both ears always the center of the headrest. Please adjust so that the area on the N The stomach.

However, the metropolitan center of the headrest in both ears. If you do not Doka, the market the headrest Please use the N in the down position.

■ For information about using the rear seat headrests

When using, please step up one position from the storage position.

 Warning

■ About headrest

Please observe the following.

If you do not observe imperative, serious or lasting injury, your death will lead to the worst case that it has.

- Headrest, use a tailor-made for each sheet
- Adjusted to the correct position headrest
- After adjusting the headrest, make sure that is fixed
- Do not remove the headrest while driving

# Seat belt


All occupants should wear a seat belt correctly before driving  
The stomach.

## ■ To wear properly



- Sufficient to put the shoulder belt  
Or suffering from neck, shoulder As long as  
you keep, from  
Please then odd.
- Of the hip can be sure the waist belt  
Closely as possible to a lower position
- Adjust the backrest, causing the upper  
body  
Waist deep sit sit
- So that there is no twist

## ■ To sew, how to remove

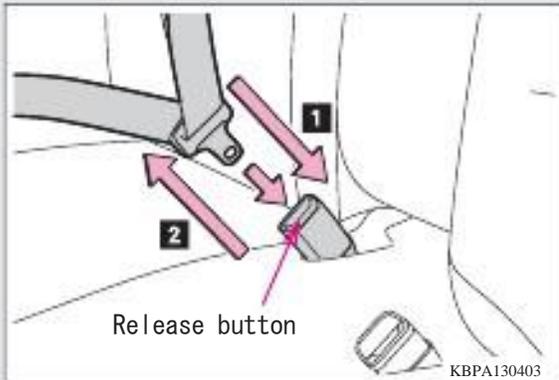

- 1** To secure the belt, the "Mosquito  
Chip" Until you hear and play  
By inserting the buckle at the  
door
- 2** To remove the belt is cleared  
Press the button

One


Luck  
Transl  
The  
Ru  
Before  
To

Center rear seat belt

■How to wear


The rear center seat, Two Using a single buckle Three Is-point seat belts.

To operate correctly, insert the correct position to ensure that the seat belt buckle Please press the jog dial.

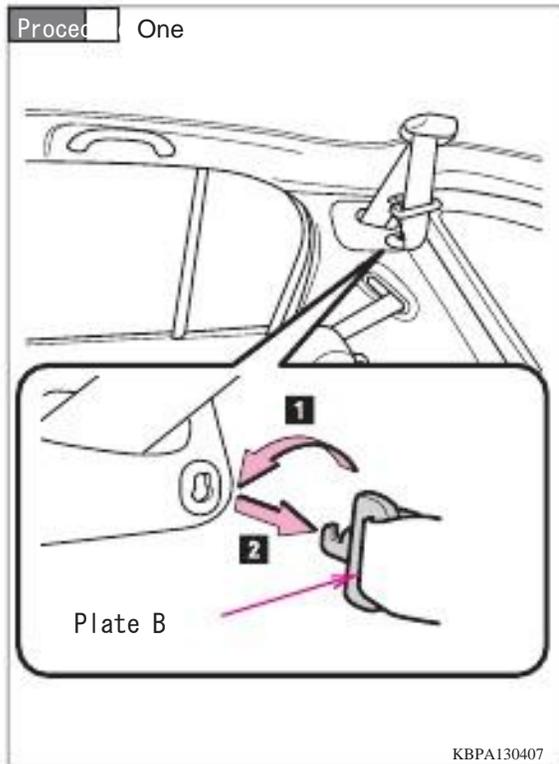


Pull out the seat belt.

- 1 Plate B Make a
- 2 Plate from the holder B Has the And then pull out the seat belt

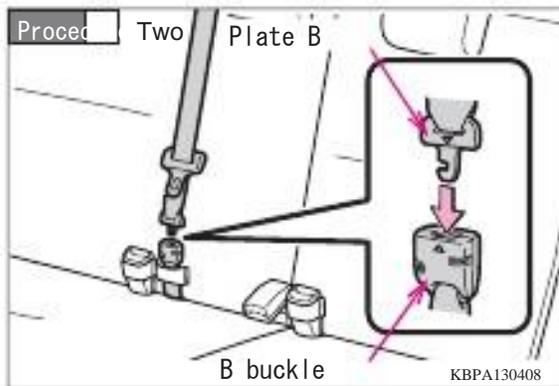

"Clicks into place"Plate until it clicks B Buckle B Insert to join To.

PlateB0f▼And buckleB0f▲Marr Align the clause.

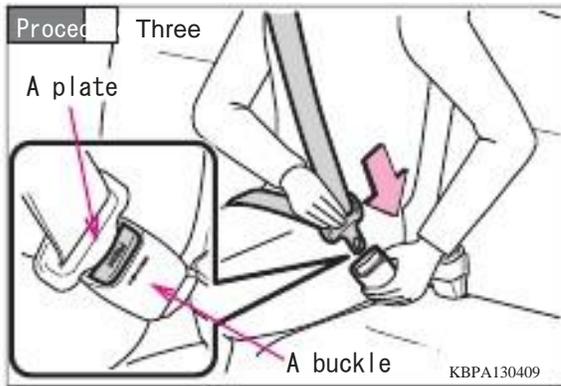


"Clicks into place" Plate until it clicks  
 A Buckle A Insert to, Bell  
 To secure the door.

One

Luck  
 Transl  
 the  
 Ru  
 Befor  
 To

■ Separation and how to store

Center rear seat belt, when required, such as if defeat in front of rear seat  
 Separation and can be stored to. For safety reasons, when you separate the belt  
 , Please store the plate must be in place.

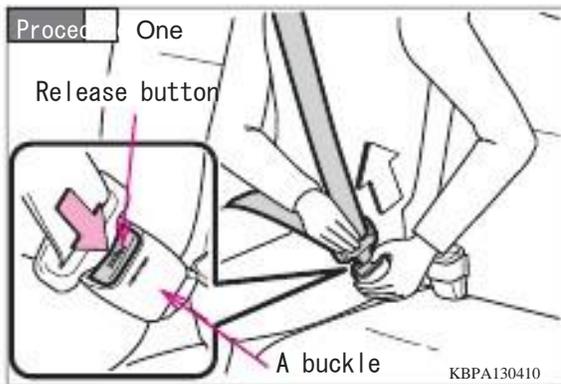

Buckle A Press the release button of  
 Te, to release the belt.


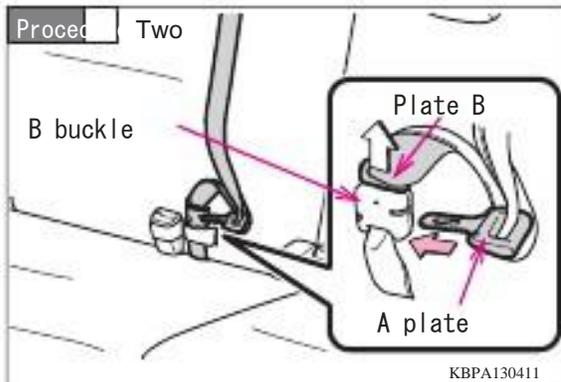


Plate A Buckles, etc. B Of  
 Press the button, plate B Separating the  
 To.

To separate the seat belt when the bell  
 Rewinding slowly while maintaining the door  
 You.

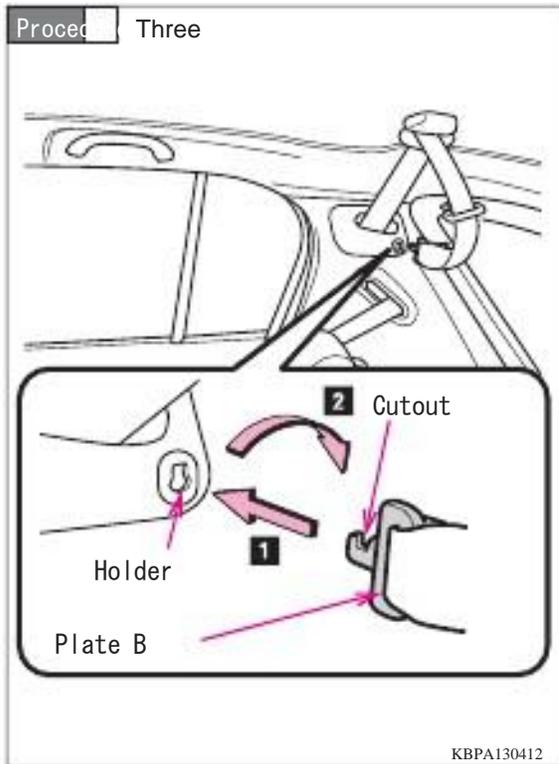

To store the seat belt.

- 1 And on the cutout, plate B By inserting the holder
- 2 Plate B Defeat the orientation of the Figure After fixing, twist the seat belt Please confirm that you are not.

### Seat belt pretensioners (front seats)



When it receives a strong collision from the front, Applied by draw the seat belt Effect to ensure the appropriate occupant restraint. Weak or when the impact from the front, side and would When the shock from the white does not work You may.

## Knowledge

### ■How to remove the seat belt lock

Belt will be locked when there was a sudden stop or impact. Or down before the body of a sudden  
 You may also be locked quickly pulled out a seat belt. Belt at a time  
 Loosen from pulling strongly, if you move slowly, you can pull out the belt  
 Be.

### ■Use of seat belts for children

This car seat belts, enough to wear seat belt, the physique of adult  
 It is designed for people who have.

- If young children can not wear seat belt at the position is correct, your child  
 Please use the child seat that matches the body between.(→ P. 94)
- If the child's seat belt can be worn in the correct position, the seat belt  
 Please follow the way of wear.(→ P. 51)

### ■For seat belt pre-tensioners

Seat belt pre-tensioners, but it can be run only once. Such as pile-ups  
 Even if the was shocked continuously, after working at a time, then working in the  
 collision of does not.

One

 Luck  
 Transl  
 The  
 Ru  
 Before  
 To

**Warning**

To avoid personal injury during an accident or sudden braking, Please observe the following.

If you do not observe imperative, serious or lasting injury, late lead to the death the worst case

■ For the wearing of seat belts

- When riding in the car to wear a seat belt all

- To wear a seat belt properly

- Is used in a seat belt for each person a

Do not use more than one person in the belt of one child

- Children are to wear a seat belt to sit on rear seat


- Not tilt the backrest more than

necessary  
Raise the upper body, sit deep in the seat

- Do not wear the belt under the arm through the shoulder

- Waist belt should be worn snug against the position as low as possible

■ If those who are pregnant women and disease

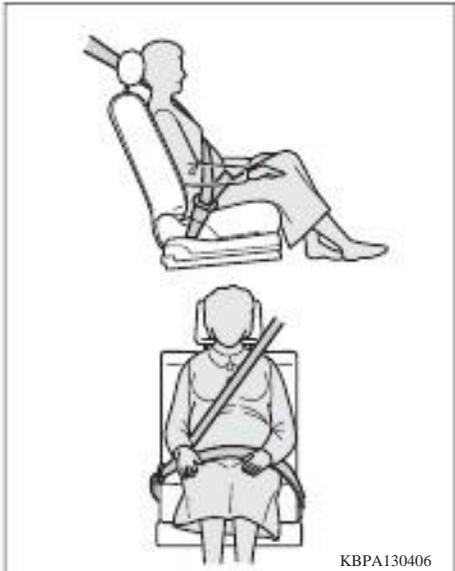

On the check, properly wearing a doctor cautions Please then for. (→ P. 51)

Pregnant women also, how to wear the same as normal As the same, as much as possible of the hip waist belt

Of swelling of the stomach to take a lower position Please wear down. In addition, the shoulder belt Is reliably through the shoulder, to avoid swelling of the stomach

Please take the chest to wear as Te.

If you do not wear the belt properly, conflict When, for example, is not only mother to fetus Received a serious injury or, in the worst case death

There is a risk.

**Warning**

## ■ If people with disease

On the check, please be aware of the precautions to properly wear a

## ■ When children are put

Please do not Asobase children in seat belts. Belt is wrapped around the neck with the

event. If you have, such as suffocation or serious injuries ranging, the worst case can lead to death there.

Becomes accidentally into such a state, can not be removed even if the buckle, a pair of scissors connect the seat belt, etc..

## ■ With pre-tensioner seat belt

When activated seat belt pretensioner SRS Air bag/Puritensho

Toner warning light will flash. In that case, it is possible to re-use the seat belt

Because it does not, please be sure to replace with Toyota

## ■ About seat belt failure, damage

● Seat belts and plates, such as the buckles, the damage to the door, such as sheets and sandwich Please do not.

● When the seat belt is damaged sheet is used to repair the seat belt Please do not.

● That are plugged in securely to the plate buckles, seat belt is not twisted Please check the medicine. If you do not mate well is Toyota dealers immediately Please contact.

● If you have been a serious accident, even if no obvious damage was observed, Sea Please replace the door, the seat belt.

● Installation of seat belts with pre-tensioners, removal, disassembly, and disposal , Please do not outside of Toyota dealers.

And treat improperly, it is no longer working properly, or extends to serious injuries, the worst case may lead to death.

One

Luck  
Transl  
The  
Ru  
Before  
To


**Warning**

■ Retractable seat belt for the separation



- When using a retractable seat belt separation, the plate must be B And buckle B Combine the Please then. Be used in the state that do not bind When, effective enough seat belt Without, serious or lasting injury, if the worst Can lead to death if.

- Equipped car seat can be split: With the rear seats down in front of left, center rear seat Please do not sit down. Because it can not fit the seat belt properly, that Seat belt can not be effective enough in some cases, such as the late, extends to serious injury or, it may lead to death in the worst case.

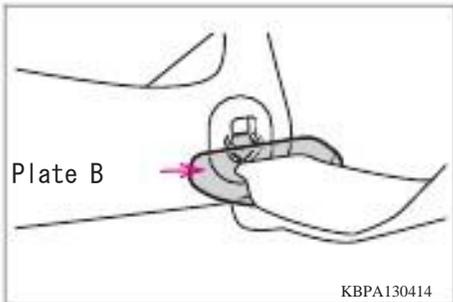

- When storing a retractable seat belt separation, the plate B Reliably inserted into the holder Included, Please fix. Properly stored If you do not, ran out into the plate while driving Show details for, such as injury to the crew hit the That it has.

## Handle


You can adjust to make it easier to operate the handle position.

Procedure One



Grasp the handle, lower the lever  
File.

Procedure Two

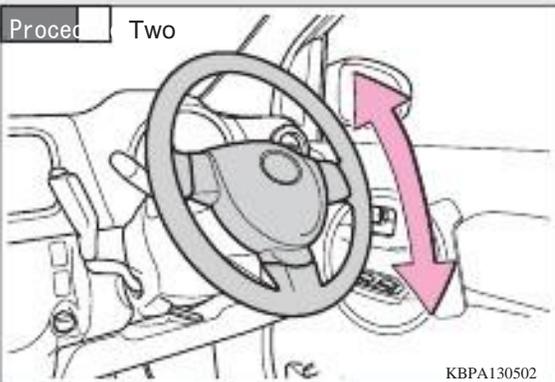

Move up and down the handle, the proper  
Position to do.

Once you have determined the position, lift  
the lever.  
Please fix the handle Te.

One

Luck  
Transl  
The  
Ru  
Before  
To

### Warning

#### ■ Warning while driving

While driving, please do not adjust the handle position.

There is a risk of such accidents lead to serious injuries operation error, and death.


#### ■ After you adjust the handle position

Please make sure that the handle is fixed securely.

Suddenly change the position of the steering wheel is fixed and is inadequate, leading  
to death or serious injury accidents.


## Inner mirror

When the dazzling light of subsequent car, the decrease in the reflected light (Anti-glare) can be.

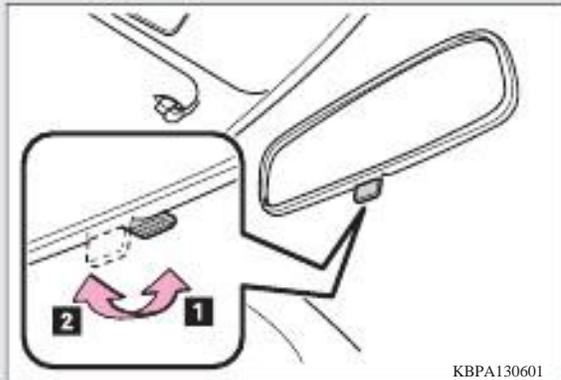

- 1 During normal use
- 2 When anti-glare

### How to adjust up and down

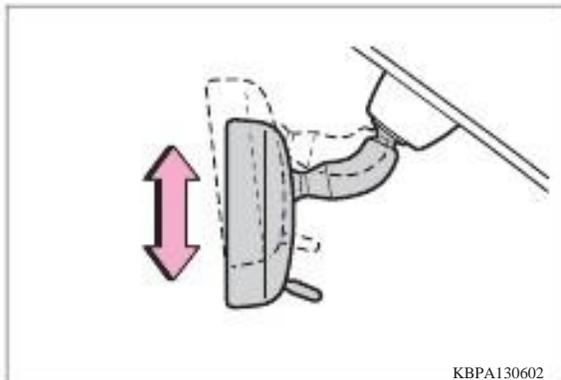

With the inner body mirror, on the To adjust in a downward direction.

### Warning

#### ■ Warning while driving


While driving, please do not adjust the mirror.

Incorrect operation, can lead to serious injury or death.

## Door mirror


### ► Type electric

You can adjust the angle of the mirror surface on the switch.

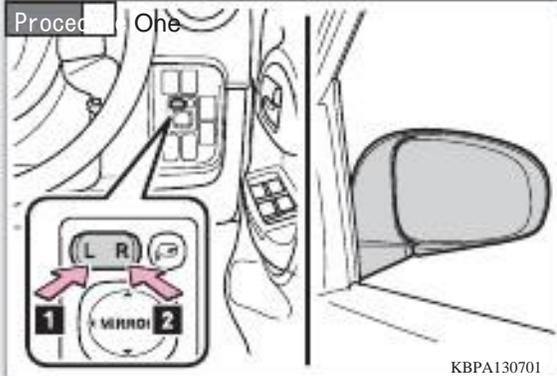

Choosing a mirror

- 1 Left
- 2 Right

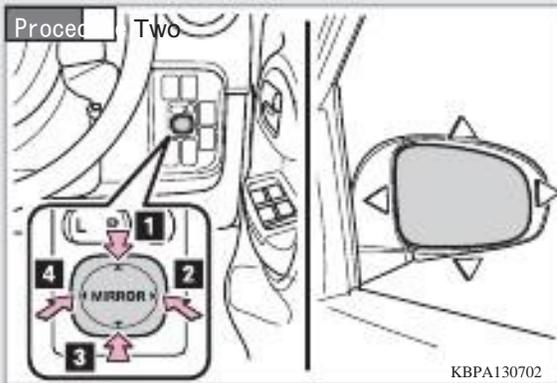


Operate the switch on the mirror  
To adjust the horizontal direction under

- 1 Above
- 2 Right
- 3 Under
- 4 Left

### ► Manual type

Move by hand the entire mirror, you can adjust the angle of the mirror surface.

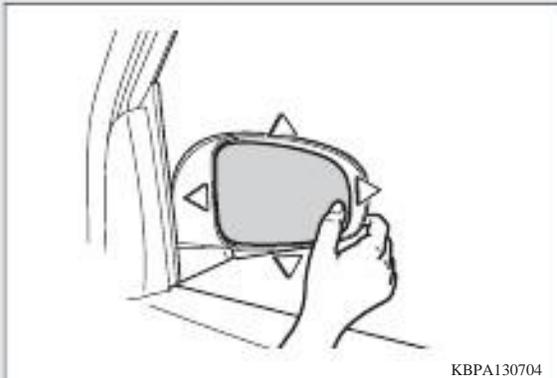


Adjustment in the direction of up, down,  
left and right hand mirror  
To integer

One

Luck  
Transl  
the  
Ru  
Before  
To

When storing a door mirror


► Type electric

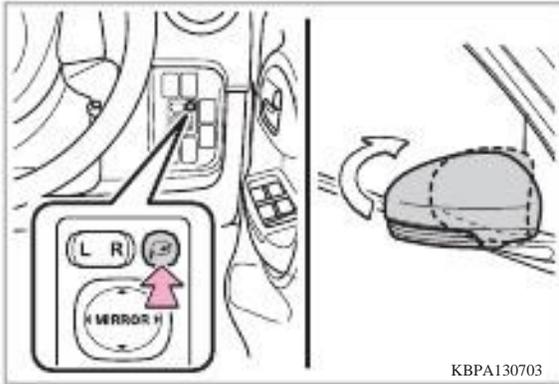

Press the button to store the door mirror  
To.

Press the button again to return to its  
original position  
You.

► Manual type

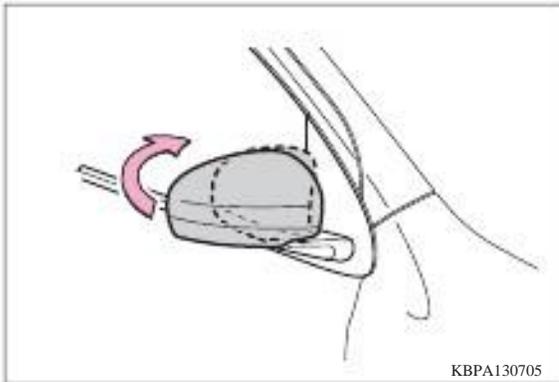

De A Mi Error The By hand Press Tooth Te case  
Paid The  
File.

 Knowledge

- Operating condition

The engine switch "ACC" or "ON" When the

- Reverse linkage function \*

Downward angle of the mirror when the recession becomes, the lower will be easier to read.

To release the reverse interlocking

function

Procedure One The shift lever R To.

Procedure Two The mirror switch L To. (→ P. 61)

Procedure Three Press the switch on top of the mirror. (→ P. 61)

To reconfigure a reverse interlocking function

Procedure One The shift lever R To.

Procedure Two The mirror switch L To. (→ P. 61)

Procedure Three Press the bottom of the mirror switch. (→ P. 61)

One

Luck  
Transl  
The  
Ru  
Before  
To

 Warning

- When you are traveling

While driving Please observe the following.

If you do not imperative talisman, your serious injury accident causing unexpected operation error or referred to, can lead to death in the worst case.

- Not to adjust the mirror

- Still do not run that contains the

mirror


The return side and passenger side mirror of the driver's seat before traveling make sure to adjust properly.

\* :Different equipment and optional equipment such as vehicle type

## 1-4. Opening the glass door, Closing Power windows


You can open and close the glass door on the switch.

- ▶ Vehicles equipped with automatic opening and closing the door glass only the driver's seat

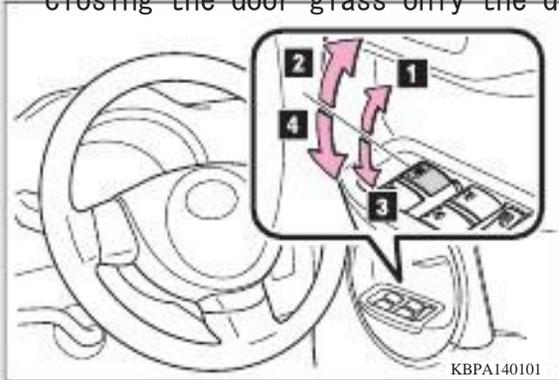


- 1 Close
  - 2 Automatic fully closed (the driver's seat only) ※
  - 3 Open
  - 4 Automatic full throttle (driver's seat only) ※
- ※When you stop in the middle, the switch The operation to the other side.

- ▶ Vehicles equipped with automatic opening and closing the door glass seats

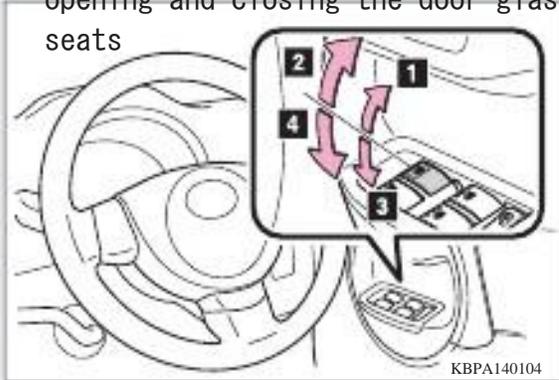

- 1 Close
  - 2 Fully closed automatic (all seats) ※
  - 3 Open
  - 4 Automatic full throttle (all seats) ※
- ※When you stop in the middle, the switch The operation to the other side.

### Lock Switch

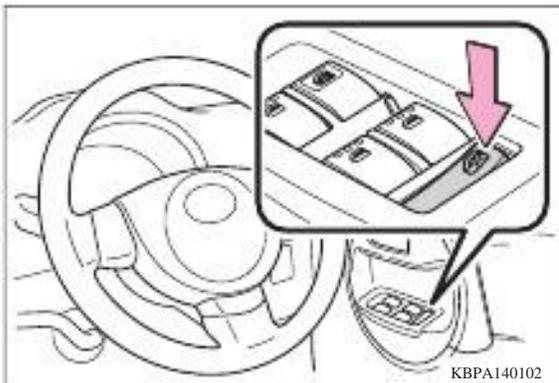

Soil other than the driver's seat and press the switch

To disable operate the Agarasu Opening and closing the glass door to prevent children from accidentally You can prevent.

 Knowledge

- Operating condition

The engine switch "ON" When the

- (Vehicles equipped with automatic opening and closing the door glass driver's seat only) after stopping the operation of the engine

Engine The switch "ACC" or "LOCK" Even after, no luck for about 40 seconds

You can open and close the glass door of the

seat forward.

- Pinch protection function (only for automatic opening and closing the glass door)

When you are closing the glass door, and foreign objects caught between the window

frames and glass door, work motion is stopped, and then open a

little.

- When you can not close the power windows (automatic opening and closing the door glass only)

Prevention function, causing the abnormally activated pinch, I can close the door glass

When the stomach is, in the power window switch can not close the door, the following

Please perform the operation.

**Procedure 1** One Stop the car, the engine is switched "ON" To the state.

**Procedure 2** Two Hikitsuzuke at the location of the "fully closed" Automatic power window switch, Doagara After the vinegar is fully closed, the switch further Six

Hikitsuzukeru seconds.

If the glass door does not close even after the above operation, the initial anti-pinch

feature Please perform the following steps: the

mosquito.

**Procedure 1** One Press and hold the power window switch to fully open the glass door.

**Procedure 2** Two Hikitsuzuke at the location of the "fully closed" Automatic power window switch, Doagara After closing the nest, the switch further Two Hikitsuzukeru

seconds.

When you release your hand from the switch in the middle of working glass door, and you

start from scratch.

Be. If you do not cut close also reversed by doing the above, check with Toyota dealers Please receive.

One

Luck  
Transl  
The  
Ru  
Before  
To

 Knowledge

- When you reconnect the battery (vehicles equipped with automatic opening and closing the door glass driver's seat only)

For power windows to operate properly, please do the following steps: the initial configuration.

**Procedure 1** Fully open the glass door to the driver's

seat.

**Procedure 2** Fully close the glass door to the fully closed position by pulling up on the switch until

the "fully closed" Automatic Hold for two seconds to switch directly.

 Warning

- When you open and close the door glass

Please observe the following.

If you do not observe imperative, serious or lasting injury, your death will lead to the worst case that it has.



- When you open and close the glass door, the occupant Pinch involving the hands, arms, head, and neck Please do not Dari. Particularly Voice to children and please do not hand Please have a bet.
- For children, is the operation of the door glass Please do not. Was involved or sandwiched between the glass door Serious injury or re-ranging, if the worst Can lead to death if.

- Pinch protection function (only for automatic opening and closing the glass door)

- To activate the function of preventing jamming deliberately, across the hand of the occupant, arms, head, and neck Please do not Dari. Serious or lasting injury, your death will lead to the worst case

There is the danger it is.

- Protection does not operate, and foreign material immediately prior to sandwich the glass door is completely closed pinch

You may have. In addition, the protection is in a state of the switch jamming

Hikitsuzuke Does not work. Please be careful not to pinch your fingers. Your serious injuries

What is dangerous is referred to, may lead to death in the worst case.



### Caution

- When you open and close the door glass

Please observe the following things.

- Do not move in the opposite direction at the same time the door switch and another switch driver's seat
- Fully open the door glass, do not press and hold the switch in the same direction in all 閉後

One

Luck  
Transl  
The  
Ru  
Before  
To


## Opening the filler

Please open the filler neck in the following procedure.


### ■ Prior to refueling

Close the door and glass door, the engine is switched "LOCK" Try to correct the


### ■ Opening the filler neck

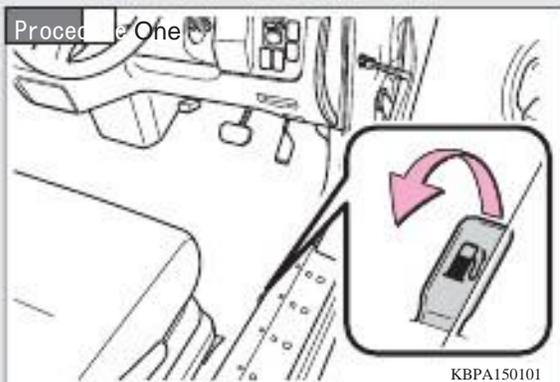

Pull the lever.

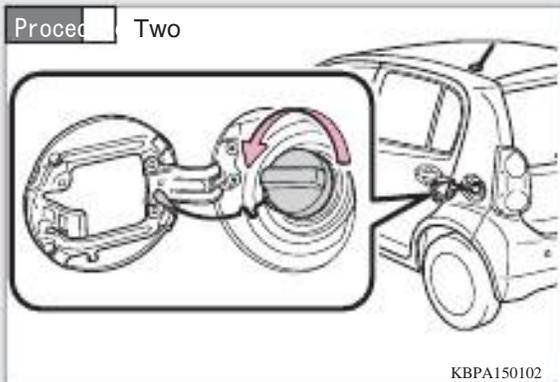


Turn slowly open the cap  
Kick.

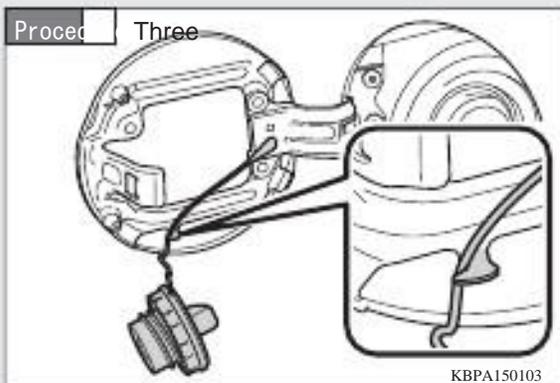

Applied to the hanger cap.

### When closing the cap of filler recess

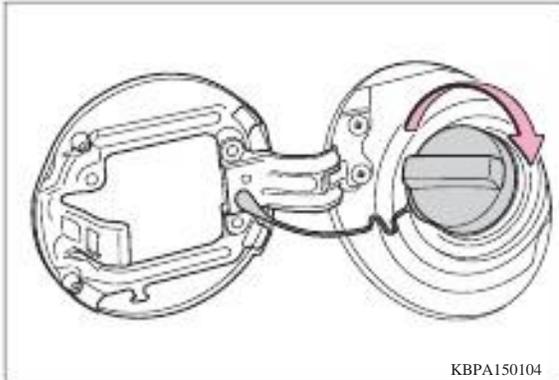

The cap "Clicks into place" Sound and Close by turning up.

When you release the hand, a little cap in the opposite direction Return.

One

Luck  
Transl  
The  
Ru  
Before  
To

### Knowledge

#### ■ Type of fuel

Regular unleaded gasoline

#### ■ Fuel tank capacity (reference value)

- ▶ FF (Front-wheel-drive vehicle)  
40L
- ▶ 4WD (Four Wheel drive vehicles)  
38L

**Warning****■ For refueling**

Before refueling Please observe the following.

If you do not observe imperative, serious or lasting injury, your death will lead to the worst case that it has.

- Of the body to discharge any static electricity by touching a metal part of the body, such as  
May ignite the fuel in the spark-discharge.

- Loosen the cap when, "Shoe" If that does is sound, that sound stopped

Open slowly from

When you open the cap, has a knob portion of the cap and open slowly.

When the temperature is high, to the injury from the fuel filler neck woke slowly and can not be opened there is injury or death.

- Away from the human mouth refueling, discharge any static electricity you have not
- You do not inhale the vaporized fuel

The components of the fuel, it may also contain hazardous substances.

- Do not smoke

They may cause a fire to ignite.

- Do not touch the person or thing or go back to the car, has been charged  
You may be charged again.

**■ Notes on refueling**

- When refueling, please insert the nozzle to ensure that the filler neck.

If you do have floated a shirttail refueling nozzle, auto-stop will not operate, the fuel  
If there is a spill.

- If you can not refuel properly, follow the instructions call the clerk of the stand  
The stomach.

**■ When replacing the cap warning**

Please do not use the cap on the non-genuine Toyota.

Causing a fire, etc., ranging in serious injury or a result, the most genuine and not used lead to death if of evil.

**Caution****■ When refueling**

Gasoline and other fuels other than those specified adulterated gasoline (diesel oil, kerosene, alcohol-based fuel, or use the charge), please do not spill fuel.

There is a risk of the following conditions:.

- Starting of the engine may get worse
- Knocking occurs
- Engine output is reduced
- Exhaust control system is not functioning properly
- Fuel system parts can be damaged
- Damage to the paint

One

Luck  
Transl  
The  
Ru  
Before  
To

## Engine immobilizer system \*

Transmitter signal has a built-in key, other than keys that are pre-registered  
You can not start the engine.



- The engine is switched "LOCK"  
If you, the operation of the system Knowledge Et al was to Printed on the first Cable Target will blink.
- The engine is switched "ACC"  
When the system has halted, Indication Off target Striped Be.

### Knowledge

- For maintenance
  - Engine immobilizer-Maintenance of the system is not required.
- When the system is not working correctly
  - Or when in contact with the metal object is key, is covered
  - Heavy vehicle security systems for other key (key built-in transmitter signal) is key  
When you are approaching and when it is


### Caution

- In order to successfully operate the engine immobilizer system  
Please do not modify or remove the system. System does not operate normally  
You may have.

\* :Different equipment and optional equipment such as vehicle type

## Correct driving

Please correct posture was operated at the following conditions.

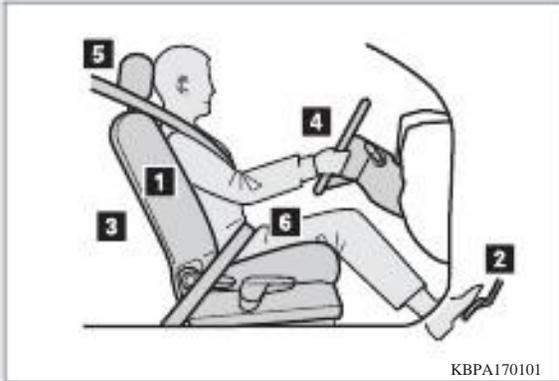

- 1** Sitting straight, from the back  
Do not let the back (→ P. 37)
- 2** Stepping on the pedal enough to seat  
Be put in position, such as sheet  
Files (→ P. 37)
- 3** Back was also easy to operate each  
device  
to the angle of the level (→ P. 37)
- 4** SRS His chest air bags  
Of the handle facing towards the  
Position to (→ P. 59)
- 5** Well in the center of the headrest of  
the car  
to be on the lot number per  
To (→ P. 49)
- 6** Wearing a seat belt properly  
Kill (→ P. 51)

One

Luck  
Transl  
The  
Ru  
Before  
To



### Warning

#### ■ While driving

- While driving, please do not adjust the driver's seat.

Improper operation may be dangerous.

- Please do not put a cushion between the backrest and back.

I just can not take the correct driving posture, when the collision, seat belts and  
Heddoe  
May cause dangerous effects such as the strike is not sufficiently

- Place any objects under (except the front passenger seat with a seat under tray) front  
exhibited.  
seat  
Please do not.

Sheet is not caught and fixed things, causing an unexpected accident, written in the  
life I  
There is the danger may be subjected to serious injury file. In addition, the cause  
of the failure of the adjustment mechanism  
will be.

#### ■ When adjusting the seat


- Please note that to avoid injury to hit the passenger seat.

- Please do not close your hand under the seat and moving parts.

May cause dangerous scissors your fingers or hands, to the  
injury.

## SRS Air bag

SRS Airbag receives a strong shock such as severe harm to the crew over Work in conjunction with the power swell when, the seat belt to restrain the body This is to mitigate the impact of employees.

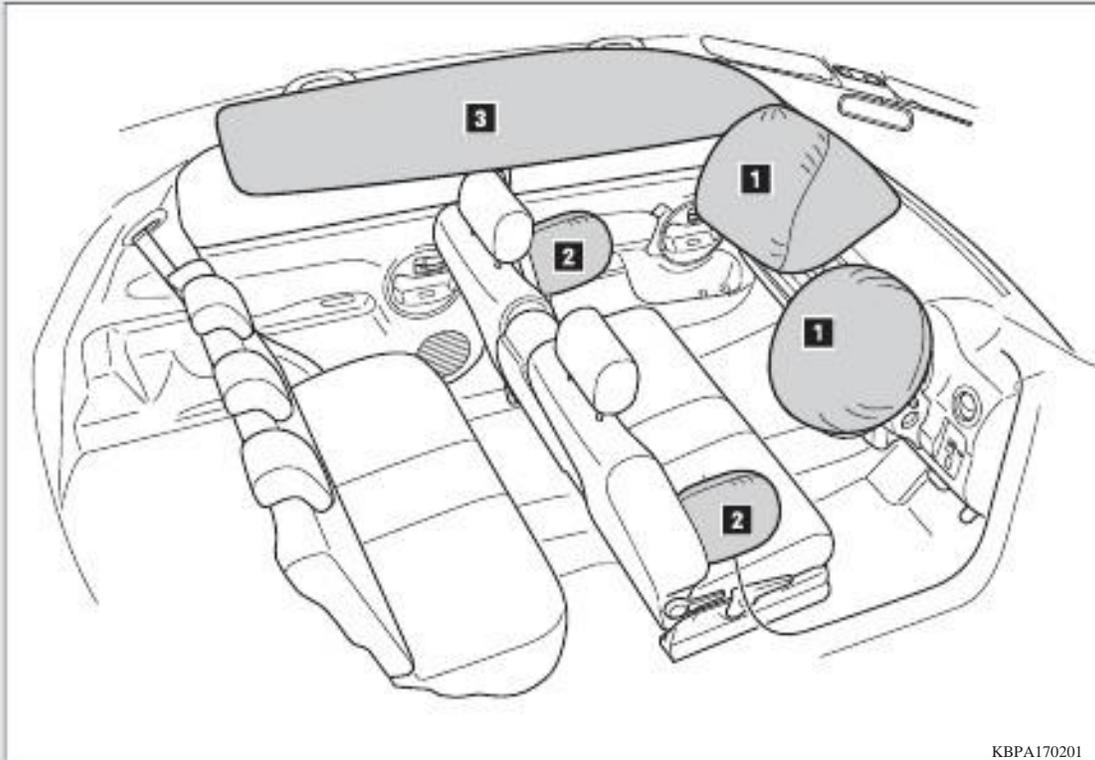

KBPA170201

► Front SRS Air bag

**1** Driver's seat SRS Passenger Airbag / SRS Air bag

(To mitigate the impact of the head and chest of the occupant, such as driver and passenger seat)

► SRS Side air bag and SRS Curtain shield airbags \*

**2** SRS Side air bag

(To mitigate the impact of front-seat occupants, such as breast)

**3** SRS Curtain shield airbags

(Mitigate the impact to the head mainly front seat, the outside rear-seat occupants)

\* :Different equipment and optional equipment such as vehicle type

---

 Knowledge

---

■ SRS When you deploy the air bag

- SRS Or may be due to contact with the air bag, receive and file wound bruise  
Be.

- White gas will occur with the sound working.

- A front seat portion, a front pillar, rear pillar and roof side rails  
Hub each component of the air bag module (handle, as well as air bag etc.  
The cover may become hot for a few minutes, and inflator).

(SRS

- 

(SRS

Vehicle-mounted)

- 

■ SRS SRS

- Front SRS

20 ~

- 


SRS

There is.

- SRS  
(SRS SRS  
SRS SRS  
20 ~

■ SRS

The Lee.

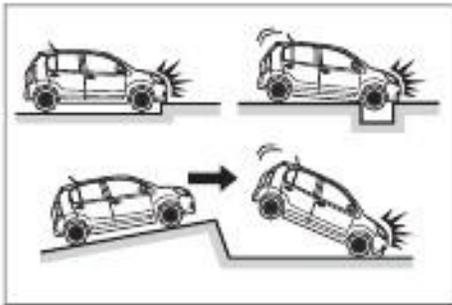


- I I Thing To One
- 
- 

■ SRS SRS

Front SRS

SRS

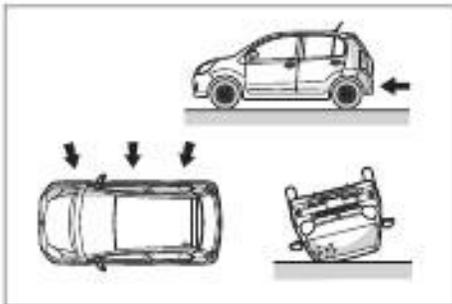

- 
- 
- 

One

Luck  
Transl  
The  
Ru  
Before  
To


\* :Different equipment and optional equipment such as vehicle type

■ SRS

(SRS SRS


SRS SRS

There is.

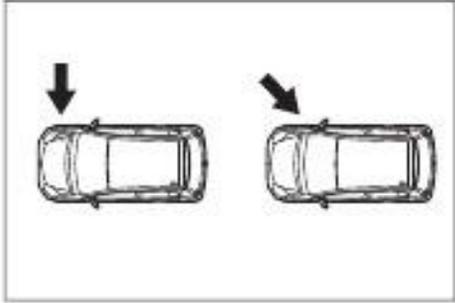

- 
- 

SRS SRS

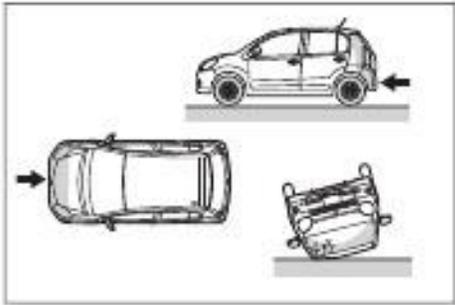


- 
- 
- 


\* :Different equipment and optional equipment such as vehicle type




● SRS

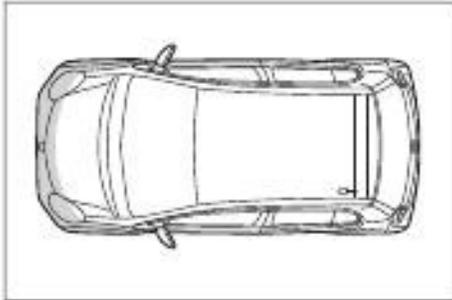


● Front SRS

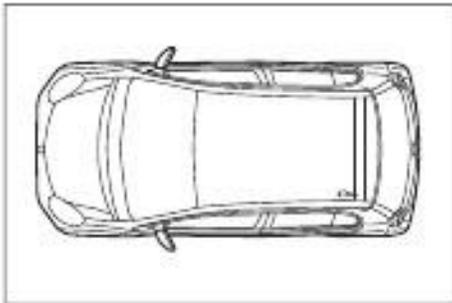

● SRSSRS

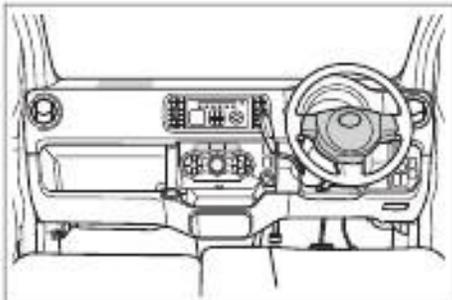

● SRS

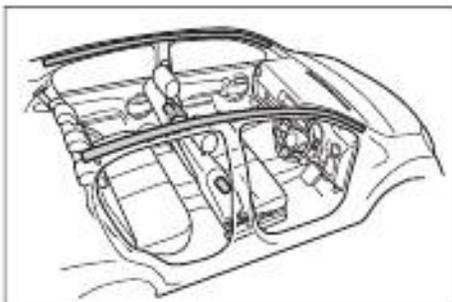

● SRS

● SRS

One

Luck  
Transl  
The  
Ru  
Before  
To

\* :Different equipment and optional equipment such as vehicle type

 Warning

■ SRS

•

SRS

• Passenger seat SRS


The Lee. SRS

Be. SRS


• SRS

Be.

(→ P. 94)

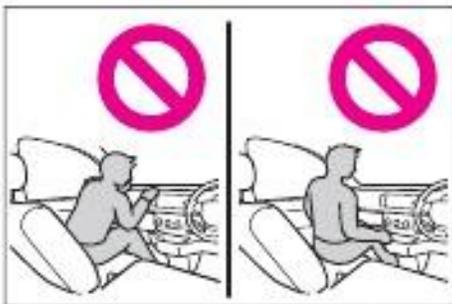

•

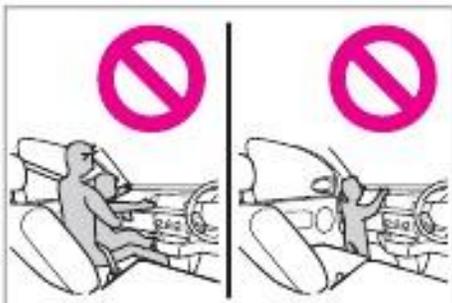

• SRS

•

**Warning**


■ SRS



KBPA170213



KBPA170214

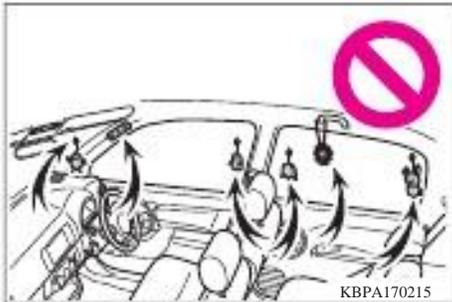

KBPA170215

- (SRS SRS)
- Rear System — Port De is A To Direction  
Selfishness or knees, hands and face from the window  
Out or not. (SRS Saidoeaba~tsu  
Drag andSRSCurtain shield air bag device  
Wearing car)
- Dashboard, steering pad section  
Such as the mounting or anything, or place  
No.
- Door, front window glass, when  
Dogarasu, front pillar, center pin  
Ra, C pillar, roof side rails,  
Such as the assist grip is attached to anything  
No. (SRS Side air bag and SRS  
Vehicles equipped with curtain shield airbags)

One

Luck  
Transl  
The  
Ru  
Before  
To



### Warning

#### ■ SRS About Air Bags

- SRS Accessories, such as the location of the seat side air bag cover swells \*  
Please do not use.

- SRS Around the air bag system components, such as excessive force bang  
Please do not.

SRS May cause the air bag may not work correctly.

- SRS Immediately after the air bag is inflated, because they do not touch hot components  
Please Do not.

- SRS If you feel painful breathing after air bag inflated, doors and Doaga

Put a glass open air, please check the safety out to the outside of the vehicle.

Inflammation of the skin.  
Please wash off the residue as soon as possible to prevent the

- SRS Part is scratched or has air bags are housed, and there is a crack

disease.  
Without the use of wood as it is, please replace with Toyota  
dealers.

\* :Different equipment and optional equipment such as vehicle type

**Warning**

## ■ For remodeling and disposal

Without consultation to Toyota dealers, please do not use the following modification and disposal. SRS You can not function properly if the air bag, accidentally, such as bloating, weight. Extends to a large or injury, can lead to death in the worst case.

- SRS Disassembly, repair, removal and mounting of air bag
- Handle, instrument panel, dashboard, seats, seat upholstery, Osamu front pillar, center pillar, rear pillar, roof side rails around Management, removal, alteration
- Repair front fender, front bumper, side of the vehicle room, remodeling
- Grill guard (such as Kangaroo Buruba bar), snow removal equipment, such as the winch Mounting
- Remodeling of the suspension
- CD Mounting of electrical appliances player, such as radio

One

Luck  
Transl  
The  
Ru  
Before  
To

## Only child seat

You can use the locking mechanism of the seat-only children, only to secure the child seat.  
You can be harmful.

### That you should know

- Age of children in accordance with specifications of the car and, in physique, a dedicated child seat appropriate  
Please choose the.
- How to Remove the mounting of the seat and how only a child, each child  
Please read the instruction manual that comes with the sheet only today.
- This car is 2006 Years Ten Month One Enforcement of safety standards that conform to the Sun ISOFIX Support  
Equipped with a standard child seat fixed private bar.

### For a complete list of compatible child seat only

#### ■Mass for the group

ECE R44 ※ only child seat to conform to the standards of children by weight

Following Five Are classified into types.

- Group Zero: 10kg To
- Group 0 +: 13kg To
- Group :Nine ~ 18kg
- Group :15 ~ 25kg
- Group :22 ~ 36kg

In this book the following typical Three Only child seat safety belts fastened and the types of  
We will show you how to.

※ ECE R44 Is the only international regulations related to child seat.

#### ■Class size, for fixing

Classification symbol displayed on the sheet and only child, accompanying fixtures  
Is the symbol of.

► Baby Seat



ECE R44 Group of criteria Zero, Zero+ Equivalent to

► Child seat



ECE R44 Group Of quasi- Glue Group 0 +, Equivalent to

► Junior Seat



ECE R44 Criteria Of Guru — Groups, , Equivalent to

One

Luck  
Transl  
The  
Ru  
Before  
To

List of compatible child seat another seat position only ( In the seat belt mounting )

Mass group	(Or elsewhere) seating positions		
	Front seat	Rear seat	
	Passenger seat	Left and right seat	Center seat
Zero (10kg Up)	×	U※One	×
0 + (13kg Up)	×	U※One	×
I (Nine ~ 18kg)	UF	U※ One, Two	×
I (15 ~ 25kg)	UF ※ Three	U※ One, Three	×
I (22 ~ 36kg)	UF ※ Three	U※ One, Three	×

●Description of the character to fill

in the table above

U: Dedicated children (universal) general categories that are allowed to use in this mass group  
It is suitable for sheet.

UF: Positive (universal) general categories that are allowed to specification of mass in this group

It is suitable for children of sheet only.

×: Can I install a child seat can not be dedicated.

※ 1: intermediate position from the front (the front seat Seven Set in front of) the fixed position of the first stage.

In addition, if you can not ensure the correct driving posture by this adjustment, the rear seat passenger seat

※ 2: When installing a child seat only prospectively, to state the most raised headrest.  
Please carry it.

※ 3: When installing a child seat only, clear me headless.

If you use a dedicated child seat that is not listed in the table, the only child seat manufacturer also

Please consult the seller.

Upon installation of a dedicated child seat, please check the instruction manual of the sheet only child.

Suitability of the sheet list another seat position only children(ISOFIXAt the top tether anchor mounting support)

Mass group	Size Grade	Fixtures	Vehicle ISOFIX Position
			Left and right rear seat seat
Carry-cot	F	ISO/L1	×
	G	ISO/L2	×
Zero (10kg Up)	E	ISO/R1	IL ※
0 + (13kg Up)	E	ISO/R1	IL ※
	D	ISO/R2	×
	C	ISO/R3	×
(Nine ~ 18kg)	D	ISO/R2	×
	C	ISO/R3	×
	B	ISO/F2	IUF ※
	B1	ISO/F2X	IUF ※
	A	ISO/F3	IUF ※
T (15 ~ 25kg)		(One)	×
II (22 ~ 36kg)		(One)	×

One

Luck  
Transl  
The  
Ru  
Before  
To

●Description of characters to fill in the table

(One): Grade display size (A From G Each sheet in the sheet at a position not only children) ISOFIX Pair

Only child seat fixing mechanism for the handling of stress, the only child seat manufacturer or Please contact the seller.

IUF (Universal) Category: general-purpose they are authorized to use in this mass group ISOFIX It is suitable for children only positive response sheet.

IL: ISOFIX "Specific vehicle" shown in the list of child-only seat "Semi-generic", or "limited" It is suitable for children of category-only seat.

x: ISO FIX Installing a child seat can not be dedicated.

※: When installing a child seat only, the state raised the headrest.

If you use a dedicated child seat that is not listed in the table, the only child seat manufacturer Please consult the seller.

Upon installation of a dedicated child seat, please check the instruction manual of the sheet only child.

ISOFIX List of child-only seat

Mass group	Size Grade	Fixtures	ISOFIX Children Sheet only	Category
Zero (10kg Up)	E	ISO/R1	Toyota Genuine NEO G-Child ISO baby	General-purpose semi-
0 + (13kg Up)	E	ISO/R1	Toyota Genuine NEO G-Child ISO baby	General-purpose semi-

 Knowledge

■ ISOFIX Support for the private bar child seat fixing

Are standard on this car ISOFIX Corresponding child seat fixed private bar, ECE R44 Mounting of the seat is only for children who are dedicated to conform to. Also other is not possible.

■ Selection of child-only seat, for use

- For the best seat children only, children only seat manufacturer, or to children Please consult the other to the seller.

- Children to grow, until you are able to wear the seat belt properly, you Please use our child seat suitable for children only.

- Children's body is large enough to seat children only unnecessary, put on the rear seat Please use the car seat belt of Te.

■ For selection of the type installed in the seat children only seat belt

"List of the suitability of another seat position seat children only" (→ P. 86) See, children And possible locations, only the type of child seat attached to the sheet corresponding to a dedicated (Sign) Please review and select those suitable for the.

One

Luck  
Transl  
The  
Ru  
Before  
To

## Knowledge

- ECE R44 Of fit ISOFIX For information about selecting a dedicated child support sheet

"List of the suitability of another seat position seat children only" (→ P. 87) Check the appropriate Please select a sheet.

**Procedure** From the child's body weight, to determine the "mass group" appropriate.  
(Example 1): Weight 12kg Case, the group mass + "O" Will be.

(Example 2): Weight 15kg Case, the group mass " I Will be ".

**Procedure** To select the grade size



**Procedure** Appropriate size grade from "mass group" was confirmed in To confirm. ※

(Example 1): Mass group "O+" If, grade size, "C"-  
"D" "E" And so on. -

(Example 2): Mass group " " If, grade size, "A"-  
"B" "B1" - "C" "D" And so on. .

※ However, even in grade appropriate size of vehicle compatibility list " ISOFIX

"On" position × What is described as "can not be selected.

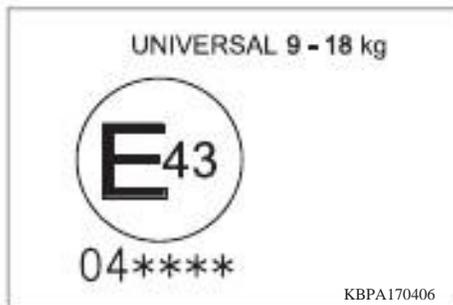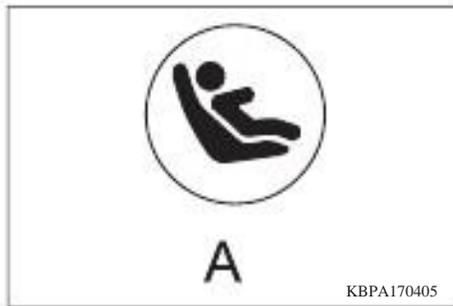

Mark that appears in the seat children only /  
Check the label sheet, one that conforms to the standards

To ensure that it is

General-purpose sheet dedicated to children (Universal), the

Mark label indicating the next class are shown You. ※

※ Symbols such as the position are displayed, the product Depends on.

One

Luck  
Transl  
The  
Ru  
Before  
To

**1** ISOFIX Sheet that it is only a child support  
Display indicating the  
Class size has been shown.  
Character is displayed (is, vary by product  
You)

TwoConform to the grade size was  
confirmed in  
Please choose what you are.

**2** Children only general-purpose sheet (Universal)  
Approval markings  
UNIVERSAL This is a general-purpose products  
are authorized  
Your child stands at the door, in conjunction  
with, the target  
Of our range of body weight has been described.

**3** Top tether (→ P. 94Mark indicating the)  
The position of the mounting apparatus of the  
product design  
Is different.

- ISOFIX Only the type of child support sheet (size graded)

A-ISO/F3	Infant car seat for all high positive
B-ISO/F2	Infant car seat forward for low-type
B1-ISO/F2X	Infant car seat forward for low-type (B-ISOFIX/F2 Those of a different shape)
C-ISO/R3	and For infant car seat large retrospective
D-ISO/R2	Infant car seat for a small retrospective
E-ISO/R1	Car seat rear-facing infant
F-ISO/L1	Child safety seat installation position for the left (carry-cot)
G-ISO/L2	Position for the right child seat (carry-cot)


- When installing a child seat in the front passenger seat only

Only child seat, please attached to the rear seat.

If you are installing a dedicated child seat in the passenger seat is unavoidable, the front passenger seat next Adjust as, please forward to the seat mounting only child.



- Lower in the seat behind most

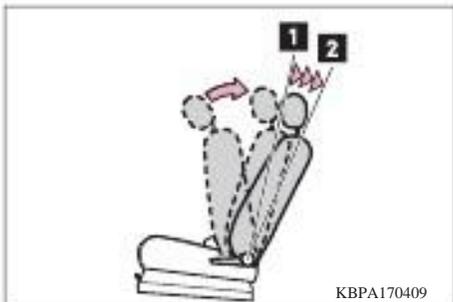

- Defeated once before the backrest, The second-stage solid One Wake up to a fixed position, Four The fixed position of the first stage Is to adjust  
**1** OneSecond stage  
**2** FourSecond stage

- Only in cases pertaining to the child seat headrest mounting, the headrest is Tin (→ P. 50)

■ For carry-cot

Carry-cot is that the baby seat that can be mounted sideways. More information  
For more, please contact the manufacturer or distributor seat children  
only.



**Warning**

■ If you do not want to use the child seat  
only

● Even when children do not use the seat only takes firmly to properly seat

Please give the state. Be placed in a room in a state loosened should be avoided  
The stomach.

● If you only need to remove the child seat, you can either save it removed from the  
vehicle,  
, Please do not move as easily accommodated in the luggage room.

One

Luck  
Transl  
The  
Ru  
Before  
To


## Installing the child seat

When you put a small child can not wear a seat belt properly,  
Please use the child seat. For the safety of children, tea  
Attached to the rear seat Irudoshito, please.

How to install, please follow the instruction manual provided with the product  
for sure.




By the seat belt mounting  
(→ P. 95)

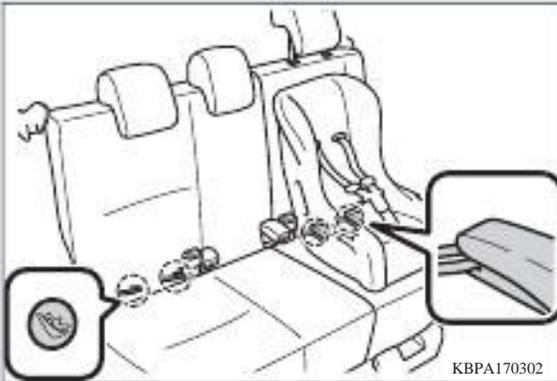

ISOFIX Compatible child seat  
Private bar (fixed→ P. 97)

Outside of the rear seat is equipped with  
seat has been. Equipped with a private bar fixed(  
Buttons indicate that it is  
Are attached to the sheet )

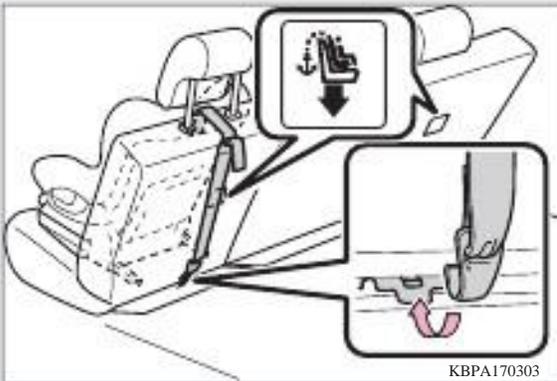


Top tether anchor  
(→ P. 97)

Used when fixing the Tezaberuto  
The.

Riyashi top tether anchor

Now is equipped with a seat outside of the  
city  
Be.


Fixed with seat belt

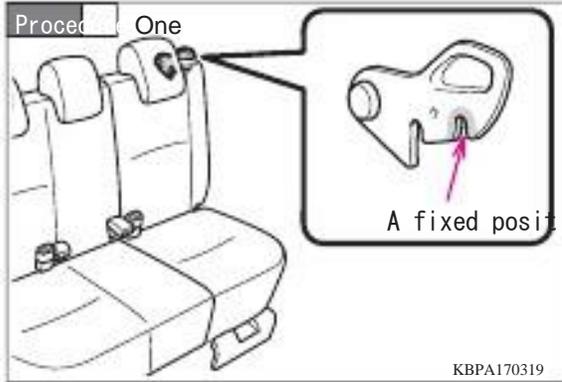

Of the rear seat backrest position shown in the figure Then fixed at.

One

Luck  
Transl  
The  
Ru  
Before  
To

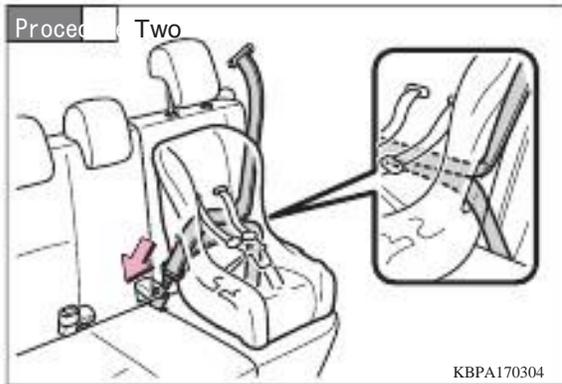


Seat belt in car seat Mounting, and buckle the plate To "Clicks into place" Insert until it clicks Comb. I did not twist the belt To sea urchin.

A written instruction manual that came with the car seat Therefore, the child seat

Do let is firmly fixed to the sheet Bloom.


※ Bok headless child seat In such a case to is on me Headless Or gel, please remove. (→ P. 49)

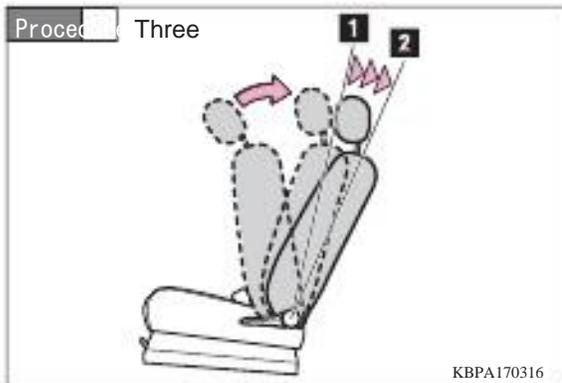

Said the backrest of the front seat Defeated before sputum, One Fixed position of the first stage

Wake up, Four The fixed position of the first stage

- 1 One Second stage
- 2 Four Second stage

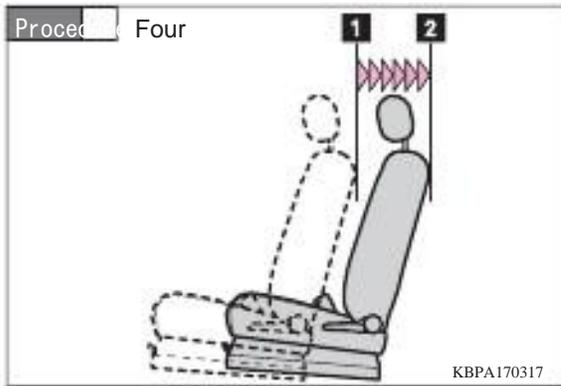


Before or intermediate position (the front seat  
From Seven In front of) the fixed position  
of the first stage

- 1 One Second.
- 2 stage

When difficult to operation, Sea Child

Ranked # client that will not interfere with  
the front seat.  
Please adjust it to a different  
position.

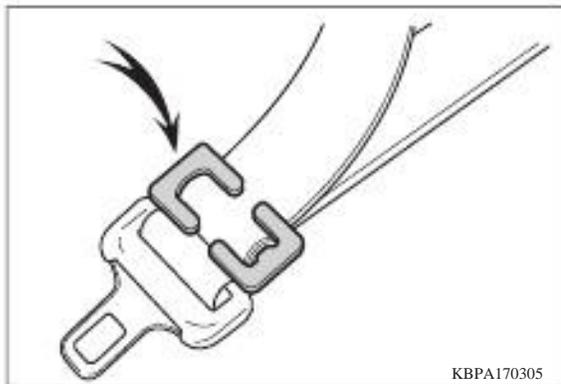

Seat belt in car seat

If the device does not have a fixed  
, The locking clip (sold separately)  
Fixing with.

Hit the purchase of locking clip


Te, please contact your Toyota dealer

The stomach.

Part Number (locking clip:73119 -  
22010)

After installing the child seat is lightly shake, is fixed firmly  
Please confirm that.


ISOFIX Bar & top tether anchors to secure child seat only support a fixed

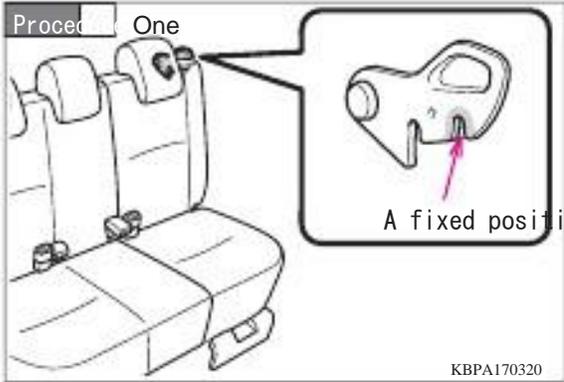


Of the rear seat backrest position shown in the figure Then fixed at.

One

Luck Transl The Ru Befor To

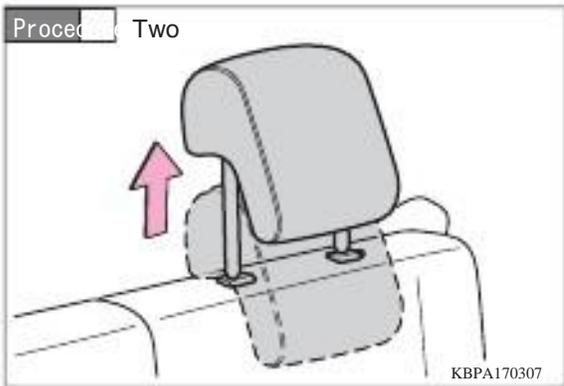

Raise the headrest. (→ P. 49)

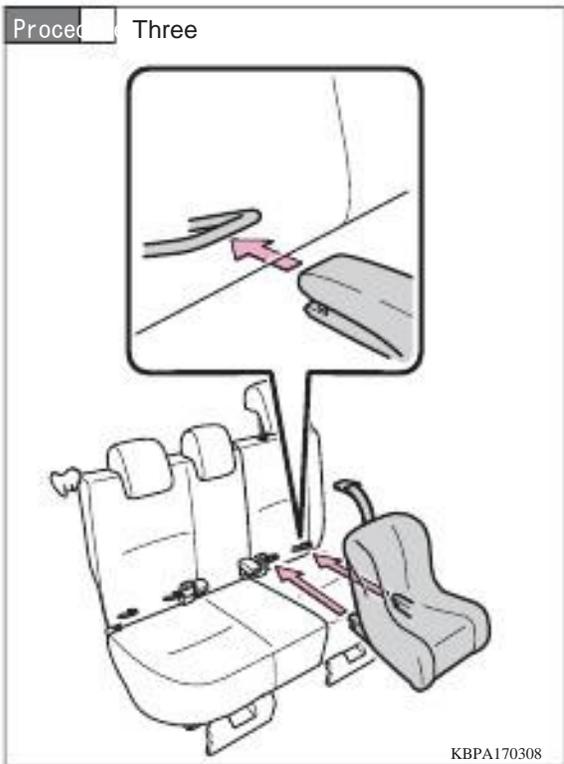

To determine the location of the private bar fixed

Take a child seat to seat

Put.

Fixed private bar, and seat cushion

Located between the backrest.

Mounting bracket of the child seat


Taken to a private bar child seat fixing

Give Lee.

Mounting method, the child seat


Follow the instruction manual that comes with

Bloom.

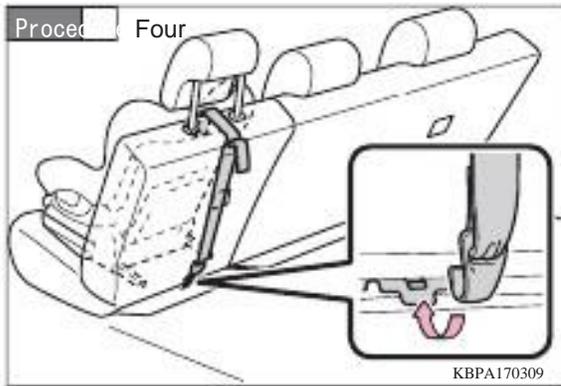

Hooks into the top tether anchor  
Fixed, tighten the Tezaberuto.

Tighten Tezaberuto pin, hook  
Make sure that is secure  
Be.

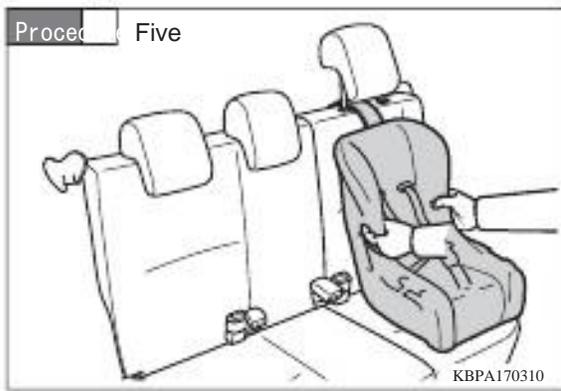

The child seat is mounted light  
Shake that phrase, which is fixed  
To confirm.


**Warning**

■ For child safety seats

- When an accident or sudden braking, in order to effectively protect, the child's age and body always  
Please use a seat belt or child seat appropriate to the size. You  
I feel in my arms instead of our child car seat will not be heard. Of accident  
When, children bumped into the front window glass and crew equipment, in-room, double  
Extends to a large or injury, can lead to death in the worst case.
- Rear seat using the car seat that matches the child's age and body size  
Please install the.
- Even though the child seat to sit down for example, doors and seats, front pillar,  
Thigh and the head of the children which parts of the body center pillar, roof side  
rail in the vicinity.  
Please do not put the sauce. SRS If the air bag is inflated, very  
May be dangerous, and serious or lasting injury, death may result in the worst case  
You. (SRS Side air bag and SRS Vehicles equipped with curtain shield airbags)
- By the car seat, can not be difficult mounting, or mounting  
You may. Sac carefully read the instruction manual that came with the car seat be  
sure example, securely attached, please observe how to use. Accidentally or how to  
use, make sure  
If it is not fixed, such as during sudden braking or collision, or extends to serious  
injury  
May lead to death in the worst case.

One

Luck  
Transl  
The  
Ru  
Before  
To

**Warning**

■ When installing a child seat

- Please do not Asobase children in seat belts. Belt is wrapped around the neck with the event If you have, such as suffocation or serious injuries ranging, the worst case can lead to death

Becomes accidentally into such a state, can not be removed even if the buckle, a pair of scissors Please disconnect the seat belt, etc..

- Has been fixed and the seat belt buckle, make sure the belt is not twisted, Please.
- Move to the left or right child seat, make sure that is fixed properly Bloom.
- After securing the child seat, please do not adjust the seat.



- Luck Translocation Seat And Switch ~Ya Lee Le De System — Port, Is Dry Wataru And, Child seat is properly installed If not, remove the rear seat of the passenger side Please be fitted.
- Interference and the front passenger seat child seat So that it does not, adjust the front passenger seat Please.

**Warning**

■ When installing a child seat

- Child seat, please attached to the rear seat.



- Child forced forward in the passenger seat

System — port The Preparative Than with Only Ru  
Field In case Is assistant Hand Seat  
Attach the seat down after most  
Only, please.

Passenger seatSRS Considerable speed and airbag  
It swells in power, no talisman imperative  
And, extends to serious injury or, in the worst  
case  
May lead to death.



- If you are installing a child seat in the passenger seat is unavoidable, Sea Child  
Please do not attached to the direction behind the  
door attached to the back direction, the front passenger seat or Accident SRS Blows  
from the air bag  
And I have, serious or lasting injury, or death may result in the worst case  
Be.

The passenger side sun visor, warning of the same content is displayed. We reserve  
the right to make technical alterations  
Please Pun.

One

Luck  
Transl  
the  
Ru  
Before  
To

**Warning**

■ When installing a child seat

- If you are using a junior seat, the center of the shoulder of the shoulder belt is always children

Please do come. Do not fall from the shoulder with the belt away from neck

Please then. To serious injury when an accident or sudden braking imperative not observe, can lead to death in the worst case.

- ISOFIX When you use the corresponding private bar child seat fixed, obstructions around

Please make sure there is no, and whether the seat belt is not caught.

- When installing a child seat in the state raised headrest, Tezabe

Please read the default under the headrest to be sure. Put on top of the headrest And, the child seat is not securely fastened, written in life, such as when they collide Dangerous it may cause serious personal injuries serious badass.

- When installing the child seat in the state raised headrest, Heddore

After to secure it to the top tether anchor by pulling up on the strike, under the headrest Please do not gain. If you lower the headrest, the headrest is Tezaberuto

Slack hitting, serious injury to the moving car seat, such as when they collide Or over, can lead to death in the worst case.

- If you need to remove the headrest is firmly fixed in a secure location

Please look us.



- Attach the child seat to the right rear seat

Only when it is Do not sit in the rear center seat

Bloom. Seat belts and child safety seat

Seat belt can be worn correctly to interference is

Without, at the time of sudden braking or collision, serious damage

Or lasting harm, death connected to the worst case

There is injury or death.

Figure 2-1. DIRECTIONS FOR

USE

In operation 104 .....	
Engine (ignition) Switch (key free Vehicles equipped with the system) .....	114
..... Engine (ignition) Switch (key free Vehicles equipped with non-system) .....	117
Automatic Transmission 119 .....	
Direction indicator lever 122 .....	
Parking brake.....	123
Horn (horn instrument).....	124

Figure 2-2. View of the meter

Gauges 125 .....
Warning light / indicator lights.....
127 With fuel consumption display function Display 131 .....

2-3. How to put the write-  
Use of wiper

Light switch.....	135
Fog light switch 138 .....	
Wiper And Washer (Front) .....	140
Wiper And Washer (Rear) .....	142

2-4. Using the equipment of other  
traveling

Toyota Stop & Start System (SMART STOP) .....	144
---	-----

Equipment to assist in driving 155 .....
--

2-5. Operation in various  
situations

To gain attention when the luggage 160 .....	
Operation at the time of cold.....	162

## Figure 2-1. DIRECTIONS FOR USE In operation

The drive safely, please run the following procedure.

### ■ Start the engine (→ P. 114, 117)

#### ■ Take off

**Procedure** Once stepped on the brake pedal while, the shift lever D To. (→ P. 119)

**Procedure** To release the parking brake. (→ P. 123)

**Procedure** Release the foot from the brake pedal gradually, the accelerator pedal slowly starting to tread.

#### ■ To stop

**Procedure** Shift lever is D Leave, step on the brake pedal.

**Procedure** If necessary, apply the parking brake.

If you want to stop for a long time, the shift lever P Or N And then. (→ P. 119)

#### ■ Park

**Procedure** Shift lever is D Leave, step on the brake pedal.

**Procedure** Apply the parking brake. (→ P. 123)

**Procedure** The shift lever P To. (→ P. 119)

If you want to park in the middle of the hill If required, use the wheel to stop the stomach.

**Procedure** The engine is switched "LOCK" To stop the engine.

**Procedure** Make sure that you carry a key, to lock the door.

## Way of starting the uphill

- Procedure** Once stepped on the brake pedal remains, whether the parking brake firmly Only, the shift lever D To.
- Procedure** Step on the accelerator pedal slowly.
- Procedure** After reviewing the car feeling begins to move, then release the parking brake from To proceed.

## Knowledge


### ■ About driving on a rainy day

- Or cloudy glass, slippery road surface is also on rainy days, visibility is worse Or so, please travel carefully.
- Since the beginning the road surface more slippery, please carefully run down the rain.
- Such as high-speed driving on a rainy day, the water film is generated between the tire and the road surface, or handle Since there is a risk of no longer hear the brakes, the speed is sure to be conservative The stomach.

### ■ Mounting of the sign operation

Aluminum and plastic bumpers and body-labeled beginner driving elderly driving magnet signs and can not be mounted on the unit.

### ■ Environment-friendly operation

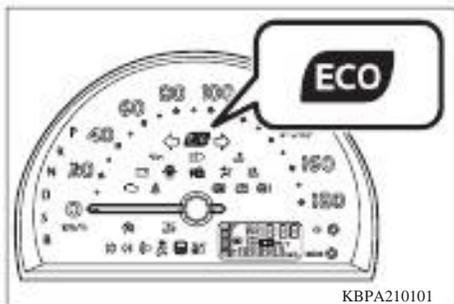

Eco-driving indicator lights  
And, driving to the small amount of carbon dioxide emissions  
Tells us that. Access to more than necessary  
Will turn off and go through the Serupedaru.  
Chemotaxis in the (D  
When the line. However, Sport drive (S/D) To  
Match \* ON When are excluded)  
- Stop & Start Engine by the system  
During stop lights. (→ P. 144)  
- Eco-driving indicator is displayed, non-  
You can switch the display.  
(→ P. 133)

\* :Different equipment and optional equipment such as vehicle type

 **Warning**

- When you launch the
  - When you stop the engine is still suffering, stepping on the brake pedal has always , Please. Prevents the car begins to move in the creep phenomenon.
  - , The rotation becomes higher idling, clean (especially when cold) immediately after starting the engine type (car starts moving) phenomenon becomes stronger. Stepped on the brakes to ensure starting, stopping Please note that at the time of operation.
- When driving
  - Mistakes to Avoid stepping on, do not understand the position of the accelerator pedal and brake pedal Please do not drive well in the state.
    - When you press the brake pedal and the accelerator pedal by mistake, the car is assumed that the sudden acceleration Lead to accidents, serious or lasting injury, your death will lead to the worst case it has.
    - Because when you retreat and twist your body posture, pedal operation is not difficult to The Lee. Please note that the operation can be reliably pedal.
    - Take the correct driving posture when moving the car a little, brake pedal and evil Please do Fumeru Serupedaru is reliably.
    - Please operate the brake pedal with your right foot. Left foot braking in emergency There is the danger, such as delayed reaction time, can lead to an unexpected accident
  - Traveling over the object or flammable, do not stop the car or in the vicinity of combustible The stomach.
 

There is a risk of fire and exhaust gas becomes very hot exhaust pipe, and is nearby combustible Lee.
  - Retreat by force of habit or to leave the shift position of the shift lever forward, R To move forward with inertia to leave please stop absolutely. Engine stops and becomes weak or braking, or the handle is heavier Then, it may cause an unexpected accident or malfunction.
  - If you notice the smell exhaust gas in the car, opened the door glass, back door is closed Please make sure that file. Cause of the accident causing the drowsiness a large amount of exhaust gas The other is dangerous, may cause serious health problems or death. Toyota quickly Please receiving inspection and maintenance in the shop.


**Warning**

- During the vehicle is moving, the shift lever P Please do not put on.  
Or damage to the transmission, you will not be able to have control of the vehicle  
There is injury or death.
- During the vehicle is to move forward, the shift lever R Please do not put on.  
Or damage to the transmission, you will not be able to have control of the vehicle  
There is injury or death.
- During the vehicle is to retreat, the shift lever D Please do not put on.  
Or damage to the transmission, you will not be able to have control of the vehicle  
There is injury or death.
- The shift lever while driving N If you, the power of the engine transmission and  
transfer  
We will be canceled, engine brake will not work.
- During normal driving, please do not stop the engine while driving. Engine while  
driving  
And operation of the brake handle is also possible to stop, eliminating the auxiliary  
power operation  
You. In that case, because it is difficult to handle and brake operation, check the  
safety  
On that, please stop at the side of the road as soon as possible.  
In addition, an emergency, such as not be able to stop the vehicle in the normal
- In the P stop downhill, please reduce the speed using the engine brake.  
Please refer to  
Excessive use of a continuous foot brake, brake overheating correctly  
Will no longer work on. (→ P. 119)
- When you stop at the hill to prevent, it leads to accidents started to move back and  
forth, Bradenton  
Please use the parking brake and Kipedaru.
- While driving Do not handle adjustment, seat, side mirrors, mirror of the inner  
Dasai.  
There is a risk of injury or death risk serious error caused the operation, an  
unexpected accident  
Is.
- Since there is a risk of serious injury or death, head and hands, other body of all  
passenger  
Please do not put the car a part of.
- Please do not off-road riding.  
When riding off-road is unavoidable, please drive carefully.
- Running water, such as river crossing, please do  
not.  
May become short of or damage to the engine and electrical equipment, vehicle and  
cause serious damage  
There is.

Two

Luck  
Trans  
The  
Ru  
And  
I  
To

 **Warning**

- When you drive a road surface slippery
  - Sudden braking, sudden acceleration, sudden tire slip handle, can not control the vehicle  
Pose a safety hazard clause, may lead to an unexpected accident.
  - Such as engine braking by shifting up or down shift, the number of engine revolutions  
Abrupt changes, you can go into a skid, such as cars, may lead to an unexpected  
accident.  
It's dangerous.
  - Puddle is that after riding the brakes work normally stepped on the brake pedal  
lightly  
Please confirm. Braking was bad and the brake pads get wet  
Lee is taken or a handle that you hear is not only one wet, one in an unexpected  
accident  
There is the danger may not want.
- When you operate the shift lever is
 

Please be careful not to manipulate it remains pushed down on the accelerator  
pedal.  
Shift lever is P Or N If that is not in, connected to an unexpected accident and sudden  
acceleration the car  
There is the danger that injury or  
death
- When the vehicle is  
stopped
  - Please do not Bekasi empty.  
Shift lever is P Or N If that is not in, not one in an unexpected accident and sudden  
acceleration the car  
There is the danger could want.
  - Please do not leave the engine over a long period of time. If absolutely necessary,  
Leave your car in the open areas, make sure that exhaust gas does not come into the  
car  
Room.
  - In order to prevent accidents caused by car begins to move, during the rotation of the  
engine is always Burekipe  
Stepping on the pedal, please take the parking brake as necessary.
  - When you stop in order to prevent hill, it started to move back and forth lead to an  
accident, always  
Stepping on the brake pedal, please take the parking brake as necessary.
  - Please do not empty during a stop Bekasi.  
Exhaust pipe to overheat and may lead to a fire is nearby combustibile materials.

**Warning****■ When parking**

- From the car when you leave, please do not leave children in the car. Inside a car on a hot day is becomes very hot, and leave the children, and heat stroke and dehydration, serious Or lasting health problems, it may lead to death in the worst case.
- Leaving the children, by playing with fire vehicle fire flares match of writer There is the danger that could lead to.
- Under the scorching sun, do not leave the car glasses and cans, spray cans and carbonated beverages Dasai. Was allowed to stand and remain in, that danger may arise such as:
  - Is.
    - From spray cans or gas leak, catch fire
    - Plastic glasses are plastic lens material, deformation or cracking.
  - Cause
    - Or stain the interior to cause the bursting cans of carbonated beverages, electrical components to short
- Please do not leave the car to remain a writer. Center for the writer Lore If you leave or place the card in a box, dropped the car, press the luggage Operating portion of the lighter to malfunction when you move the sheet jog dial There is the danger could want.
- Window glass, etc. Please do not attach the sucker. In addition, the Insutoru Do not place a container such as air freshener on the dashboard and instrument panel The stomach. Dangerous to the workings of the lens and containers sucker, can lead to vehicle fire Be.
- 
- P To

Two

Luck  
Transl  
The  
Ru  
And  
I  
To

 Warning

- 
- 
- 
- 
- 
- 

May result.

 Warning

- 
- 

Also

- 

The stomach.

Be.

- 

Please receive.

■ 4WD

You.

Two

Luck  
Trans  
The  
Ru  
And  
I  
To

 Caution

- -
- The Lee.
- 
- 
- P P
- 
- 

- To prevent damage to the wheel, such as a disk, such as when passing through the step can be Please only the traveling slowly.
- When you hear the sound of squeaking and scratching (brake pad wear indicator)
 

Inspect the Toyota dealer as soon as possible, please replace the brake pads. If it is not replacement of the pad when needed, may lead to damage of the rotor You.

Parts such as brake pads and rotor disk, you wear play a role along with the We will. Not only lead to failure to travel beyond the limits of wear, it There is a risk therefore.
- When you have tire blowout while driving
 

Such as the following: When is considered puncture or damage the tire. Firmly the handle Brakes gradually with Lee, please slow down.

  - Handle will be taken
  - There is excessive vibration
  - The vehicle is unusually lean

If the tires were punctured, please replace the new tire. (→ P. 280)

**Caution****■ Notes on flood-Road Driving**

Such as heavy rain flooded road, there is serious damage, such as:  
Therefore, please do not run.

- To stall
- Electrical equipment to short
- Inhale water damage engine

Should you run a water-covered road, when I've always soaked in water TOYOTA  
Please check the following to the store.

- Effectiveness of the brake
- Engine, transaxle, transfer (4WD Car), Riyadhifare  
Nsharu (4WD Changes in the quantity and quality of oil and fluid, etc.)
- Propeller shaft (4WD Car) Poor lubrication, bearings each, and each joint

Two

Luck  
Transi  
The  
Ru  
And  
I  
To

Figure 2-1. DIRECTIONS FOR

# USE Engine (ignition) switch (vehicles equipped with key-free

## ■ How to make engine


**Procedure 1** To make sure that the parking brake is disengaged.

**Procedure 2** Shift lever is P To ensure that the position of the.

**Procedure 3** Step on the brake pedal firmly.

**Procedure 4** While pushing the engine switch "START" or the position of the Be.

## ■ Position of the engine switch

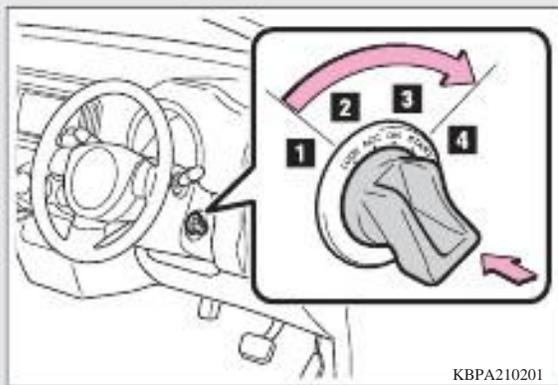

### 1 "LOCK" (OFF)

Takes the steering lock Be.

### 2 "ACC"

In the use of electrical equipment such as audio The trees.

### 3 "ON"

All electrical equipment can be used.

### 4 "START"

Engine can be started.

## Knowledge


- The engine is switched "ACC" From "LOCK" To turn to the

The shift lever P Please operate then.

P With other than "LOCK" Can not only turn up in front of the handle lock

Are not.

- To unlock the steering lock

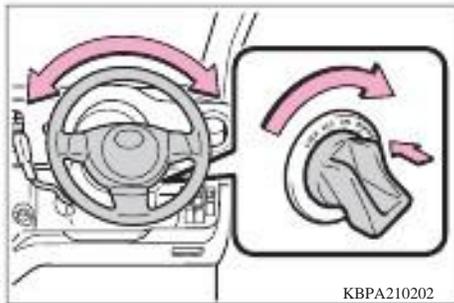

From side to side while moving the handle, the engine

Please turn by pushing the switch.

Two

Luck  
Trans  
The  
Ru  
And  
I  
To

- When the engine does not start

May be engine immobilizer system has not been released.

(→ P. 72)

- About the battery life of electronic key card

II. 24

- When the battery of the electronic key card has expired

II. 254

- Situation that could key-free system does not work properly

II. 23

- Keep in mind that

II. 25



### Warning

- When you start the engine

Please go sit in the driver's seat always. At this time, I never stepped on the accelerator pedal. Please do not. Leads to an unexpected accident or serious injury extends to death, the worst case to the deceased.



### Caution

- In order to prevent the battery up

When the engine is not under, the engine is switched "ACC" or "ON"  
Please do not leave for long periods to.

- When you start the engine

- At a time 30 Please do not route the starter seconds or more.
- Please do not Bekasi empty with the engine is cold.
- Or if the engine is difficult to start if you stall out frequently, painting immediately  
Please check under the engine.

Figure 2-1. DIRECTIONS FOR

# USE Engine (ignition) switch (vehicles equipped with non-

## ■ How to make engine


**Procedure** To make sure that the parking brake is disengaged.

**Procedure** Shift lever is P To ensure that the position of the.

**Procedure** Step on the brake pedal firmly.

**Procedure** The engine is switched "START" Turning to a different position.

## ■ Position of the engine switch

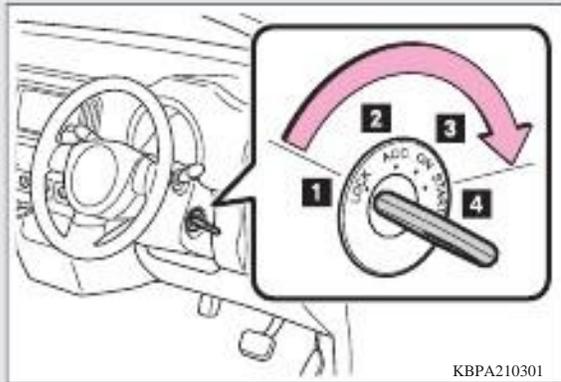

### 1 LOCK" (OFF)

- Takes a steering lock  
You.

- The position of the shift lever P Note  
May have to insert and remove the key  
You can.

### 2 ACC"

In the use of electrical equipment such as  
audio  
The trees.

### 3 ON"

All electrical equipment can be used.

### 4 START"

Engine can be started.

Two

Luck  
Trans  
The  
Ru  
And  
I  
To

## Knowledge

- The key "ACC" From "LOCK" To turn to the  
The shift lever P Please operate then.

- To unlock the steering lock



While moving the handle from side to side, or the key  
I please you.

- When the engine does not start

- II. 291

- Forgot to remove key warning

buzzer

Key has been inserted, the engine switch "ACC" or "LOCK" At this time, the well  
Warning tone will be to open the door of either.

### ⚠ Warning

- When you start the engine

Please go sit in the driver's seat always. At this time, I never stepped on the  
accelerator pedal. Leads to an unexpected accident or serious injury extends to death, the  
Please do not. May lead to the deceased.

### ⚠ Caution

- In order to prevent the battery up

When the engine is not under, the engine is switched "ACC" or "ON"  
Please do not leave for long periods to.

- When you start the engine


- At a time 30 Please do not route the starter seconds or more.
- Please do not Bekasi empty with the engine is cold.
- Or if the engine is difficult to start if you stall out frequently, painting  
immediately  
Please check under the engine.

# Figure 2-1. DIRECTIONS FOR USE Automatic transmission

Please choose the shift position depending on the situation.

## ■ Ways of moving the shift lever

▶ Non-drive vehicles equipped with sport switch

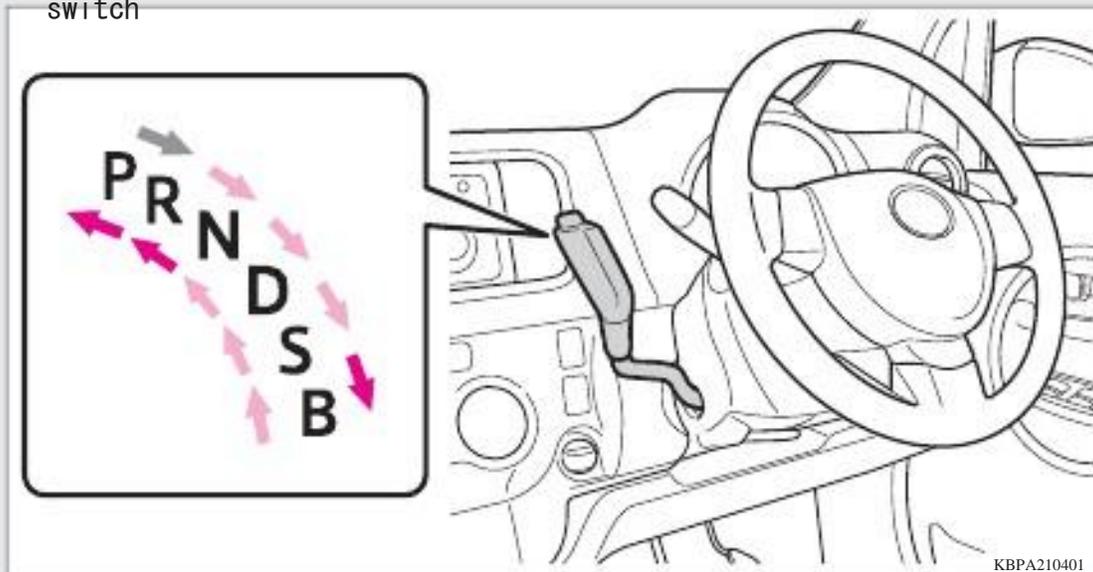

← The engine switch "ON" In the state of, stepped on the brake pedal  
You manipulate the shift lever and press the left button  
it.

← You manipulate the shift lever and press the  
button.

## ■ Intended use of the shift position


Shift position	Purpose
P	Engine start-up or parking
R	Recession
N	State power is not transmitted
D	※ normal driving
S	Hill traveling
B	Steep downhill run

※ In order to reduce the noise and improve fuel efficiency, is usually D Please use the.

Two

Luck  
Trans  
The  
Ru  
And  
I  
To

▶ Drive vehicles equipped with sport switch

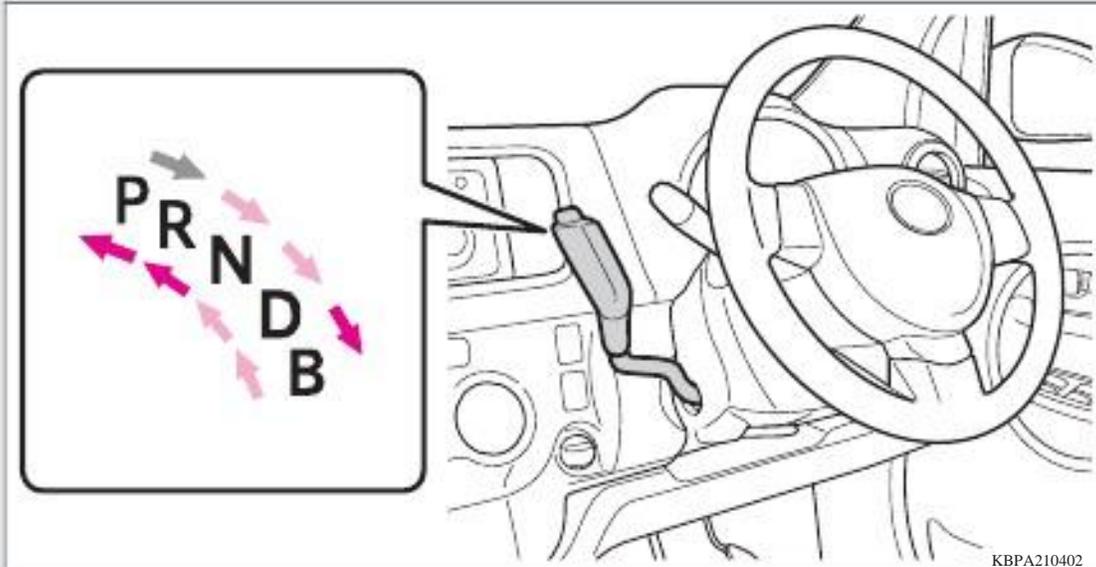

← The engine switch "ON" In the state of, stepped on the brake pedal  
 You manipulate the shift lever and press the left button  
 it.

← You manipulate the shift lever and press the  
 button.


■ Intended use of the shift position

Shift position	Purpose
P	Engine start-up or parking
R	Recession
N	State power is not transmitted
D	※ normal driving
B	Steep downhill run

※ In order to reduce the noise and improve fuel efficiency, is usually D Please use the.

### Sport drive (S/D) Switch \*

Is usually "OFF" (Indicator light in the meter is off) Please use in the state of.

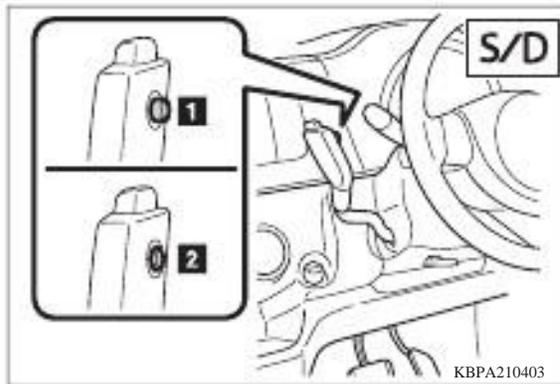

**1** S / D ON

**2** S / D OFF

"ON" When the indicator light in the meter  
Lights up.

Two

Luck  
Trans  
The  
Ru  
And  
I  
To

### Knowledge

- Sport drive (S/D) switch \* "ON" The time of the
  - In the uphill is less change in the number of engine revolutions, the traveling was smooth and crisp you can.
  - In light downhill engine braking can be obtained.
- Reverse warning buzzer
  - The shift lever R Add to the buzzer sounds and, R to inform the driver that the You.
- The shift lever P If you can not shift from
  - II. 293


### Warning

- In slippery surfaces

Of the accelerator operation and skid and spin steep, sudden change of engine brake power Please note that it can cause.

\* :Different equipment and optional equipment such as vehicle type

Figure 2-1. DIRECTIONS FOR  
USE  
Direction indicator

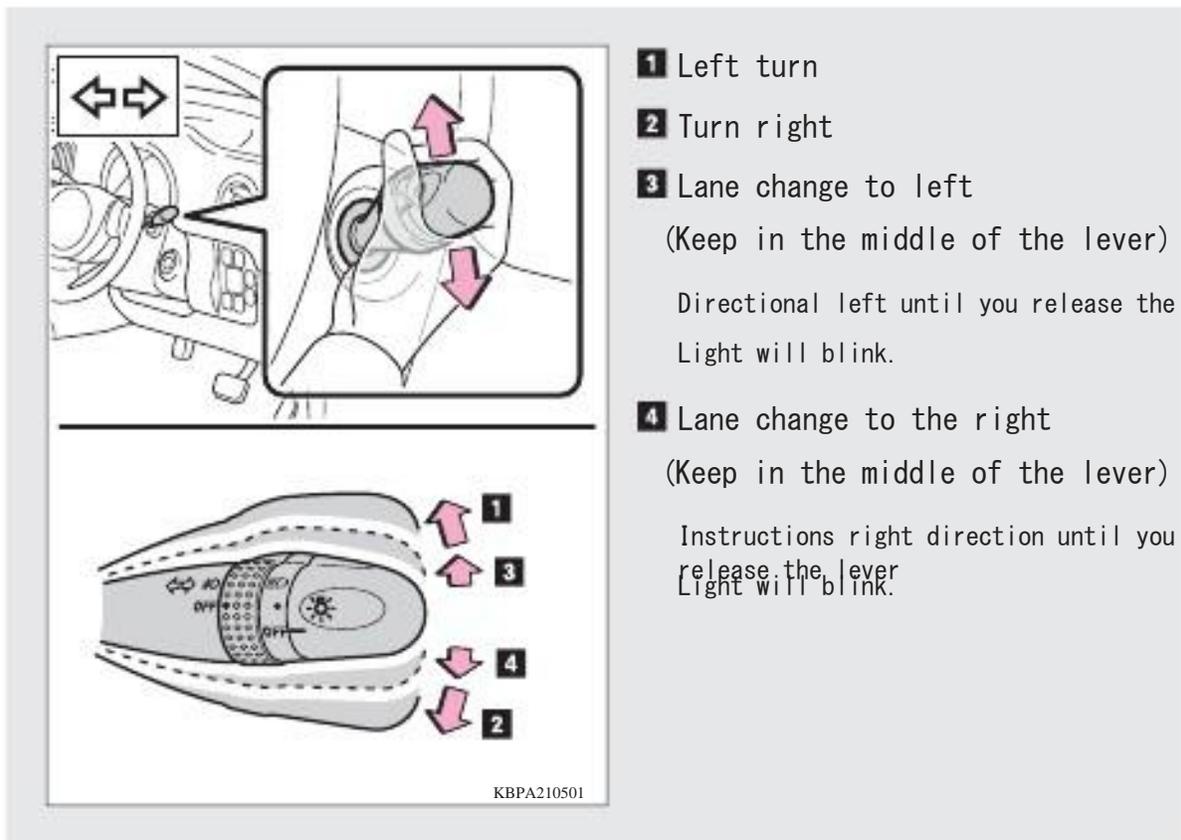

### Knowledge


#### ■ Operating condition

The engine switch "ON" When the

#### ■ When the indicator light flashing became abnormally fast

Please make sure the bulb does not light indication of direction.

Figure 2-1. DIRECTIONS FOR  
USE  
Parking brake

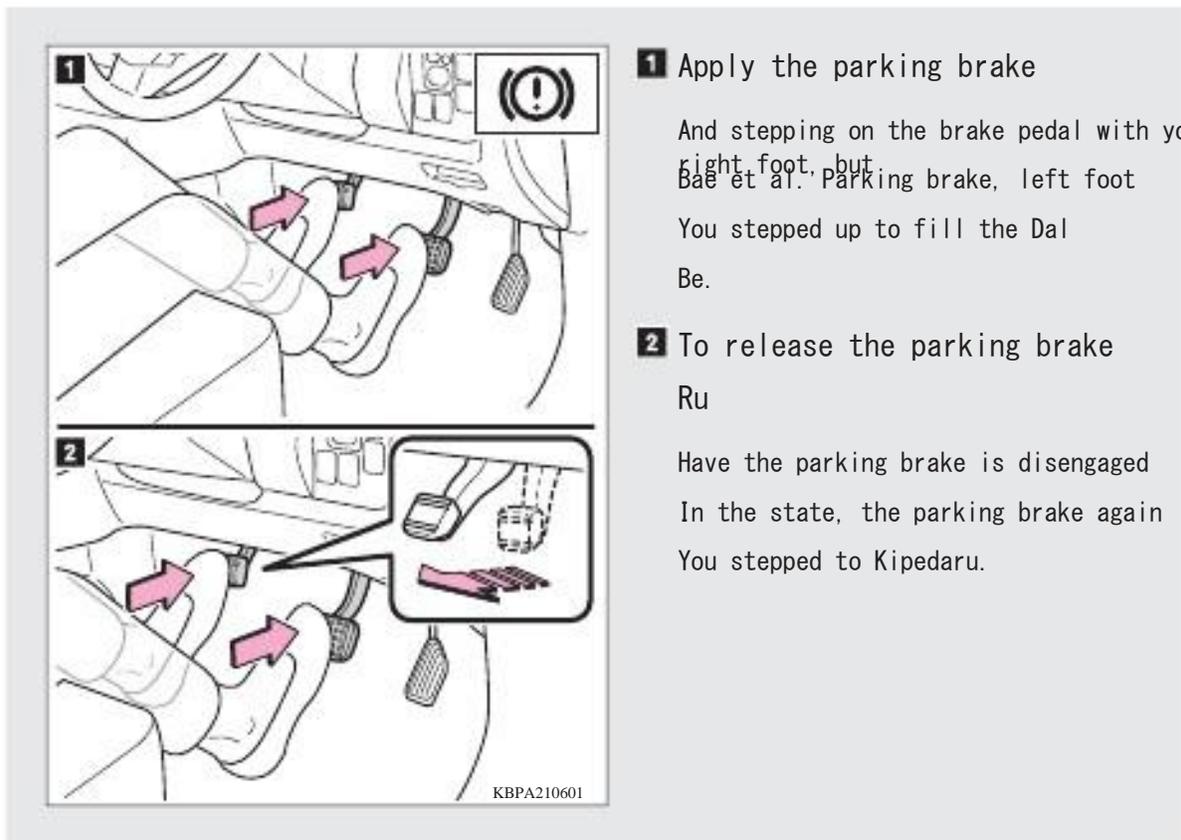

Two

Luck  
Trans  
The  
Ru  
And  
I  
To


Knowledge

- For information about using the parking brake in the winter  
Driving "when cold" (→ P. 162 Please refer to the description of).
- Not release the parking brake warning buzzer when traveling
  - II. 275

Caution

- Caution Before You Ride
- Please cancel the parking brake fully.
- When you run the parking brake left on it, brake parts to overheat, blade
- There is a fear becomes weak or effectiveness of the tree, or to wear quickly.

Figure 2-1. DIRECTIONS FOR  
USE  
Horn (horn instrument)

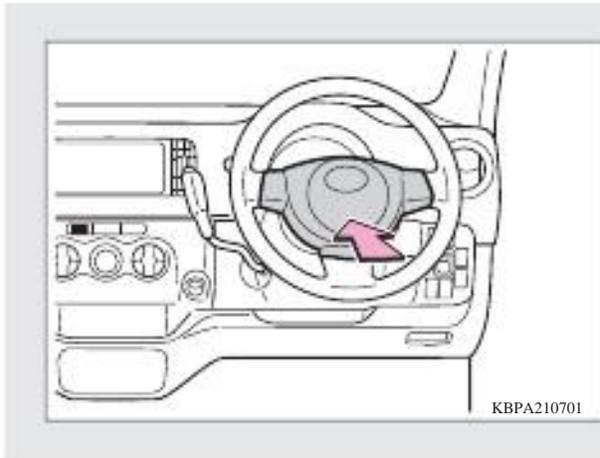

Of the handle  Press the peripheral  
Vinegar and horn will sound. portion


 Knowledge

- After you adjust the handle position

Please make sure that the handle is fixed securely.

You may horn does not become fixed is insufficient. (→ P. 59)

## Gauges

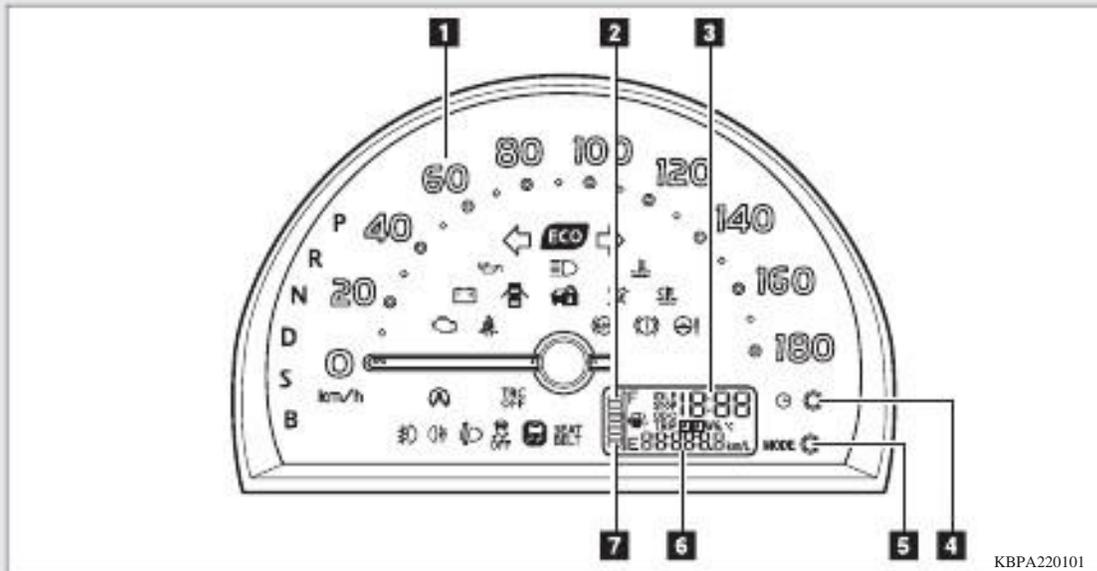

KBPA220101

When you turn on the light vehicle width, the meter will be lit.

**1** Speedometer

Shows the traveling speed of the vehicle.

**2** Fuel gauge

Shows the amount of fuel remaining.

**3** Watch

Displays the time.

**4** Time adjustment knob

To change the clock display. (→ P. 126)

**5** The display switching knob with fuel consumption

displays function  
Toggles the display of the display with fuel consumption display function.

**6** Display with fuel consumption display

function


**7** Fuel level warning light

□ II. 278

Two

Luck  
Trans  
The  
Ru  
And  
I  
To

### Change clock display

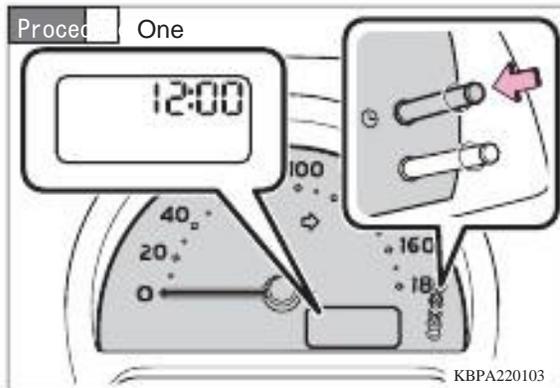

Time the adjustment knob One Press for more than seconds,  
The clock display to blink.  
Ten Seconds after the original table clock  
To return to the show.

**Procedure** Press the adjustment knob in time clock display flashes "Minute" To set.  
Five The display flashes when seconds after.

**Procedure** Press the adjustment knob in the time display flashes when "When" To set.  
Five Return to the original clock display seconds after.

### Knowledge

#### Hour for combined

Adjustment knob in time clock display flashes One More than four seconds, De be adjusted on the hour  
the trees.

- Zero ~ 29 Minute is rounded down.
- 30 ~ 59 Minutes are rounded up.
- (Example) One:00 ~ One:29 Case, the One:00 To, One:30 ~ One:59 Case, the Two:00 Will be.

#### When the desorption of the battery terminal


When attaching or removing the battery terminal, the clock One:00 Will be reset to.

Figure 2-2. View of the meter


## Warning light /

Will inform the status of the car in the indicator and warning light in the meter.

- ▶ Non-drive vehicles equipped with sport switch

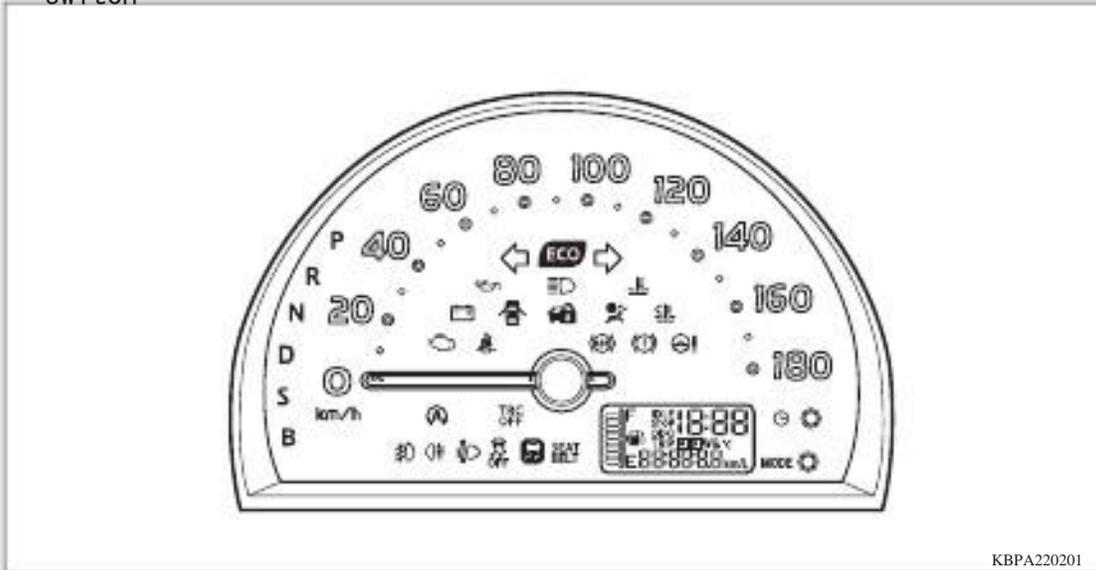

- ▶ Drive vehicles equipped with sport switch


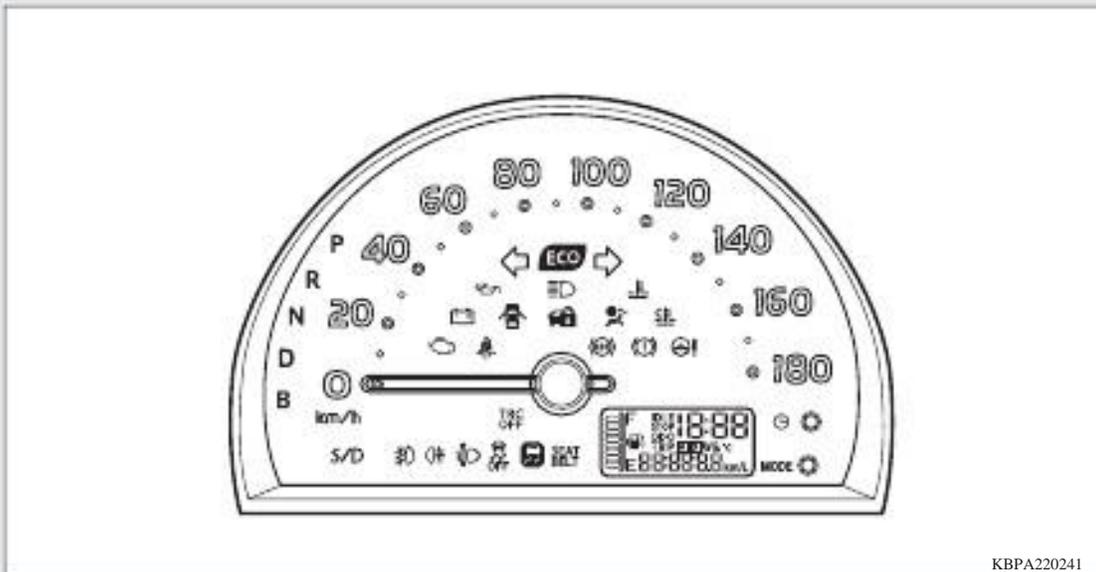


Two

Luck  
Trans  
The  
Ru  
And  
I  
To

## ■Indicator light

  Displays the status of the system is being operated.

	Direction indicator lights (→ P. 122)		TRC OFF Indicators * (→ P. 156)
	Headlight Indicator upward (→ P. 135)		Slip indicator light * (→ P. 156) (Flashing)
	Front fog light Indicator (→ P. 138)		Eco-driving indicator (→ P. 105)
	Rear fog light Indicators * (→ P. 138)		Low water temperature indicator
	Security indicator light * (→ P. 72)		Stop & Start Indicators * (→ P. 144)
	Seat belt Information Indicator light		Indicators sports drive * (→ P. 121)
	VSC OFF Indicators * (→ P. 157)		Shift position indicator (→ P. 119)

※ the engine switch for the operation confirmation "ON" Indicator lights when the, vanishing after a few seconds  
Lights. Remain lit when it is not lit, or if the risk of system malfunction There. Please check in by Toyota dealers.

\* :Different equipment and optional equipment such as vehicle type

■Warning light

Abnormality such as a system to warn of an emergency. (→ P. 275)



※ the engine switch for the operation confirmation"ON"Indicator lights when the, also after a few seconds  
 Will go out and start the engine. Remain lit when or if it is not lit  
 There is a risk of system failure. Please check in by Toyota dealers.

Knowledge

■Information about seat belt indicator light

The engine is switched"ON"When, about Ten Of passengers to the driver flashing seconds Prompts to wear seat belt.

- Engine stop switch is in"ON"When, when you open and close the door of either Will blink.
- The engine is switched even if you wear a seat belt"ON"Each time you point Will flash. Also, if you wear a seat belt while the indicator is flashing, about Ten Seconds,over the course Does not turn off.

\* :Different equipment and optional equipment such as vehicle type




**Warning**

- When the warning light does not illuminate the safety device ABS Or SRS The warning light on safety equipment such as air bags, the engine is switched "ON" If you leave lights not lit, or if even if you are correct when the accident Not operate, or extend to serious injury, or death may result in the worst case Be. Please check in by Toyota dealer immediately.

Figure 2-2. View of the meter

## Display with fuel consumption

Display with fuel consumption display function, you can display the following information.

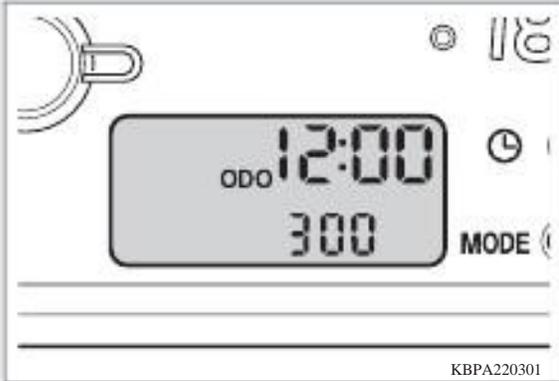


- Odometer
- Drip meter A, B
- Average gas mileage
- Idling time \*
- \* Gross time idling
- Outside temperature \*
- Eco-driving indicator Show / Hide

Two

Luck  
Trans  
The  
Ru  
And  
I  
To

### Display switch

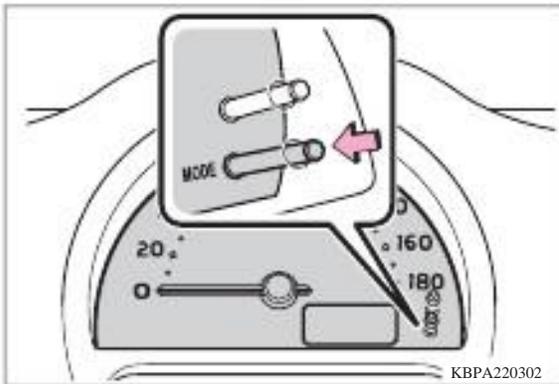

To toggle the display, the meter In Of Display Off Than Change Roh Block Press the Tooth Or Be.

- Odometer



Displays the total distance ran.

- Drip meter A




To display the distance traveled since the reset.

To reset the trip meter A Showing in the meter to Press and hold the knob display is switched.

\* :Different equipment and optional equipment such as vehicle type


●Drip meter B

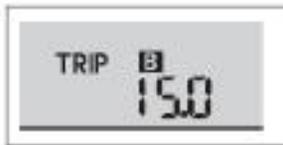

Drip meter A And separately, since the reset To display the distance traveled.

To reset the trip meter B Showing in the meter to Press and hold the knob display is switched.

●Average gas mileage

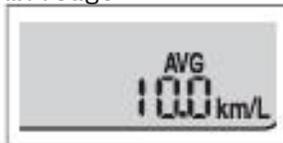

Shows the average fuel consumption since refueling.

- To reset the display in the display meter in average fuel economy

Press and hold the switch knob.

- Average fuel economy is displayed, please use as a reference.

●Idling time \*



The engine is switched "ON" From "LOCK" To the Idling time at stop (Stop & Start System Time the engine is stopped by the system) Displays the total.

●\* Gross time idling



Idling time since the reset (Stop & Start Stop the engine by the system time ) Displays the total.

To reset, the total idling time during the display Press and hold the knob in the meter display switch.

\* :Different equipment and optional equipment such as vehicle type

●Outside temperature \*



To display the outside temperature.  
 Outside temperature:- 30 °C ~ 50 °C  
 Displays between.

●Switching display / non-display of eco-driving indicator



Eco-driving indicator (→ P. 105)  
 To display the) You can choose whether or not to file.



Press and hold the knob in the meter display switching table

Hide / show will be switched.

**1** Display

**2** Hide

Two

Luck  
 Transl  
 The  
 Ru  
 And  
 I  
 To

\* :Different equipment and optional equipment such as vehicle type

 Knowledge

■ Automatic display of idle time for stop

- Even though it is displayed, such as odometer and average fuel consumption Stop & Start The system

At night the engine is stopped, idling time will be displayed automatically.

- When you press the knob in the meter display switch when it is displayed automatically, the display returns to.



● Display is switched when idling

In the meter when you are switching between Press and hold the knob display switching, eye Cancel the automatic display of the time stop mode ring Can be.

- 1** Automatic display
- 2** Automatic display release

■ For information about displaying outside temperature

- When the outside air temperature measurement is not done correctly "-°C will be displayed as "".

In the following cases, that may not be displayed outside the correct temperature, slow display switching there is not a failure.

- When you stop and, when the low speed
- (Such as a garage near the entrance, the tunnel) when the outside temperature changes rapidly

■ Battery-When the desorption of terminal


Battery-When attaching or removing the terminal, the following data will be reset.

- Drip meter A, B
- Average gas mileage
- Outside temperature \*
- \* Gross time idling

\* :Different equipment and optional equipment such as vehicle type

## 2-3. How to use the wipers to sew the Light Light switch

You can turn on the headlights, etc..

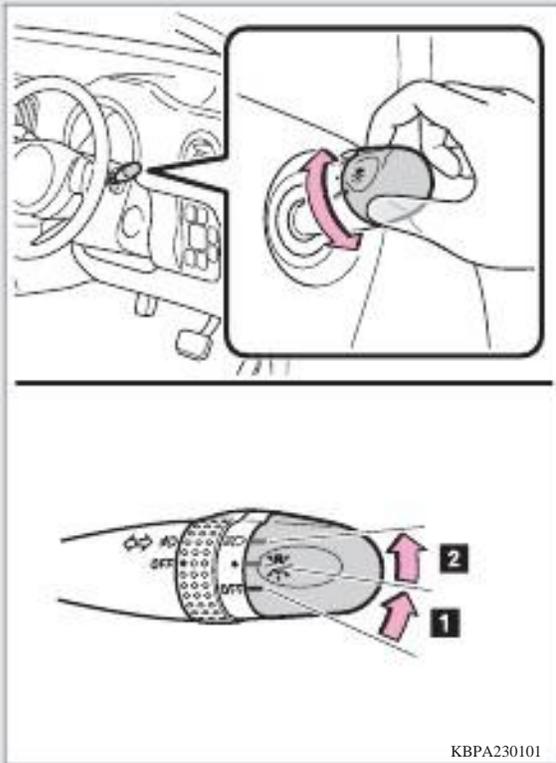


- 1** Light meter, light vehicle width  
tail light Numbers  
illuminate the target
- 2** The above-mentioned light and  
headlight

Two

Luck  
Trans  
The  
Ru  
And  
I  
To

To the high beam

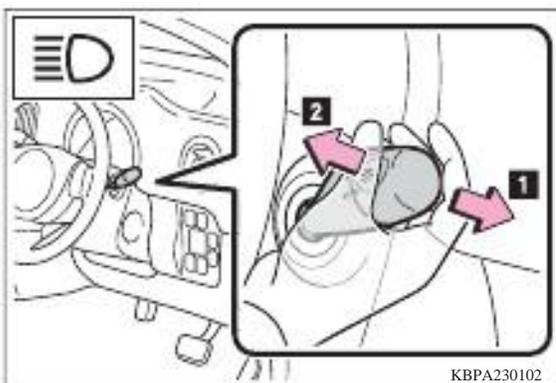


- 1** Light when lit, the lever forward  
Switch to high beam and press  
Low when the lever back to its original  
position  
to return to the beam.

- 2** Le Server — The Argument I Te I Ru Between  
the leaves Lee  
Turn on the beam

Even though the light is off, high beam  
Is Point Light Tooth Or Be. Le Server — The Is I The  
And,  
Striped back to low beam on or off  
Be.

Optical axis adjustment dial manually (vehicles equipped with halogen headlights)

According to the change in the attitude of the car by the number of passengers and luggage, such as the amount of Heddorai, you can adjust the optical axis of the city.

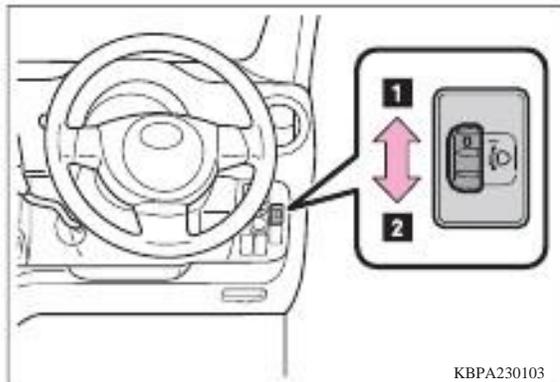

**1** Upward adjustment

**2** Downward adjustment

■ Estimated memory settings

Conditions of the occupant and luggage		Dial position	
Crew	Luggage	FF (Front-wheel drive)	4WD (Four Wheel drive)
Driver	No	Zero	Zero
Drivers and Front passenger seat occupant	No	Zero	Zero
All crew	No	Two	1.5
All crew	Luggage room Full time	3.5	Three
Driver	Luggage room Full time	4.5	Four

 Knowledge

■ Forgetting to turn off warning light buzzer

▶ Vehicles equipped with key-free

Light switch ● Or  Located at, the engine switch "LOCK" Alarm will sound when, and to open the door either.

▶ Vehicles equipped with non-key-free

Light switch ● Or  When in position, remove the key does not have Warning tone will be to open the door of either.

■ Auto-leveling system (vehicles equipped with discharge headlights)

So as not to be dazzling oncoming car and passers-by, such as the amount of appearance of cars by number of passengers, luggage. According to the change of bias, and then automatically adjust the optical axis of the headlight.

Two

Luck  
Trans  
The  
Ru  
And  
I  
To

 Caution


■ In order to prevent the battery up

Please do not write on for a prolonged period in the state to stop the engine.

## 2-3. How to use the wipers to see the Light Fog light switch \*


To ensure visibility in bad weather such as rain or fog.

### ■ Front fog light switch

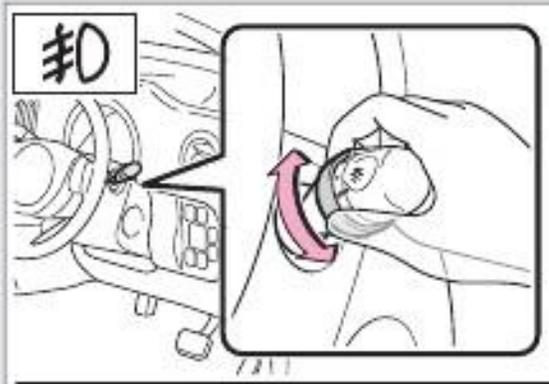


**1** Off

**2** Lighting

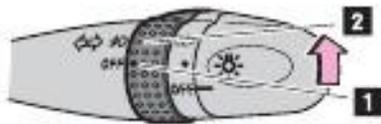

KBPA230201

### ■ Rear fog light switch

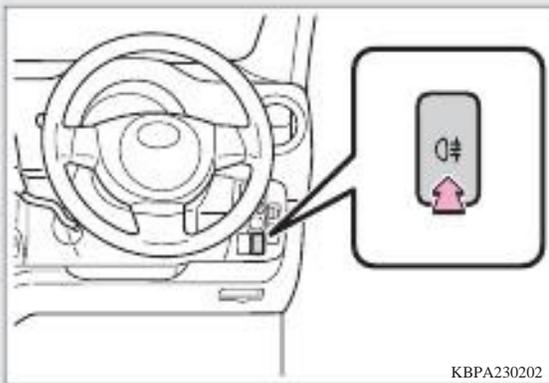

/ Off lights

KBPA230202

\* :Different equipment and optional equipment such as vehicle type

 Knowledge

## ■ Lighting conditions

- Front fog lights, can be used when the vehicle width light is lit.
- Rear fog light, can only be used when head lights are on.

## ■ For rear fog light

- When the rear fog light is on, lights up in orange indicator light in the meter  
The.


- To inform the presence of his car following the car when the visibility is poor, such as rain or fog  
Use the.

May be a nuisance to the car and the subsequent use except when visibility is poor.  
Except when necessary, please do not use.


Two

 Luck  
Trans  
The  
Ru  
And  
I  
To

## 2-3. How to use the wipers to sew the Light Wiper And Washer (Front)

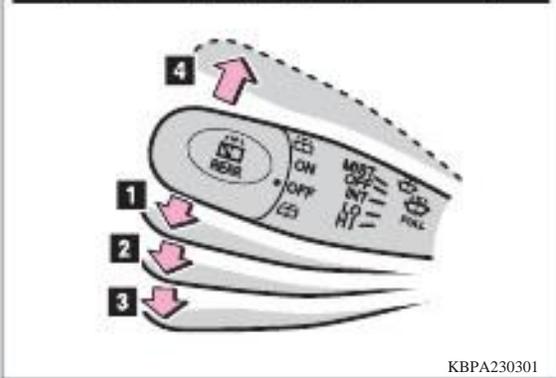

KBPA230301

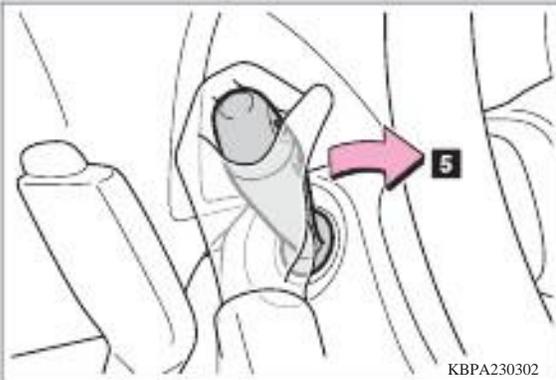

KBPA230302

- 1** Intermittent operation (INT)
- 2** Low speed operation (LO)
- 3** Fast-acting (HI)
- 4** One o'clock (operation MIST)
- 5** Out the washer fluid

Will operate in conjunction with the wiper.

 Knowledge

- Operating condition

The engine switch "ON" When the

- When the washer fluid is not de-

Washer fluid does not come out when I did not have enough amount of washer fluid, the Please inspect the means of file.

 Caution

- When glass windows are dry

Please do not use the wipers.  
May damage the glass.

- When the washer fluid is not de-

Please do not continue to operate the washer switch.  
May cause pump failure.


- When the nozzle is clogged

When the nozzle is clogged, please contact Toyota dealers.  
Please do not remove such as pin.  
May cause damage to the nozzle.

Two

Luck  
Trans  
The  
Ru  
And  
I  
To

## 2-3. How to use the wipers to see the Light Wiper And Washer (Rear) \*

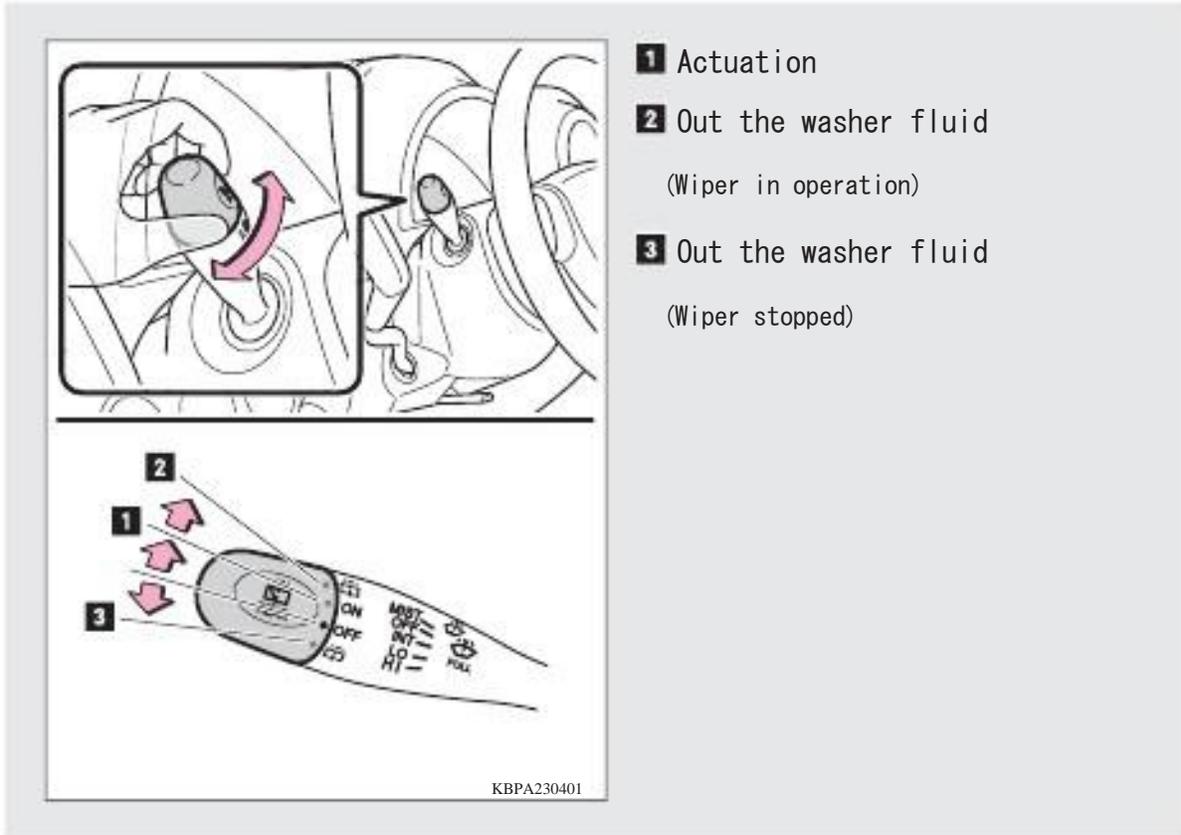

### Knowledge

#### ■ Operating condition

The engine switch "ON" When the

#### ■ When the washer fluid is not de-

Washer fluid does not come out when I did not have enough amount of washer fluid, the  
Please inspect the means of file.

\* :Different equipment and optional equipment such as vehicle type



Caution

■ When glass windows are dry

Please do not use the wipers.

May damage the glass.

■ When the washer fluid is not de-

Please do not continue to operate the washer switch.

May cause pump failure.

■ When the nozzle is clogged

When the nozzle is clogged, please contact Toyota dealers.

Please do not remove such as pin.

May cause damage to the nozzle.

Two

Luck  
Trans  
The  
Ru  
And  
I  
To


## Toyota Stop & Start System (SMART STOP) \*

Parked or temporary, such as red light intersection, improving fuel efficiency and idling noise.

For the reduction, without having to manipulate the engine switch, brake pedal

Is a system to stop and restart the engine by the operation of the.

### ■ Engine to stop

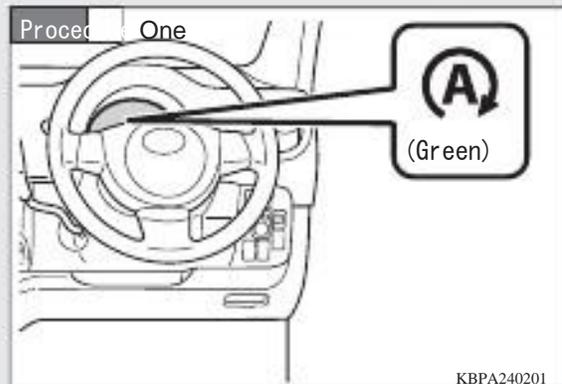

The shift lever D While driving,

picturesque

Stopping the engine that can become

And, Stop & Start Green indicator light

To light color

(→ P. 146)

Procedure And to stop stepping on the brake pedal the vehicle completely, engine Will automatically stop

Stop & Start Indicator light will remain lit in green.

### ■ Engine is restarted

When you release the foot from the brake pedal, the engine is

restarted


Stop & Start Indicator light will turn off.

To run for a while, and that can become the engine stopped again, Stop & Start

Indicator light is lit in green.

\* :Different equipment and optional equipment such as vehicle type

### Stop & Start To make the system non-operation

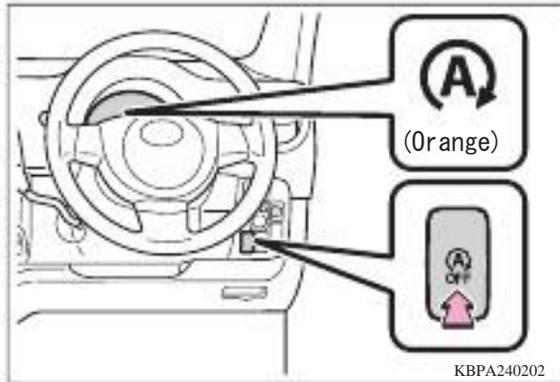

#### Stop & Start Non-operating system To press the switch

Stop & Start Indicator will light orange  
You.

When you press the switch again, ready  
To return to the state.

#### ■ Stop & Start When you press the cancel switch

- The engine is stopped Stop & Start When you press the cancel switch engine Application is restarted, Stop & Start Indicator light is lit in orange.
- Stop & Start When inactive, the system again Stop & Start Calibration When you press the switch cell applications, Stop & Start System to ready state Returns, the engine does not stop. Then when the vehicle is stopped (Stop & Start State system is ready Back to), the engine will stop.

### Hill start assist feature

Stop & Start After stopping the engine when starting the unit on the slope by the system. If you have until there is a driving force to restart the engine, release the Dealer or Authorized Workshop (Braking) The vehicle is to retreat to temporarily hold. Makes it easy to hill start to suppress the file. In the event of a driving force, the hydraulic brake had been held (braking) To release automatically.

Two

Luck  
Trans  
The  
Ru  
And  
I  
To

## Knowledge

### ■ Operating

#### condition

- When all of the following conditions are met, Stop & Start Indicator light is illuminated in green, painting Engine will be in a stopped state is possible.

- When the engine is fully warmed up
- When the oil is warm enough transmission
- When the engine coolant temperature is not too high
- After starting the engine for about 5km/h When you run for a while at least Time (such as temperature-charging) the battery condition is good.
- Driver's seat when the door is closed
- When you wear a seat belt the driver's seat
- When the hood is closed
- Outside temperature is about Zero °C Different from the outside air temperature are displayed in the (meter is greater than or equal to May be)
- Shift lever is D When the

-  Is OFF (When auto vehicles equipped with air conditioning)

- PTC \* When the heater is not working

- When a comfortable temperature

- System (Stop & Start Systems, electronic engine control, automatic Electronically controlled transmission, ABS, VSC, When the normal air conditioning)

- In certain circumstances, may take some time until the engine stopped state is possible The Lee.

- When the battery is discharged
- After exchange due to battery and disconnect the battery terminals
- Initial cooling (vehicles equipped with automatic air conditioning)

\* :Different equipment and optional equipment such as vehicle type

- Stop & Start When the indicator light turns green to the following conditions are met, the yen  
Stop the engine.
  - When you stop
  - When you are stepping on the brake pedal
  - When you're not stepping on the accelerator pedals, VSC \* If you are not working
- In the following situations, but may not stop the engine, it is not abnormal.
  - Pressing the brake pedal when the power is weak
  - When the gradient was stopped at steep
  - When the brake booster negative pressure was reduced
- For operation during engine stop
  - Such as when the confluence when the left turn and right, you want to prepare pre-departure engine is stopped, block Or Dealer or Authorized Workshop tread more strongly, Stop & Start Press the cancel switch let me restart the engine by.
  - The shift lever in the engine stop D From N or S B Even if you stop the engine Will continue to stop.  
However, the shift The lever N When you shift to other positions after painting Engine is restarted.
  - Refueling when the shift lever P To, the engine is switched LOCK Engine and then Please stop.

Two

 
Luck  
Transi  
The  
Ru  
And  
I  
To

\* :Different equipment and optional equipment such as vehicle type

■ Information on restarting the engine

- When you do either of the following to the engine is stopped, the engine automatically restarts


- When you release your foot off the brake pedal
- Depress and release the brake pedal when more strongly stepped on the accelerator pedal
- The shift lever R-P When set to
- The shift lever N Time after to, the other to shift position
- Stop & Start When you press the cancel switch

-  When you press the (vehicles equipped with automatic air conditioning)
-  (Vehicles equipped with manual air conditioning),  (vehicles equipped with automatic air conditioning)

(However, the vehicles equipped with automatic air conditioning, due to circumstances such as the outside temperature when you press May be until you restart the engine, time-consuming).

- When I opened the door the driver's seat
- Remove the driver's seat when the seat belt
- The engine is stopped, the next time while the engine may be restarted automatically
- Be. (Stop & Start After the indicator blinks green, then turns off)
- When the brake booster negative pressure was reduced
- When a large amount of battery discharge
- When the vehicle began to move in, such as slope
- Such as the warning light is lit, each electronic control system (engine, automatic electronically controlled transmission, ABS, VSC \*TRC \*, And air conditioners)
- Always occurs when
- When the cooling time, the temperature of the air outlet of air conditioning has increased (auto air conditioning vehicle-mounted)
- PTC \* When the heater has been activated
- Stop engine about Three When the minutes have elapsed

 \* :Different equipment and optional equipment such as vehicle type

- The engine is stopped Stop & Start Or system failure occurs, the starter  
When the battery replacement and comes to the end of its life, Stop & Start Indicators  
point to orange Flashes, the engine will restart automatically.
- In the following situations, you may shorten the time of engine stop.
  - The engine was shut down frequently in the state outside temperature is high, you  
are using the air conditioning (When auto vehicles equipped with air  
conditioning)
  - When a large electrical power consumption of  
goods and
  -  (Vehicles equipped with manual air conditioning),  (vehicles equipped with automatic  
air conditioning)

Press and air conditioning ON When you are in

- Audio (or, navigation system, etc.) a large volume of yen  
If the power consumption of the large size of the kidneys shut down, restart the  
engine when the power of audio  
is temporarily OFF You may be.
- When you restart the engine, it decreases the power supply voltage of the accessory  
socket  
Is, by appliances that you are using temporary power OFF There may be  
The Lee.

#### ■ Stop & Start Automatic restart of the system

Stop & Start The system Stop & Start Cancel switch to non-operation by  
Even if you, once the engine is switched "LOCK" Turn the lens to "START" Twice  
By vinegar, Stop & Start The system automatically returns to the ready state  
Be.

#### ■ When I opened the hood

If you open the bonnet to the engine is stopped, the engine will not restart  
automatically.  
Please let me start the engine with engine switch.

Two

Luck  
Transl  
The  
Ru  
And  
I  
To

■ For hill start assist feature

- Gradient is steep uphill, after hill start assist feature has been released, the vehicle is to retreat  
You may file. In places like this, or apply the parking brake,  
Please then starting to operate the brake pedal.
- Operates not only the slope, even in a flat place.
- By the operation of the auxiliary hill start function, but may be the next state, is abnormal  
There is no.
  - Gotae stepping on the brake pedal will change
  - Brake pedal to vibrate
  - Sound is generated from the brake

■ Stop & Start About system

Stop & Start The system will use a temporary stop at red lights and intersections, such  
For example, if you want to stop a long time, please stop the engine.

■ On warning buzzer

When they become the next engine is stopped, and at the same time warning buzzer Stop &  
Start Indicator light will blink fast in green.

- (Will continue to sound until the close the door) when the door is opened the driver's seat
- Navigate to the driver's seat to wear seat belts (driver's seat when you remove the seat belt  
Will continue to re)
- When the hood is opened

■ Stop & Start When the left indicator light flashes amber

When was time to replace the battery and starter, there are anomalies in the system or  
If there is a. Please check in by Toyota dealers.

■ For air conditioning of the engine is stopped

- Engine is stopped is turned off (wet cooling function, the job) Air conditioning, becomes the blast. Be. When the cell activates the air conditioning, or even step on the brake pedal strongly. Stop & Start Please let restart the engine, press the cancel switch The stomach.

-  When the transmitter is configured to auto air conditioning press, during the engine stop

May amount to stop the wind blowing or less. Engine is restarted

And air volume will return to automatic adjustment. (Vehicles equipped with automatic air conditioning)

■ When the window glass was cloudy in the engine stop

Further step on the brake pedal strongly, Stop & Start Press the cancel switch Please let Te restart the engine.

Vehicles equipped with manual air  Press to operate the air conditioner, blow conditioning and is

Mouth out  Switch to, vehicles equipped with automatic air conditioning is  The cloudy Press

Please take.

When the window glass fog up intermittently, Stop & Start Cancel switch

Press, Stop & Start Please then to non-operating system.

■ Idling time display and total idling time display

→ P. 131

■ When you replace the battery

Batteries are installed, Stop & Start The product is exclusively system.

Two

Luck  
Trans  
The  
Ru  
And  
I  
To



Warning

■ Stop & Start

- 

).

Be.

- 

).

-

-

-

 Warning

- 
- 
- The stomach.
- 
- Slope
- Is dangerous.
- 
- Parking brake

Two

Luck  
Trans  
The  
Ru  
And  
I  
To



### Caution

■ Stop & Start To operate the system properly

If any of the following Stop & Start You can cause the system is not working correctly  
Be. Please check in by Toyota dealers.

- When you are wearing a seat belt the driver's seat, seat belt driver's seat in the meter  
When the non-wear warning light is flashing
- Remove the seat belt when the driver's seat, seat belt driver's seat in the meter  
When the non-wear warning light does not blink
- Close the door when you are the driver's seat, also, half door warning light is lit in the meter  
Of room light and room light switch illuminates when the door is to position  
During installation
- The driver's seat when it opened the door, half door warning light in the meter is not illuminated, the  
Other room light is lit when the door of the room light switch position  
When you do not

To increase the driving safety and driving performance, the following equipment, depending on driving conditions, operates in its automatic. However, these devices are such that an auxiliary operation, please carefully without overconfidence.

■ABS(Anti-lock brake system)

Prevents the lock on the tire during braking on slippery road surfaces or when sudden braking, and  
Suppresses the lip.

■VSC(Vehicle Stability Control)\*

Reduce the skid when turning on slippery surfaces and steep steering operation, vehicle will contribute to the maintenance of posture.

■TRC(Traction Control) \*

Reduce the idling of the drive wheels during acceleration or when starting on slippery road surfaces, to ensure the driving force

■Brake Assist (VSC Vehicle-mounted)

Raises the greater the braking force, such as when a sudden braking.

■EPS(Electric Power Steering)


Using the electric motor assists the steering wheel.

■Hill start assist feature\*

To assist in the launch of slope, hydraulic brakes until there is a driving force between suppressed temporarily holding (braking), the vehicle is to retreat, hill start makes it easy to. (→ P. 145)

\* :Different equipment and optional equipment such as vehicle type

VSC, TRC When you are working is

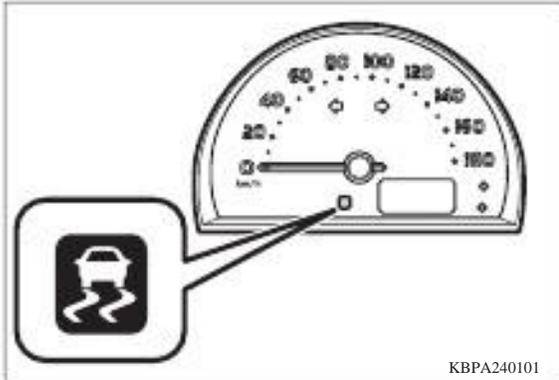


And the vehicle was likely to slip  
Trees, driving Motion Wheel Is Sky  
Translocation Tooth Was And I Is  
VSC, TRC In order to view the operation of  
the  
Slip indicator light will blink.

TRC Or VSC To stop a

When you escape from, such as mud or snow, TRC Or VSC Is running  
And, may be difficult to escape even stepped on the accelerator pedal. This  
Such as when, VSC OFF Press the switch, TRC Or VSC To stop the  
Makes it easier to escape by.

■ TRC To stop a

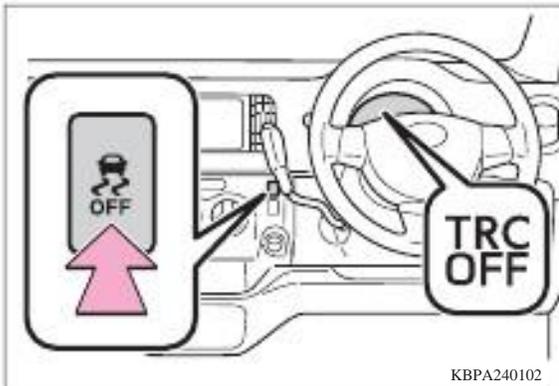


TRC Press the switch to stop a  
The.

TRC OFF Indicator light is lit.

When you press the switch again, the system  
Return to the ready state.

## ■TRC And VSC To stop a

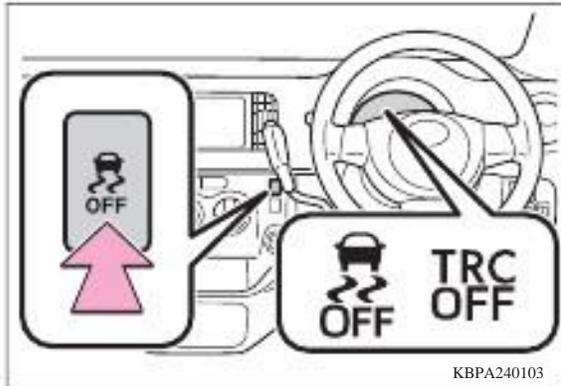

TRC And VSC To stop, stop  
Press the switch when the car, Three Seconds  
or more  
Holds.

TRC OFF And indicator lights, VSC OFF Display  
Light is lit.

When you press the switch again, the system  
Return to the ready state.

## Knowledge

### ■ABS, Brake Assist, VSC, TRC Operating sound and vibration

- And when the engine is started and immediately after launch, when I stepped on the brakes repeatedly, engine  
There is a sound that is heard from the operating room, this is not a malfunction.

- Upon operation of the systems listed above, you may encounter one or more of the following symptoms  
However, this is not a malfunction.

- Feel a vibration in the handle body and
- Sound can be heard even after the motor  
vehicle stop
- ABS During operation, the brake pedal is wiggle
- ABS After the operation, the brake pedal is a little back  
into the.

### ■EPS Operating sound of the motor

When the operation was carried out handle, the sound of the motor ("Vienna" That sound)  
Hear may be, is not abnormal.

### ■EPS When the effect of falls

Turn the handle and hold long or very low speed while driving parked, overheating  
In order to avoid EPS Handle will be to feel the effects of heavy falls. Resona  
If you, or to refrain from operating the handle, stop the car, please turn off the  
engine  
Ten Return to its original state in minutes.

### ■TRC Or VSC For automatic return

TRC Or VSC Even if you stop working, and automatically re-started the engine and TRC  
And VSC Will return to the ready state.

Two

Luck  
Trans  
The  
Ru  
And  
I  
To

 Knowledge

- TRC OFF Limit the operation of the

TRC If you are only stopping the operation is, the higher the vehicle speed TRC Will resume operation. However, the TRC And VSC If you stop the operation of, the re-activated by the vehicle speed opening.

 Warning

- ABS If you can not demonstrate the effect of

- When they exceed the limits of grip performance of tires
- During high-speed driving on slippery road surfaces and road surface was wet with rain, hydroplaning phenomenon occurs when

- ABS Is to operate, but when the braking distance is longer than normal

ABS Is not a device to shorten the braking distance. In the following situations, the speed is always Please take a safe distance and the conservative predecessors.

- When you are traveling the road or snow road mud, gravel
- When you are equipped with tire chains
- Such as the seams of the road when exceeded, a step
- When you are traveling a rough road, such as uneven and cobbled road surface

- TRC If you can not demonstrate the effect of

On slippery surfaces, the TRC Also has been working, stability and driving force is the direction of the vehicle You may not be obtained. And, in circumstances such as losing the stability of the vehicle and the driving force Please drive carefully to the country.

- When the slip indicator light is flashing

VSC We advise that there is in operation. Please try to always drive safely. Reckless driving is dangerous has lead to an unexpected accident. Indicator light is flashing. Please drive carefully, especially.

**Warning**

- When the slip indicator light is lit

VSC System, TRC There is a risk of abnormality in the system. Toyota sales immediately Please for inspection at the shop.

- TRC Or VSC The OFF When you are

TRC Or VSC Of the vehicle and the driving force to control the output of the engine brake and automatically

is a system that tries to ensure the directional

stability. Therefore, except when necessary TRC Function, VSC Do not operate the function in a

stopped state

Please. TRC Function and VSC When you activate the feature in a stopped state, the

response to road conditions

At a rate that is the same, please try the operation

- When replacing the tires

Four With the specified size with wheels, the same manufacturer, brand, tread groove pattern, (use the tire air pressure and then the) pattern, was recommended. (→ P. 310)

When installed in a different tire, ABS, VSC Will not operate properly.

When you replace the wheel, please consult your tire dealer or Toyota.

Two

Luck  
Trans  
The  
Ru  
And  
I  
To

In order to drive safe and comfortable, when the luggage is to gain the following:  
Please observe.

- Luggage in the luggage room to gain as much as possible
  - Check that luggage placed in a safe position.
  - Is biased so as not to gain weight in order to maintain balance while driving.
  - In order to prevent the worsening fuel consumption, so there is no unnecessary baggage piled
- To.



Warning

- You must not loaded

Is dangerous and may gain ignite something like the following.

- Fuel container that contains the
- Spray can

- When the luggage is to gain

- In the following locations: Please do not carry a baggage.

If you do not imperative talisman, was not able to properly manipulate the brake and accelerator pedal, see, and interrupted the sight of luggage, or by collision to the passenger baggage, an unexpected accident there is a risk.

- Feet, the driver's seat
- (When stacking luggage) front passenger seat and rear seats
- Instrument panel
- Dashboard
- The glove compartment lid with no /

- Tray Laden with luggage in the room, please let all be strong and stable.

And not stable, when thrown into sudden braking or an accident, hurt the crew late  
There is.

**Warning**

- Please do not get pushed onto the back seat is higher than what the luggage room.

During sudden braking or an accident, thrown out, you may damage the crew.

- Rear-seat backrest folded sheet, when the long dimension luggage gain can be

Front seat backrest behind the true Please do not just piled up.

- Please do not put people in the luggage room. For the crew are not designed.

Crew, is wear a seat belt properly, please let me sit in the seat.

If you do not observe imperative, in the event of a collision or sudden braking, or extends to serious injuries, the most can lead to death if of evil.

- About how to apply the load-weight of luggage

- Please do not overload your luggage.

- Please do not apply to a non-uniform load.

Not only put a strain on the tire, it decreases the brake control to operate and handle.

Leads to an unexpected accident, Lee extends to injury or serious, the worst case lead to death.

Two

Luck  
Transl  
The  
Ru  
And  
I  
To

In preparation for cold weather, apply the total system on properly treated, such as the preparation and inspection Please to drive appropriately.

#### ■Preparing for Winter

- Please use the following: those suitable for the outside air temperature, respectively.

- Engine oil
- Cooling water
- Washer fluid

- Please inspect the amount and specific gravity of battery fluid.

- Winter tires (Four Available) for the front tire (tire chains) and the wheel

, Please.

Tires Four Tire chains, those of the specified size with the same brand

Application, please provide the same thing it was in the tire

For (tire: □ Π . 219)

#### ■Before operating

Please do the following depending on the situation.

- When the doors and windshield wiper was frozen or moves without attempt to force open

Figure melt the ice to make a lukewarm water, such as, plenty of liquids immediately

- Snow piled up in the air intake before the front window glass

Please wipe. When, in order to successfully operate the air conditioner fan, the snow Please remove.

- When you are around the foot with ice, please remove the ice.

- When snow and ice with fender parts and brake equipment, remove Please except Lee.

### ■When driving

Start slowly, please traveling at modest speeds.

Is not high idle speed (especially when cold) immediately after starting the engine

Lee, creep (the car starts moving) phenomenon becomes stronger. Bree certainly

### ■When parking

Starting stopping on a tree, please drive carefully when the stop.

Applying the parking brake, a brake device can be released by freezing

There is no more fear. A parking brake is not applied, Schiff

Trevor P Into park, please stop the wheel.

Two

Luck  
Trans  
The  
Ru  
And  
I  
To



### Knowledge

#### ■For wiper blades for cold regions

●Wiper blades for cold regions to be used for snow period in order to prevent the snow from adhering to.

There are covered with rubber to metal parts. Blade of each vehicle specified in the Toyota dealers. Please buy the.

●When high-speed running, the call from wiper blades wipe the glass is hardly normal

There is a capital. In that case, please drop the speed.

#### ■About tire chain

For information on handling and removal of the mounting Follow the instructions below Bloom.

- Where you can safely do work
- Before Two Mounted on the wheel
- Follow the instruction manual that comes with the tire chain
- After installing the 0.5 ~ 1.0 km After traveling to do a re-tightening



### Warning

#### ■ Warning when installing winter tires

Please observe the following.

If you do not observe imperative, control of the vehicle is disabled and Oyo in serious injury or, it may lead to death in the worst case.

- To use the tire of a given size
- Air pressure is adjusted to the recommended values
- Do not travel at speeds exceeding the speed limit or the maximum allowable speed of your winter tires become

#### ■ Warning when installing tire chains

Please observe the following.

If you do not observe imperative, to not be able to safely drive a car, one in an unexpected accident than long, serious or lasting injury, can lead to death in the worst case.

- Or, the speed limit stipulated in the chain was attached 30 km/h Either low  
Not traveling at speeds that exceed the
- Avoid <sup>more</sup> uneven road surface and holes
- Avoid abrupt steering, the brakes
- Prevent losing control of the car to slow down enough in front entrance of the curve

#### ■ Warning when parking

When you park without the parking brake, please be sure to lock the wheel. Wheel  
If you do not stop the dangerous may lead to an unexpected accident car movement.

**Caution****■ About the use of tire chains**

We recommend using genuine Toyota tire chains.

Tire chains in the non-genuine Toyota, you can use, upon the body, and chopsticks  
Some might hinder the line.

For more information, please contact your Toyota  
dealer.

**■ When you remove the ice attached to the front window glass**

Please do not hit straw.

There is a risk (side car) is divided inside of the window glass.

Two

Luck  
Trans  
The  
Ru  
And  
I  
To



# Using the equipment room **Three**

## e

Figure 3-1. Use of air conditioners, Defogger

Who has	
Auto air conditioning	168 .....
Manual air conditioning	176 .....
Rear window Defogger (Tri cloudy)	182 .....
Front wiper Deaisa	183 .....

Figure 3-2. Using Audio

Type of audio (Navigation Vehicles equipped with non-system)	184 .....
Using the radio	186 .....
CD Using the Player	188 .....
In order to listen comfortably	193 .....
Antenna	194 .....

Figure 3-3. How to put the interior light

List of Interior light	195 .....
- Personal Light	196 .....
- Room Light	196 .....

3-4. Use of the equipment storage


List of storage equipment	197 .....
- Bottle holder	200 .....
- Lower center box (With cup holder)	201 .....
- Armrest pocket	202 .....
- Open tray	203 .....
- Passenger Seat Under-tray	204 .....
- Deck side pocket	204 .....

3-5. Use of equipment or other house

Sun visor	205 .....
Vanity mirror	206 .....
Accessory socket	207 .....
Armrest	208 .....
Shopping hook	209 .....
Floor mat	210 .....

# Figure 3-1. Using the air conditioner Defogga Auto air conditioning \*

Adjust the automatic vents and airflow according to the set temperature.

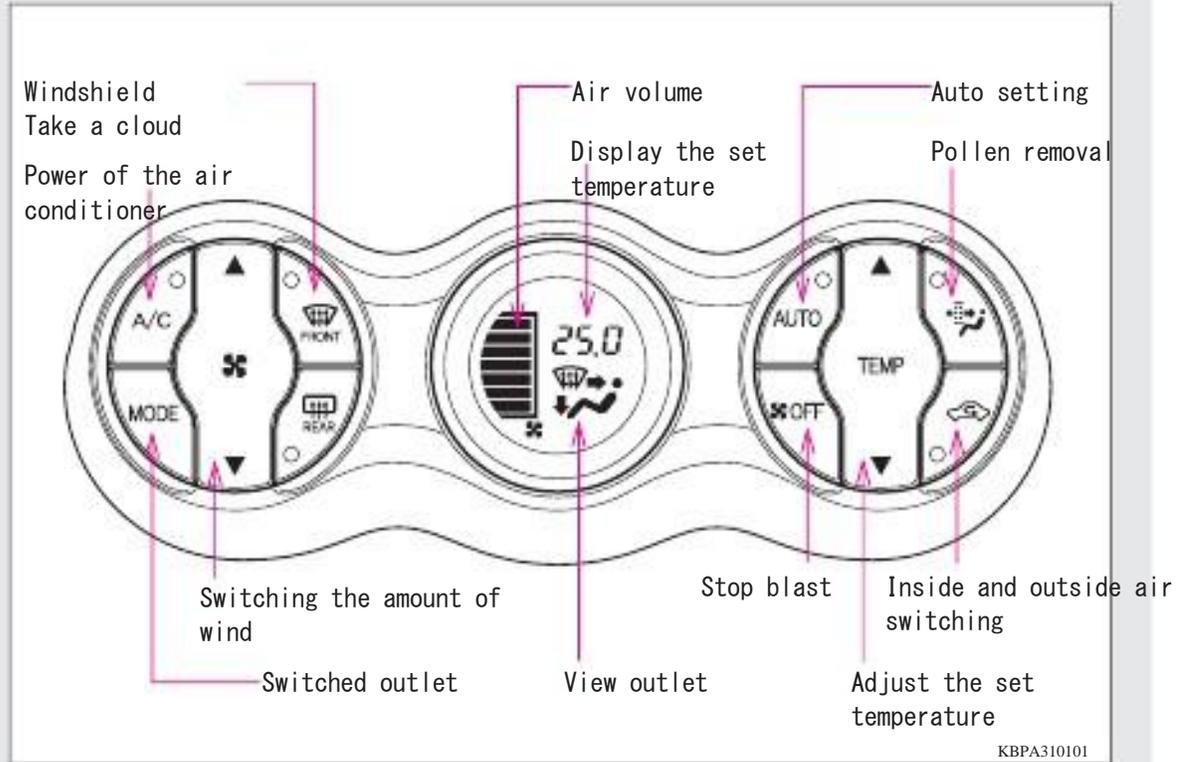

## When you use the auto setting

Procedure One Pressing.

Outlet and airflow will be adjusted automatically.

Procedure Two When raising the temperature setting Of ▲ When lowering, a is ▼ Pressing.

Procedure Three Pressing.

 
Each time you press the button of the air conditioner ON-OFF Is switched.

\* :Different equipment and optional equipment such as vehicle type

When used with your favorite

settings


- Of air conditioning ON-OFF To switch between the



Pressing.

Each time you press the button of the air conditioner ON-OFF Is switched.

 - To change the set temperature



When raising the temperature of ▲ When lowering, a is ▼ Pressing.

- To change the amount of wind



Of ▲ Or (increase) ▼ Press the (down).

Air volume can be adjusted in seven levels.

To stop the air blowing




Pressing.

- To switch between the outlet is



Pressing.

Blowing mouth is switched each time the button is pressed. Display the status of the following outlets

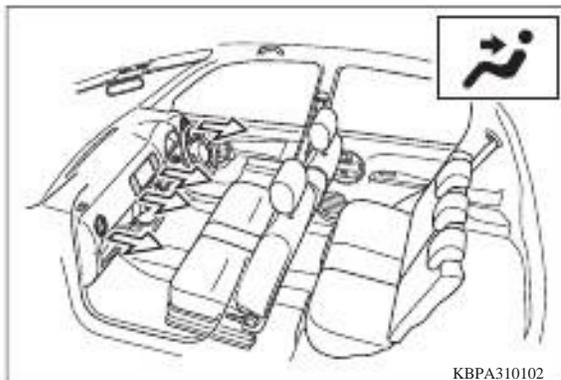


Blast the upper body

KBPA310102


Three

Room  
In  
Instru  
Remark  
Of  
Use  
I  
More

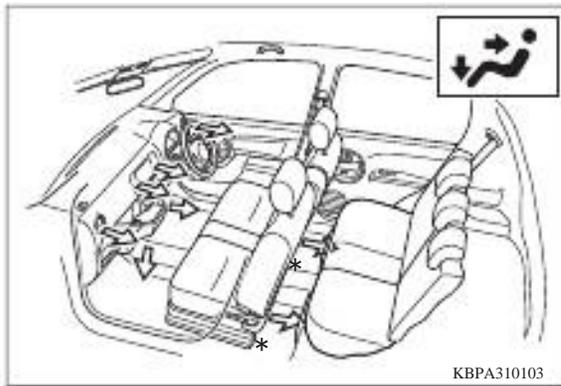


Blast at the feet and upper body

\*: Only cold car specifications

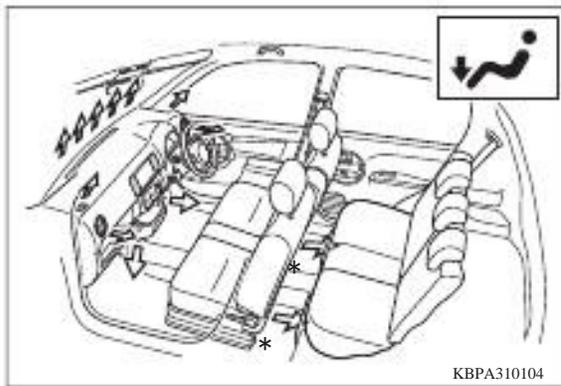

Blast at the feet

\*: Only cold car specifications

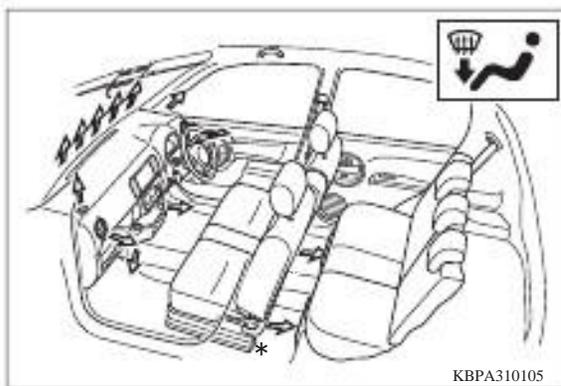

Take a glass blower at the feet of cloudy

\*: Only cold car specifications

■ To switch the air circulation in the outside air introduction




Pressing.

Each time you press the button, the air circulation inside air introduction will be switched.

When selecting the circulation shy, work lights display will be lit.

To take the front window glass is cloudy

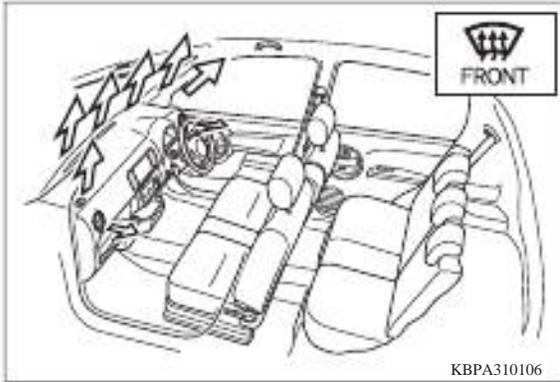

Pressing.

Switches to the introduction of outside air, air-conditioned self-dynamically ON will be.

Once again take haze



Press the

And return to the previous mode.

To use a pollen removal mode



Pressing.

Switches to shy circulation, remove the pollen to blast the upper body. Usually after about 3 minutes

(When the outside temperature is low After Return to the previous mode by pressing approximately one minute)




To cancel the operation in the middle, again Pressing.

Three

Room  
In  
Instr  
Remark  
Of  
Use  
I  
More


Opening and closing of the mouth and blowing of the wind direction adjustment

► Outlet center

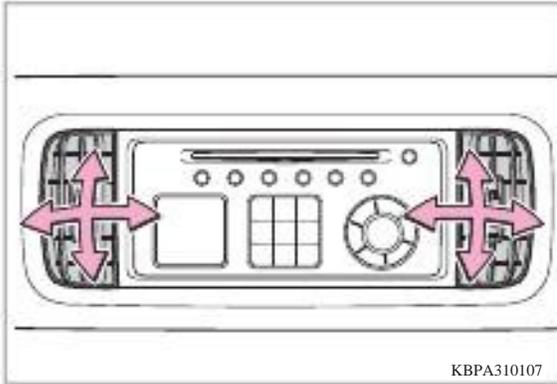


Adjustment of the wind direction

► Left and right outlet

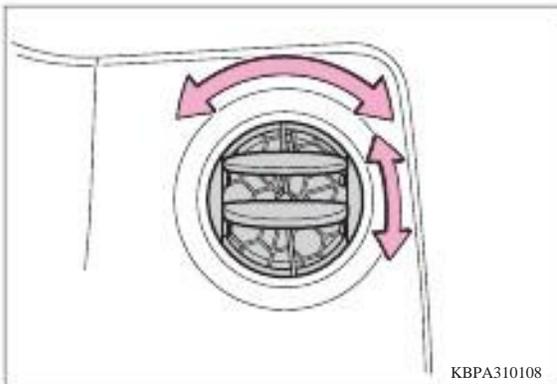

Adjustment of the wind direction

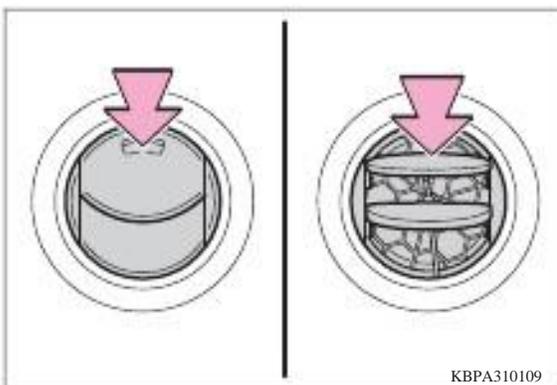

Opening and closing of the outlet

 Knowledge

### ■ Operation of the Auto

You may want to control as follows. If you want to remove the control, of your choice Please use the settings.

-  Blower stops short time after you press the

- Heating time, send upwards towards the cold air

### ■ Circulation shy

- In tunnels or in traffic jams, etc., and put in the car when you do not want dirty air cold early  
If you want to switch when heating air inside and outside, want to improve their cooling effect when the outside air temperature is high  
It is effective to change the switch to circulation shy
- Long, you may use the circulation shy clouded glass.

### ■ For details on changing the air inside and outside

Due to the set temperature and room temperature, air circulation or switch to the introduction shy automatically

### ■ If there is a clouded glass of the front window

May switch to the introduction by the temperature of the air inside and outside air automatically.

### ■ When the outside temperature drops to near 0 °C



You may air conditioner does not operate even when the press.

Three

Room  
In  
Instr  
Remark  
Of  
Use  
I  
More

## Knowledge

### ■ For pollen removal mode

When the outside temperature is low, you may want to control as follows.

- Circulation does not switch to shy
- Power of the air conditioner automatically enters the
- Does not switch to the upper body blast

You may be cloudy and glass to use when humidity is very high. At that time,



Please press.

Pollen removal mode OFF Even when the wind has passed through the filter clean will be blast

### ■ The outlet When set to

Balloon for the purpose of Zukansokunetsu, depending on the temperature setting is sent to the foot. Will be warmed up from the wind blowing wind will be sent to the

### ■ About the smell of air conditioning

- While using air conditioning, a variety of indoor and outdoor car smell is taken into the air conditioning equipment.

By blends are, you might smell from the mouth to the wind blowing

Be.

- In order to suppress the odor that occurs when starting air conditioner, when parking the tail to the introduction of outside air It is recommended that network.

- In order to suppress the odor that occurs when starting air conditioner, when used in the auto setting Immediately after the start air conditioning, you may blast to stop for

### ■ For temperature display

When the maximum cooling"LO", And maximum heating"HI"Will be displayed.

 Knowledge

■ PTC About Heater (cold car specifications)

To warm up the engine from starting the engine, auxiliary heater and heating in addition to normal

The.

If you meet all of the following conditions, automatically PTC Heater will be activated.

- When the engine is cold
- At low ambient temperatures
- When the computer is deemed necessary by the rapid heating

Operation will stop automatically when the engine is warm.

 Warning

■ In order to prevent fogging of the front window glass

When the set temperature is operated in a low humidity when the air conditioning is very high,



Please do not press. Seen outside of the glass is cloudy with the temperature difference between air and glass. May interfere with the world.

 Caution


■ In order to prevent the battery up

Please do not use a long time when the engine is stopped.

Three

Room  
In  
Instru  
Remark  
Of  
Use  
I  
More

## Manual air conditioning \*

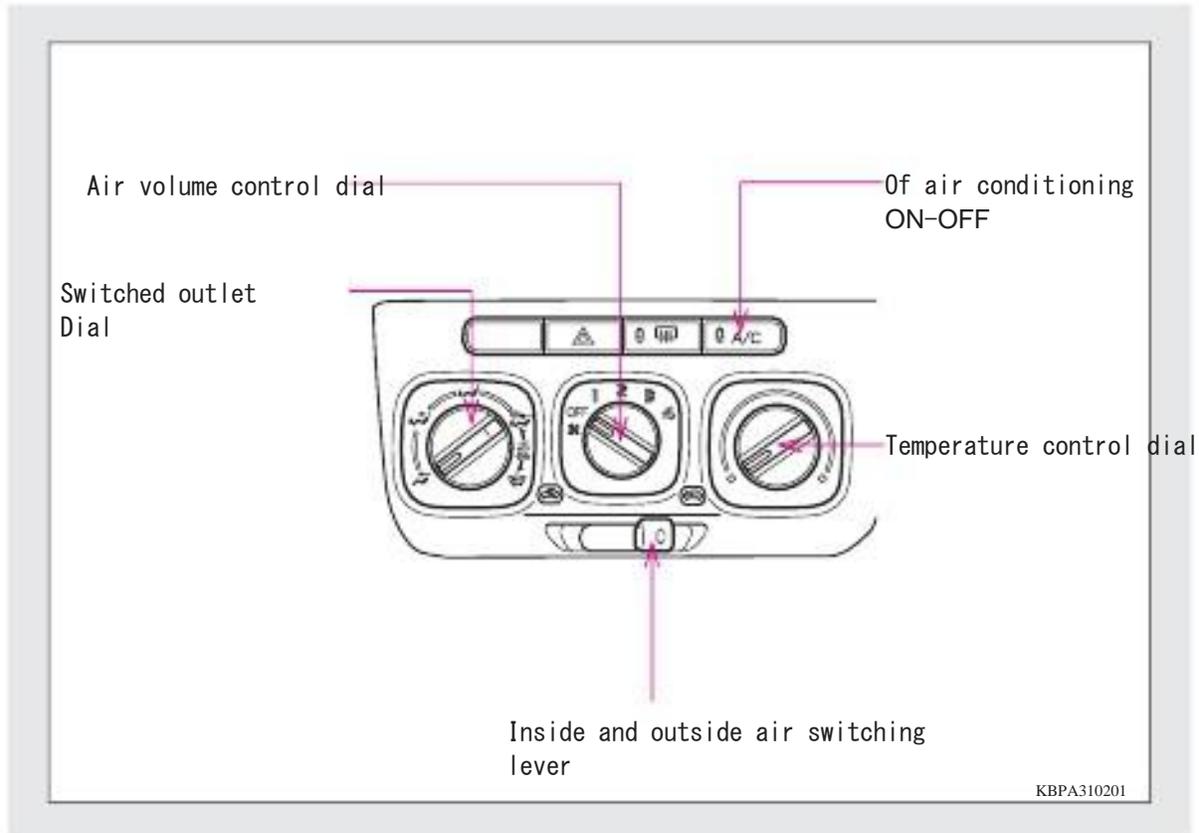

### Setting the air

conditioner

#### ■ To change the temperature

Turn to the (cold) or left (Dan) temperature control dial to the right

 If you have not been pressed can be used in the blast or heating.

#### ■ To change the amount of

wind

To turn (down) or left (increase) in air volume


adjustment dial to the right

To stop the blower is a dial OFF Adjust the position of the


\* :Different equipment and optional equipment such as vehicle type

■ To switch between the outlet is

Turn the dial to select the switching outlet outlet

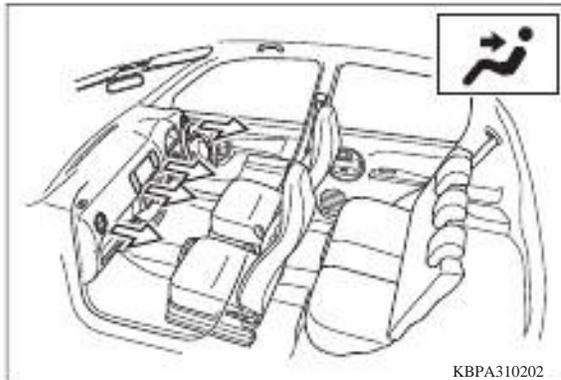


Blast the upper body

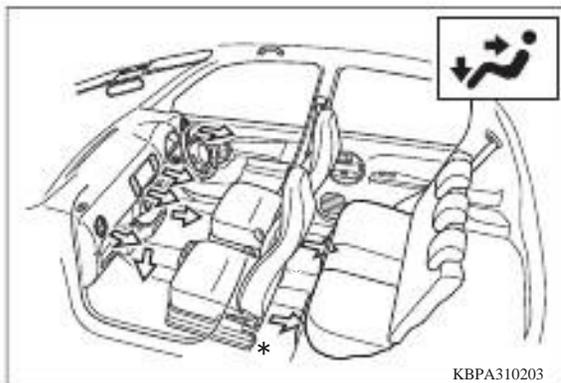

Blast at the feet and upper body

\*: Only cold car specifications

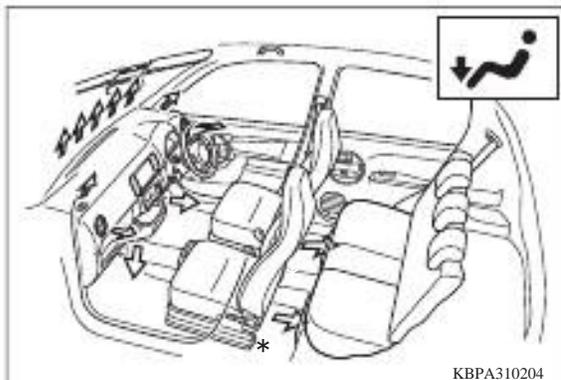


Blast at the feet

\*: Only cold car specifications


Three

Room  
In  
Instr  
Remark  
Of  
Use  
I  
More

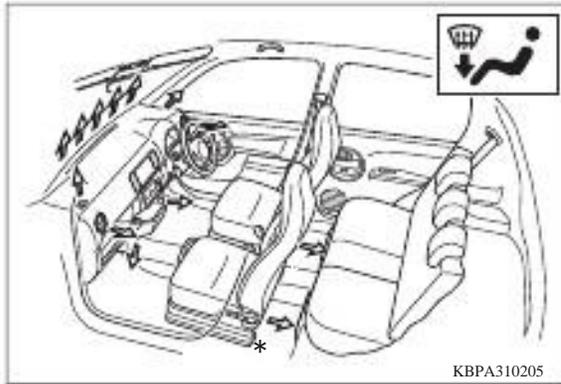

Take a glass blower at the feet of cloudy

\*: Only cold car specifications

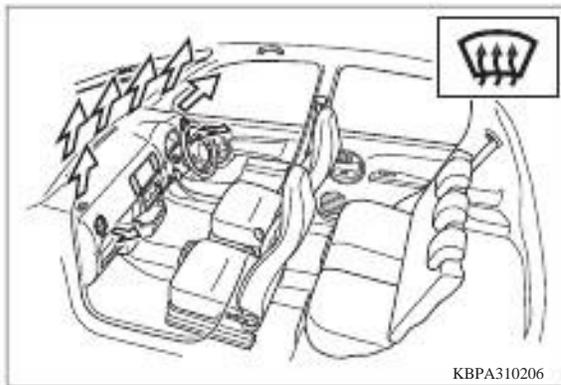

Fogging of the glass to take



Press the air conditioning ON To

Cloudy early then can take.


■ To switch the air circulation in the outside

air introduction

To (circulation shy) or left (introduction of outside air) inside and outside air switching lever right

Opening and closing of the mouth and blowing of the wind direction adjustment


▶ Outlet center

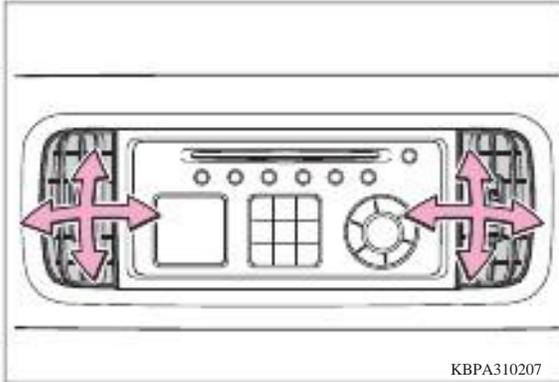

Adjustment of the wind direction


KBPA310207

▶ Left and right outlet

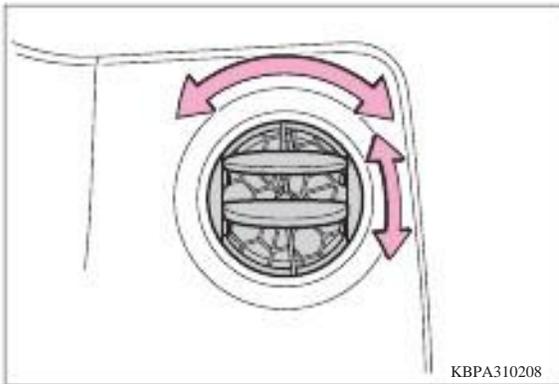

Adjustment of the wind direction

KBPA310208

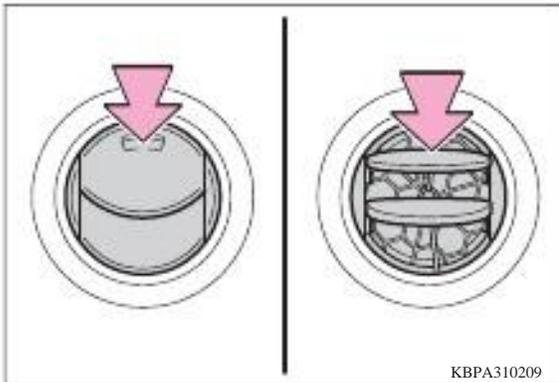

Opening and closing of the outlet

KBPA310209

Three

 
Room  
In  
Instru  
Remark  
Of  
Use  
I  
More

 Knowledge

■ Circulation shy

- In tunnels or in traffic jams, etc., and put in the car when you do not want dirty air, cold early. If you want to switch when heating air inside and outside, want to improve their cooling effect when the outside air temperature is high. It is effective to change the lever to the cycling shy.
- Long, you may use the circulation shy clouded glass.

■ When the outside temperature drops to near 0 °C



Your air conditioner does not operate even when the press.

■  Explanation of the mark

- This mark is used when the glass was cloudy  ,  At the position of, "Air Input" Is for you to use. "Shy circulation" Haze and to take conduction. May be difficult.
- Switching dial stops blowing mouth is also the location of this mark, this Ranked #. Use in the position is not recommended. Dial position of the display picture of each outlet. Please use in accordance with the.

■ About the smell of air conditioning

- While using air conditioning, a variety of indoor and outdoor car smell is taken into the air conditioning equipment. By blends are, you might smell from the mouth to the wind blowing. Be.
- In order to suppress the odor that occurs when starting air conditioner, when parking the tail to the introduction of outside air. It is recommended that network.

 Knowledge

**■ PTC About Heater (cold car specifications)**

To warm up the engine from starting the engine, auxiliary heater and heating in addition to normal

The.

If you meet all of the following conditions, automatically PTC Heater will be activated.

- When the engine is cold
- At low ambient temperatures
- When you turn to the full (Dan) Right-temperature adjustment dial

Operation will stop automatically when the engine is warm.

 **Warning**
**■ In order to prevent fogging of the front window glass**

When the set temperature is operated in a low humidity when the air conditioning is very high, blow

I switched the dial out mouth  Please do not suit the position. Air and Gala

May interfere with the sight glass is cloudy with the temperature difference between the outside of the nest.

 **Caution**
**■ In order to prevent the battery up**

Please do not use a long time when the engine is stopped.


Three

 Room  
 In  
 Instru  
 Remark  
 Of  
 Use  
 I  
 More

# Figure 3-1. Using the air conditioner Defogga Defogga rear window (tri cloudy)

Please use it when you pick the haze of the rear window.


- ▶ Vehicles equipped with automatic air conditioning

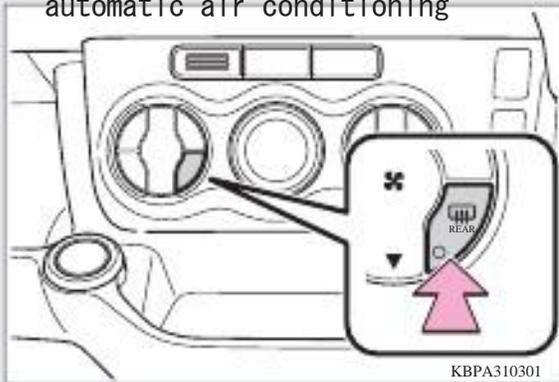

ON / OFF

About 15 Minutes later, automatically OFF  
Will  
You.

- ▶ Vehicles equipped with manual air conditioning

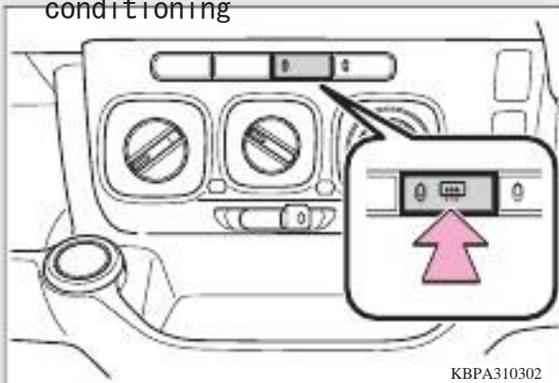

ON / OFF


## Caution

- In order to prevent the battery up

Please do not use a long time when the engine is stopped.

# Figure 3-1. Using the air conditioner Defogger Front wiper encounter Sir \*

In order to prevent freezing of the wiper blades and windshield glass  
Please use it.

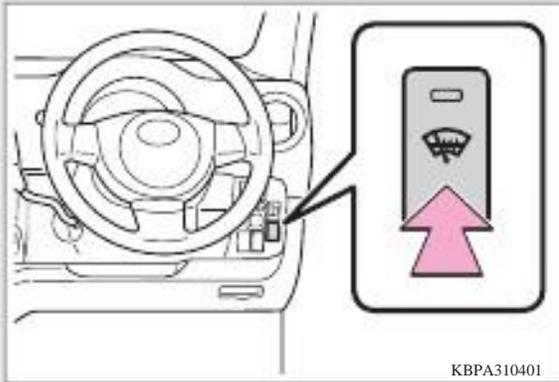

ON / OFF

About 15 Minutes later, automatically OFF  
Will  
You.

## Warning

### ■ Warning in operation

Hot surfaces of the front pillar beside the driver's side front window glass and the  
bottom will be. Please do not touch because there is a risk of burns.

Three


Room  
In  
Instr  
Remark  
Of  
Use  
I  
More

\* :Different equipment and optional equipment such as  
vehicle type

## Type of audio (non-vehicles equipped with navigation

How to get on to vehicles equipped with navigation system of the manufacturer's option  
 ; Please refer to "Navigation System manual handling the separate".

CD Player AM / FM Radio \*

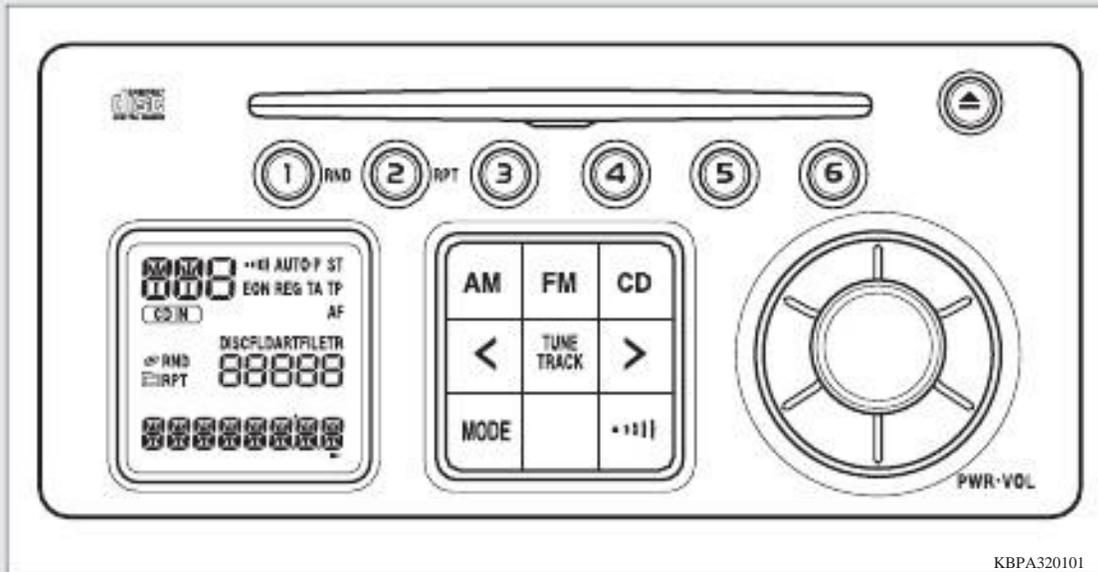

Title	See page
Using the radio	P. 186
CD Using the Player	P. 188
In order to listen comfortably	P. 193

### Knowledge

#### ■ Cellular phone use

While listening to audio, if you use a mobile phone near the car or car  
 You may hear noise from the speaker case, the audio.

\* :Different equipment and optional equipment such as vehicle type



Caution

- In order to prevent the battery up

Please do not use audio in a long time the engine is stopped.


- Handling of Audio

Please be careful not to spill a drink, such as the audio.

Three

Room  
In  
Instru  
Remark  
Of  
Use  
I  
More

Figure 3-2. Using Audio  
Using the radio

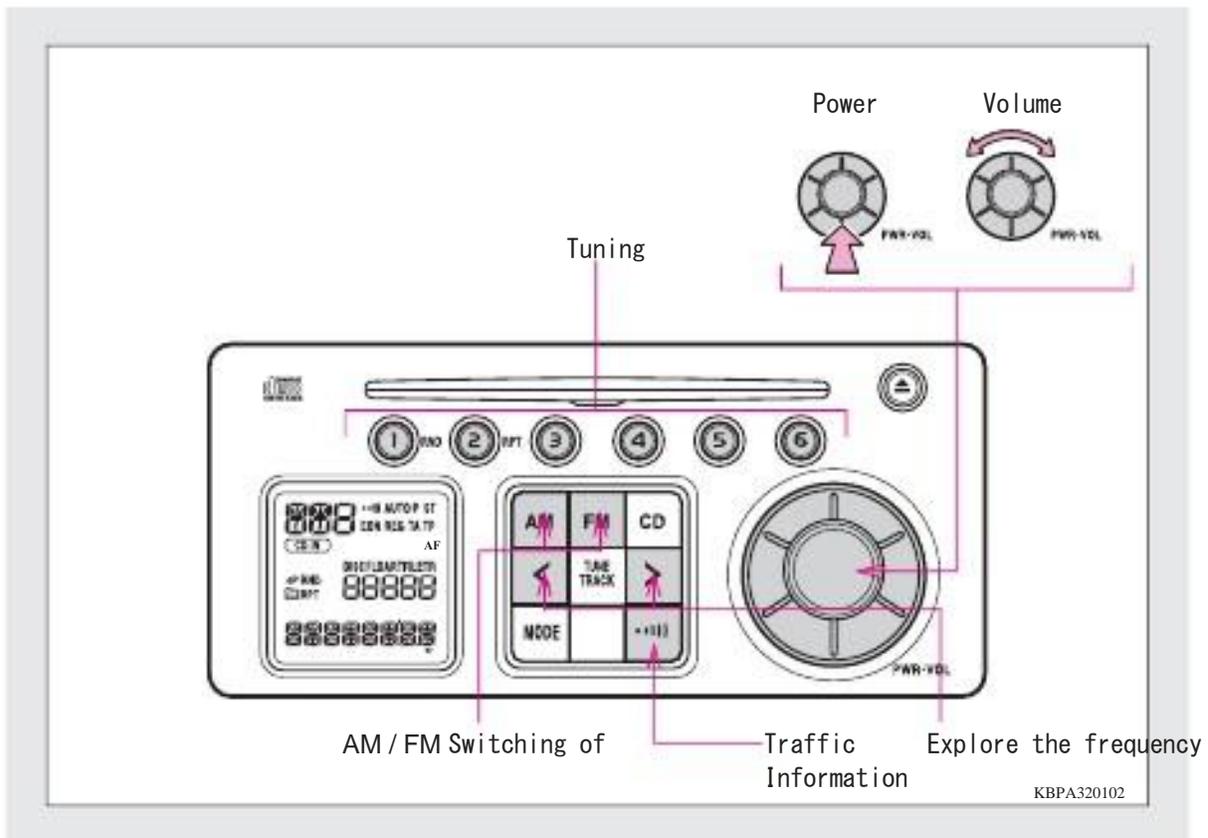

Remember the broadcast

station

■ Manual setting

Proceed **TUNE** Of **<** (Or low frequency) **>** Press the (high frequency)

Te, Find your favorite FM stations

Proceed Switch you want to store **1** ~ **6** The "Pitch" Sound becomes

Press up

■ Automatic setting

**FM** Or **AM** The "Pitch" And press until you hear the sound

To order a good receiver sensitivity Six Will be remembered until the station. And "beep beep" At the end of the storage You should hear sound.

To receive traffic information



Press the

Will be canceled, press the button again.



Knowledge




About

- When a new car, 1620kHz You have been set.
- AM When the radio mode The "Pitch" Press and hold until you hear the sound, The frequency of can be saved to. However, the connection with the battery When the connection has been severed, the 1620kHz Return to.
- The When pressed, that it is receiving the of Or - ~ Manipulate, even if the automatic configuration of the broadcasting station, the frequency is cut Not instead.
- When the connection to the battery has been Tata ~ Broadcasting station has been set to will be erased.
- For receiver sensitivity
  - For change in the position of the antenna is that Toki-ji, or on behalf of the strength of the radio waves, failure Place to keep it good reception due to obstructions or train, such as the signal is difficult. There is also a case.
  - You may also use the automatic configuration of the broadcasting station, can not be automatic tuning and automatic storage Be.
  - For the radio antenna is located in the rear roof.

Three

Room  
In  
Instr  
Remark  
Of  
Use  
I  
More

Figure 3-2. Using Audio  
CD Using the Player

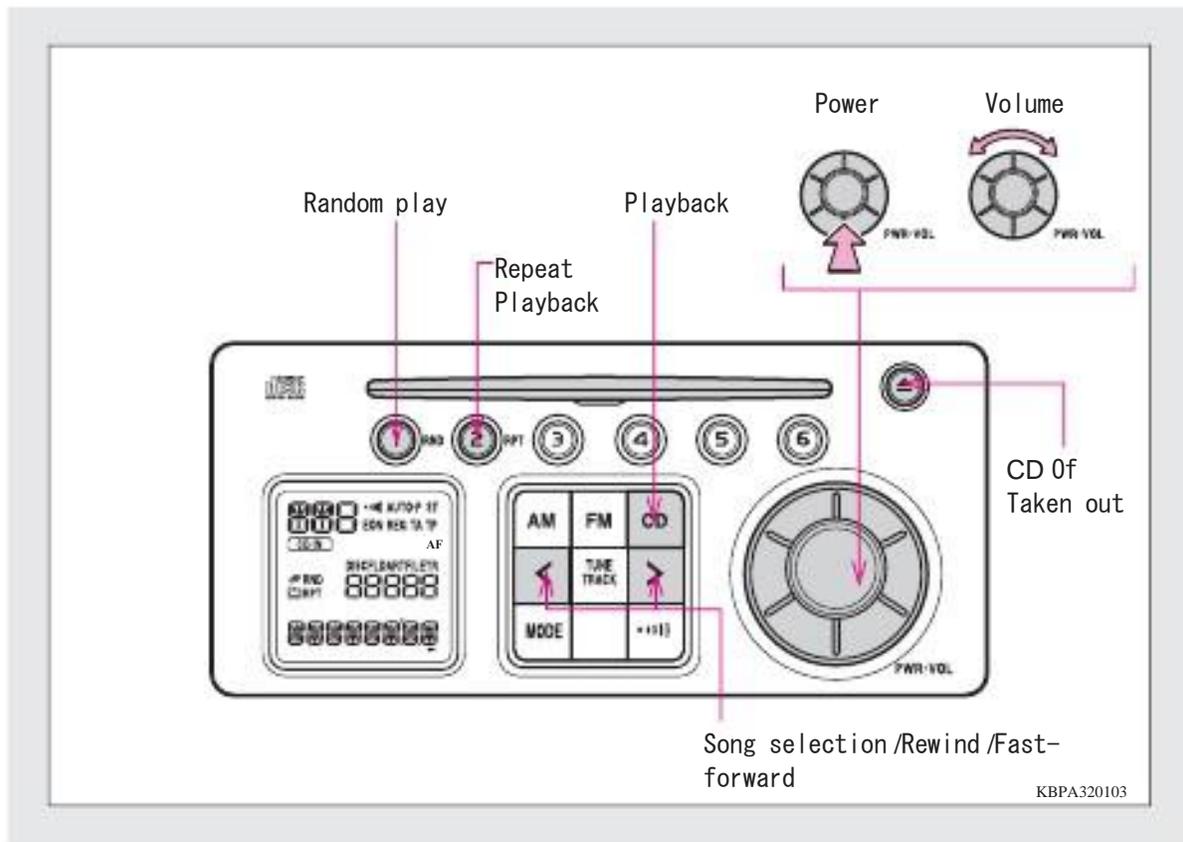

CD To insert a

CD One sheet to be inserted

CD Retrieve the

 Press the CD Retrieve the

Selecting a track

 Of  (Or previous song)  The number of the desired track by pressing the (next song) To be displayed

Rewind, fast-forward

When you rewind the  Of  When you fast-forward,  is Press and hold the Ru

Repeat (RPT) to play

② Press the

To the display unit "RPT" is displayed, will be played repeatedly.

Random (RND) to play

① Press the

To the display unit "RND" is displayed, the songs will be played in random order.

Three

Room  
In  
Instru  
Remark  
Of  
Use  
I  
More

 Knowledge

- Repeat play, random play release of

Once again  Or  Press the.

- Error display

Display	The contents of the error
ERROR1	Can not read the disc is dirty, such as reverse sides
ERROR3 ERROR4	There is something wrong with the internal player
WAIT	The higher the temperature of the player, not working

- Renewable CD

Marked with the following disk can be played.

May not be able to playback the recording status and characteristics of the disk, scratches, dirt, degradation  
You.



Function with copy protection CD Such as can not be used.

- CD Inside the player, as it is long or player ejected from

If you leave

CD You may not be able to use scratch is.

- Lens cleaner


Please do not use a lens cleaner. When you use the player to fail  
There is a fear.

 Caution


■ Unusable CD, Adapter

Such as: CD, 8cm CD Adapter, Dual Disc Please do not use.


If you use, or damage to a player, CD May become impossible and out of the There.

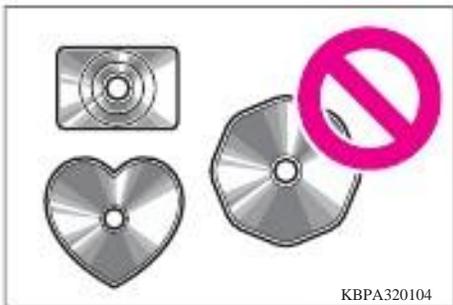

- Diameter 12cm Non-circular CD

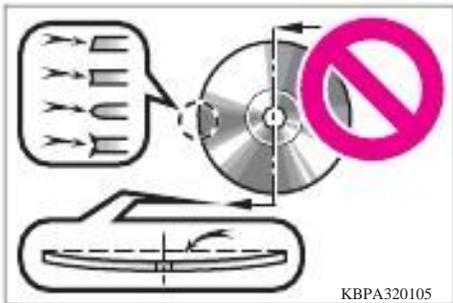

- Have low quality or deformed CD

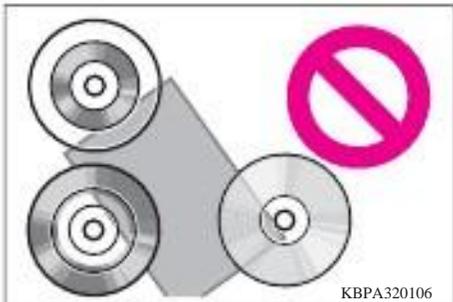

- A transparent or semi-transparent recording portion CD



- Cellophane tape, seal, CD-R Labels for And crept CD And, after a variant of Peel Ru CD

Three


Room  
In  
Instru  
Remark  
Of  
Use  
I  
More

 Caution

■ CD Handling of players


If you do not observe the following: imperative, CD Can no longer hear, CD Player May no longer work properly.

- CD Insertion slot CD Do not include anything other than
- CD Or not coated with oil to player
- CD Should be stored away from direct sunlight
- CD Do not disassemble the player

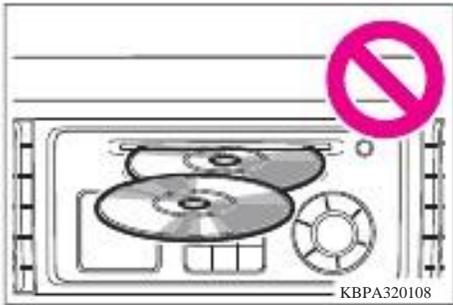

- Of two or more sheets at a time CD Do not insert

Figure 3-2. Using Audio  
In order to listen

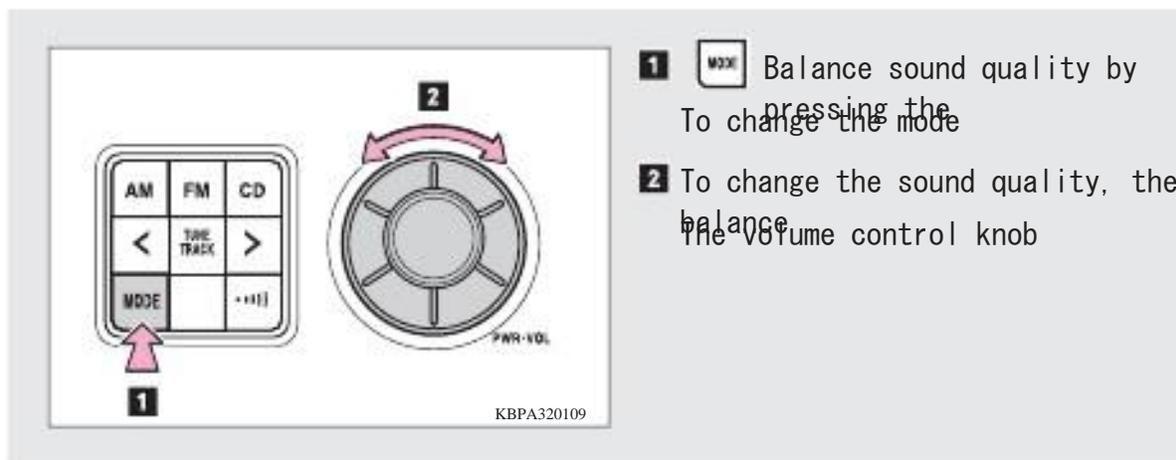

- 1 Balance sound quality by pressing the MODE button.
- 2 To change the sound quality, the balance volume control knob.

To change the setting

■ Balance quality of switching mode

Changes as follows: Each time you press the.

FAD □ BAS □ TRE □ BAL

Balance quality mode	Quality / Balance
FAD	Volume balance before and after
BAS	Emphasized the bass sound quality
TRE	Sound quality highlighted the treble
BAL	Volume balance between left and right

■ Adjust the volume balance between left and right—front and rear, the sound quality

Enters the balance mode by pressing the sound quality, turn the volume control knob


Be.

Quality mode	Level	Turn to the left	Turn to the right
FAD	R7 ~ F7	Large rear side	Large front
BAS	-5~Five	Weak bass	Strong bass
TRE	-5~Five	Weak treble	Treble strength
BAL	L7 ~ R7	Left large	Large right

Three

Room  
In  
Instru  
Remark  
Of  
Use  
I  
More

## Figure 3-2. Using Audio Antenna

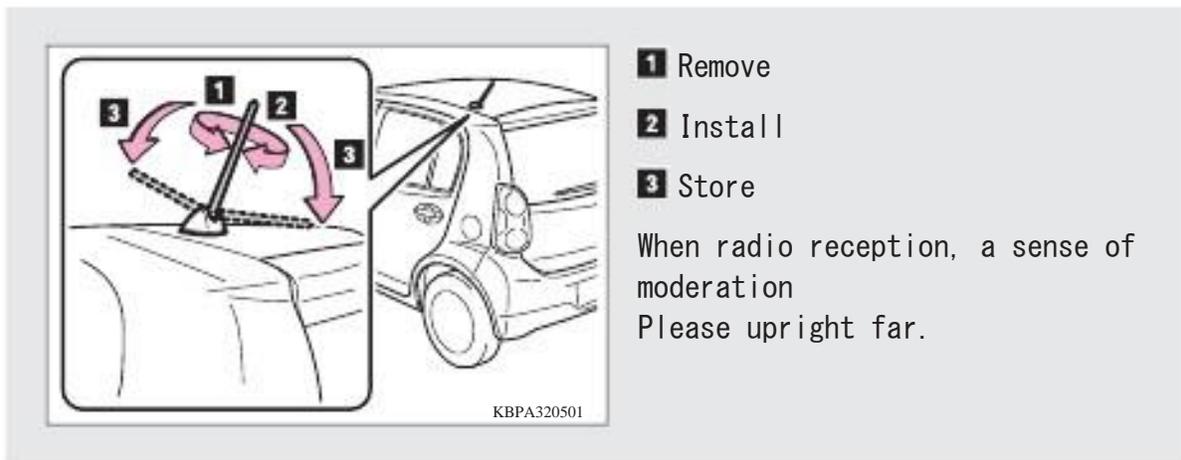

### Caution

- When applied to the automatic car wash

Because of the potential damage to the antenna, please remove the antenna.

- To prevent damage to the antenna


Such as the following: when, please store the antenna.

- When you hit the ceiling of the garage, such as an antenna to
- When you make a car cover

- When you remove the antenna, such as car wash is

Please be careful not to lose the antenna. Also, before traveling is also sure-ku, etc.  
Please install than the tail.

Figure 3-3. How to put the interior light  
List of interior

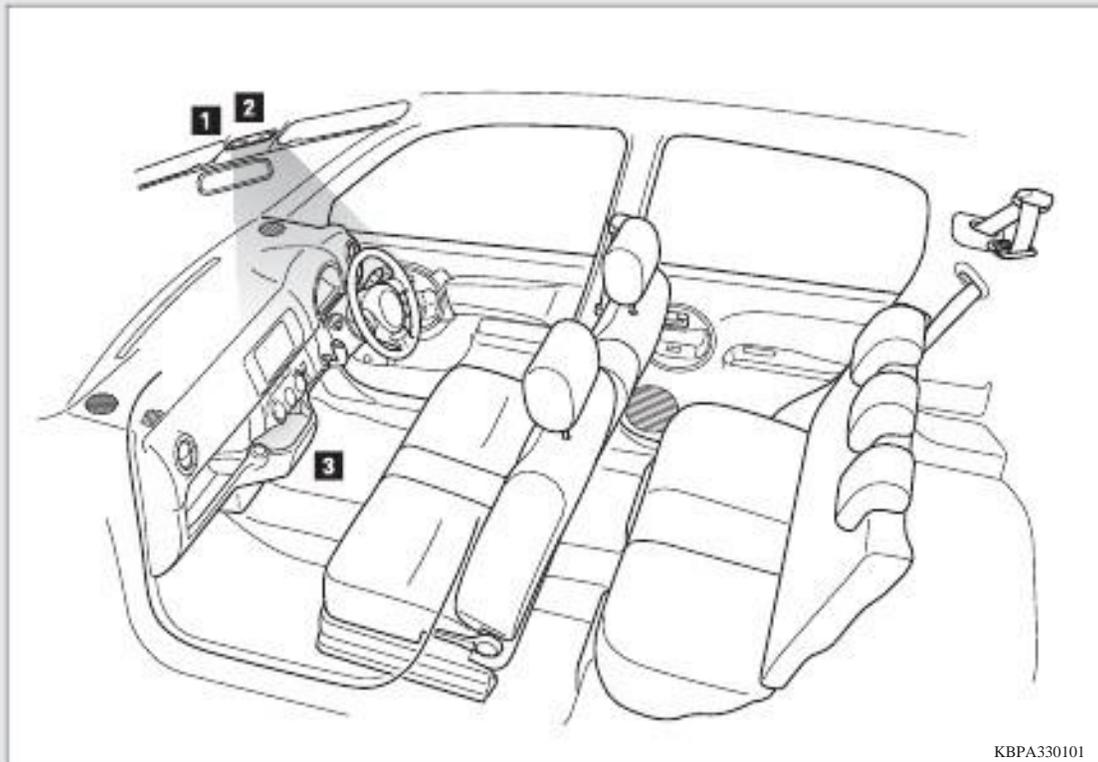

**1** Personal Light (→ P. 196)

**2** Room light (→ P. 196)

**3** Light multi-tray

When you turn on the light vehicle width, multi-tray light will be lit.

Three

Room  
In  
Instr  
Remark  
Of  
Use  
I  
More

 Knowledge

- In order to prevent the battery up

Room light (switch position when the door) was ON when the door half

If you leave, about Ten Will turn off automatically  
after a minute.


- Ted Naples illumination entry system

Is, including the door (back door room light (when the door position switch)

- Function that can be set in the shop


List (customized □ II. 313)

Personal Light

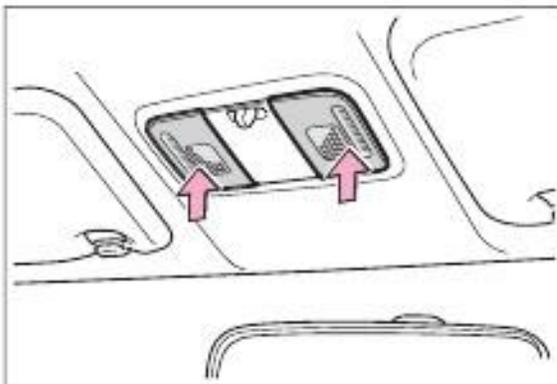


Lighting / Off

Room Light

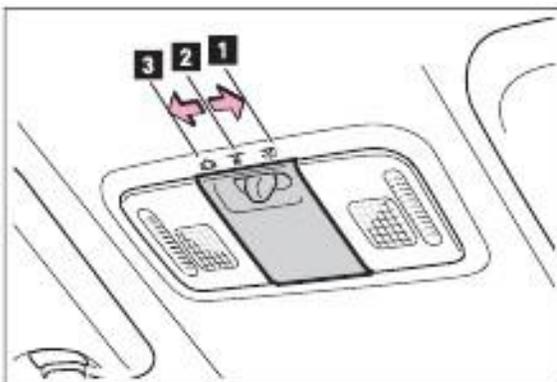

- 1** ON
- 2** OFF
- 3**

3-4. Use of the equipment  
storage  
List of storage

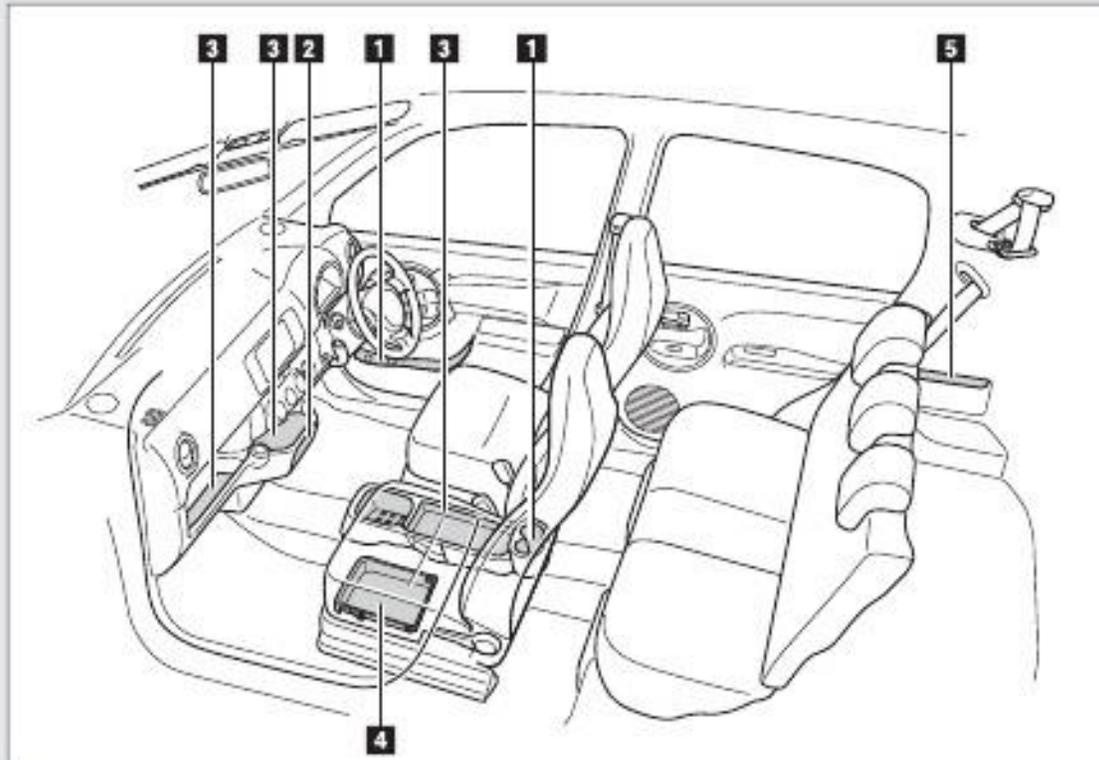


- 1** Bottle holder
- 2** Lower center box (with cup holders)
- 3** Open tray
- 4**
- 5** Deck side pocket

Three

In  
Remark  
Of  
Use  
I  
More

\* :Different equipment and optional equipment such as vehicle type

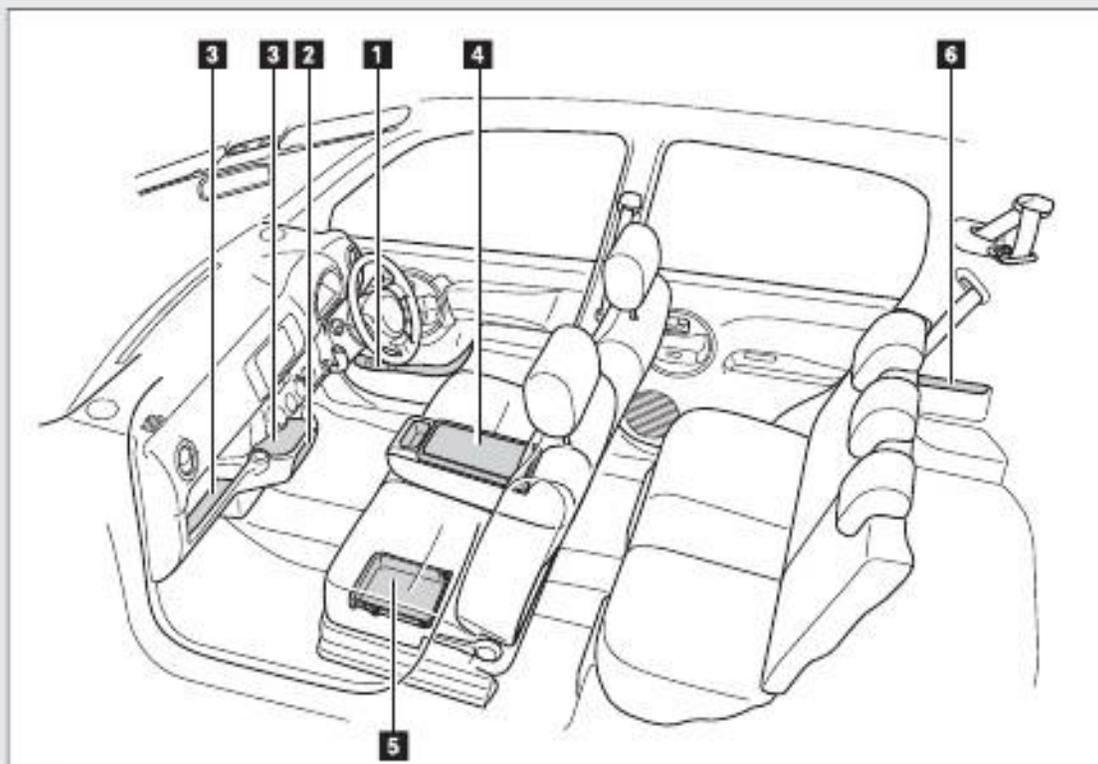

- 1** Bottle holder
- 2** Lower center box (with cup holders)
- 3** Open tray
- 4** Armrest pocket
- 5**
- 6** Deck side pocket

\* :Different equipment and optional equipment such as vehicle type

 Warning

- 

The stomach.

- 
- 

Three

In  
Remark  
Of  
Use  
I  
More

Bottle holder



 Knowledge





 Warning



## Lower center box (With cup holder )

## Lower center box (With cup holder )

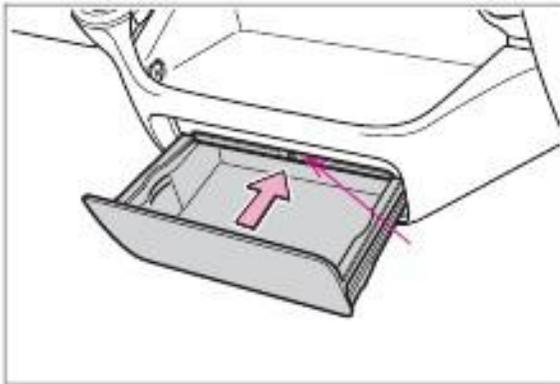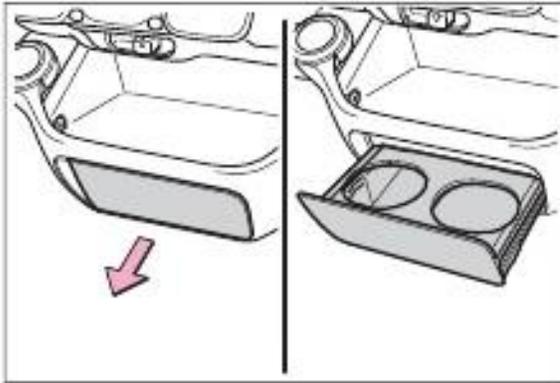

Three

In  
Instru  
Remark  
Of  
Use  
I  
More

**⚠ Warning**

■ Do not store things

When used as a cup holder, do not place any objects other than cups and cans  
Dasai.

There is a risk of injury and accidents fell by sudden braking. To prevent burns  
Please make sure to drink warm, close the lid to the eye.

■ When not in use

Lower center storage box, please be sure.


Such as during sudden braking, and then hit the body, such as the center Loa box that  
There is a risk of injury is dangerous' s  
unexpected.

 Caution

■ In order to protect from damage

- Roar with the hand or in the center box, please do not step on the foot.
- Vehicles equipped with front bench seat when the seat back and forth to adjust the position, the line always Please Loa box houses the master. Lower box seats per center You may damage Lee. (→ P. 37)

Armrest pocket \*

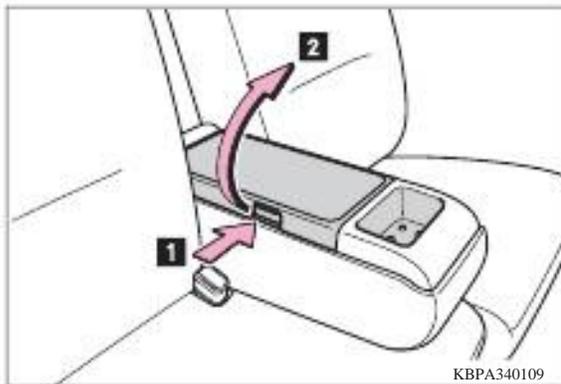

**1** To remove the lock by pressing the button

**2** Lift the lid.

 Knowledge

■ For armrest pocket


When it is put something in pocket armrest, reclining of the seat adjustment And make adjustments or before and after adjustment, armrest moves at the same time. At that time, please be careful. They may be those that fall, please be careful.

\* :Different equipment and optional equipment such as vehicle type

# Open tray

## Open tray


▶ Rack wide free

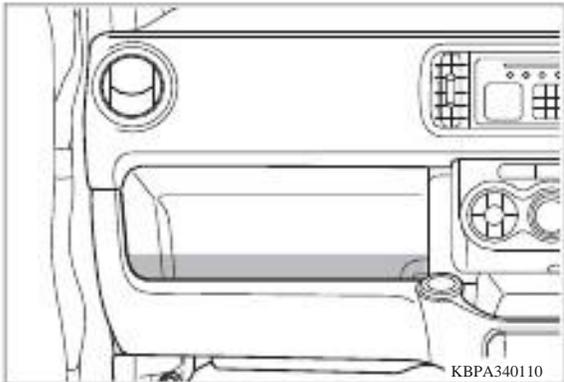

▶ Multi-tray



▶ Floor tray (vehicles equipped with front separate sheet)

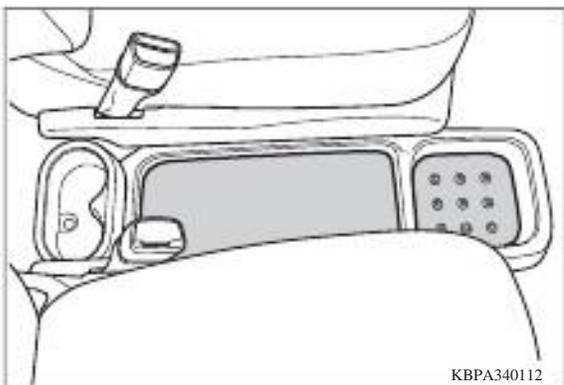


Three

Room  
In  
Instru  
Remark  
Of  
Use  
I  
More


Sheet tray under the passenger seat, deck side pocket

Sheet tray under the front passenger seat \*

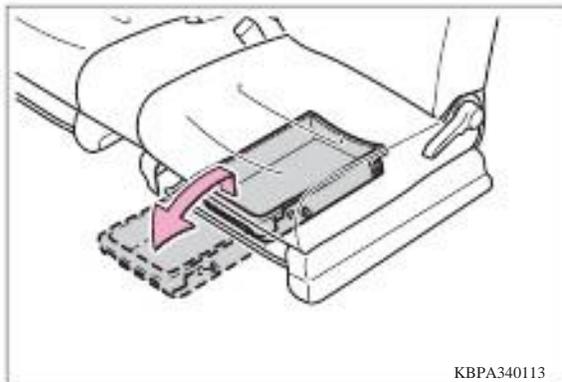


Lift the tray, pull before DASS.

Deck side pocket

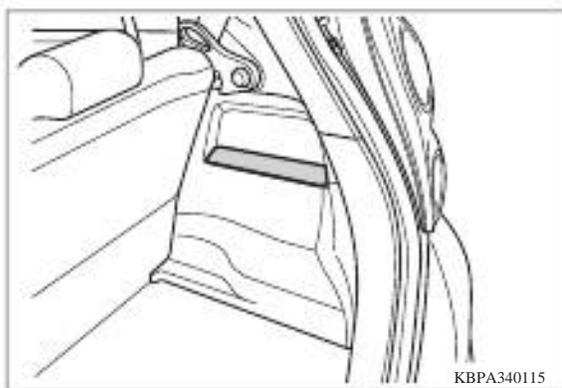

\* :Different equipment and optional equipment such as vehicle type

### 3-5. Use of equipment or other house Sun visor

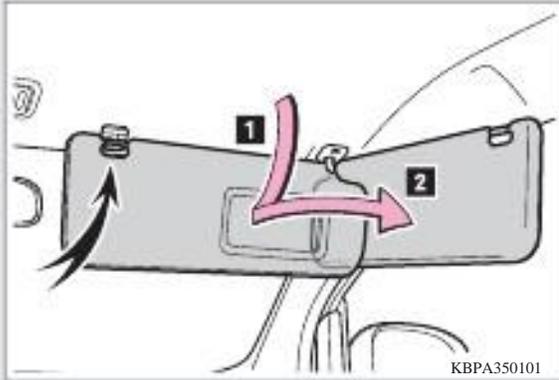


- 1** Lower
- 2** From hooks in the state is down  
Zushi turn, to the side

Three

Room  
In  
Instru  
Remark  
Of  
Use  
I  
More

## Vanity mirror

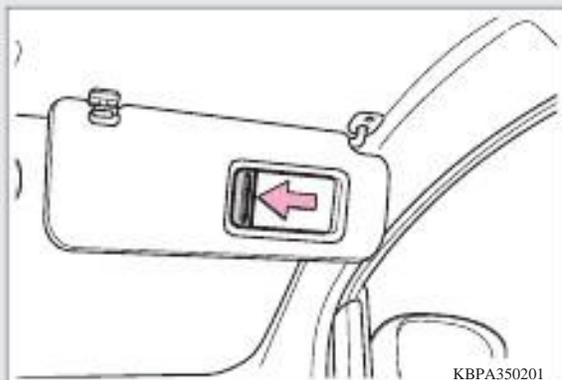


Slide the cover open

KBPA350201

## Accessory socket

12V 10A (120W) Be used as a power of less than when using electrical appliances)  
Please.

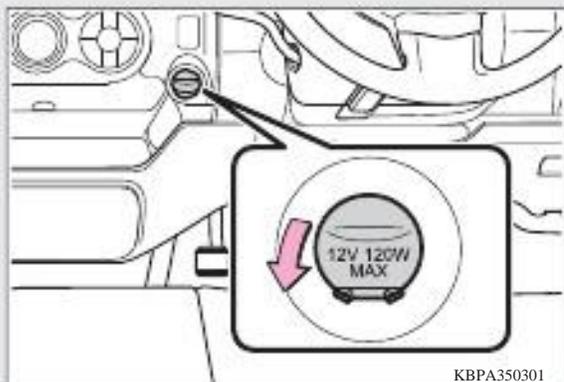

### Knowledge

#### ■ Use conditions

The engine switch "ACC" or "ON" When the

#### Caution

#### ■ And failure to prevent short

Or contains foreign matter into the socket, so that it does not takes a long, such as drinking water, do not use when not, please keep it closed the lid.

#### ■ To prevent the fuse expires

12V TenA (120W) Please do not exceed).

#### ■ In order to prevent the battery up

Do not use the accessory socket for extended periods of time when the engine is stopped  
Dasai.

Three

Room  
In  
Instr  
Remark  
Of  
Use  
I  
More

## Armrest \*



Used to defeat in front of the armrest  
For you.



### Caution


- To avoid damage to the armrest

Please do not put excessive load.

\* :Different equipment and optional equipment such as  
vehicle type

## Shopping hook

For example, when you hang the bag, such as shopping, please use.

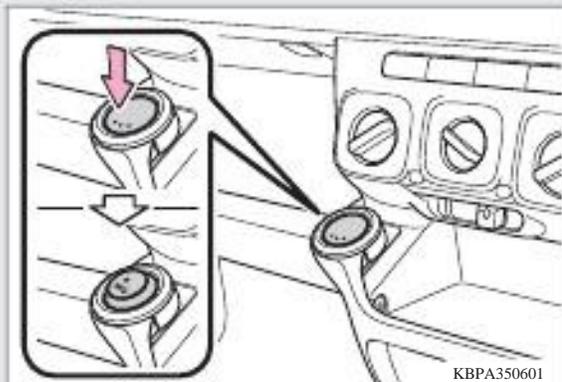

When used, shopping hook  
Rotate and press.

To return to the original, once on the  
opposite side  
Containing the hook is rolling shopping  
Please.

### Caution

#### ■ When you use


- Please do not put heavy objects and to hook the big ones in particular.  
About maximum load (3Kg)  
Hooks or broken, it may come off while driving.

Three


Room  
In  
Instr  
Remark  
Of  
Use  
I  
More

## Floor mat

Firmly on the floor carpet, floor mats dedicated (model year) car  
Please use the fixed memory.

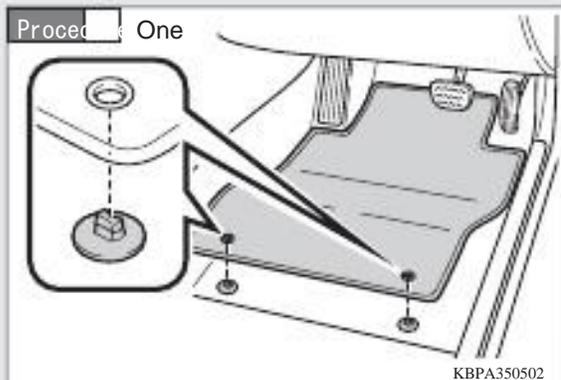

Fixed bath hook (clip)  
Fit in the mounting hole Amatto

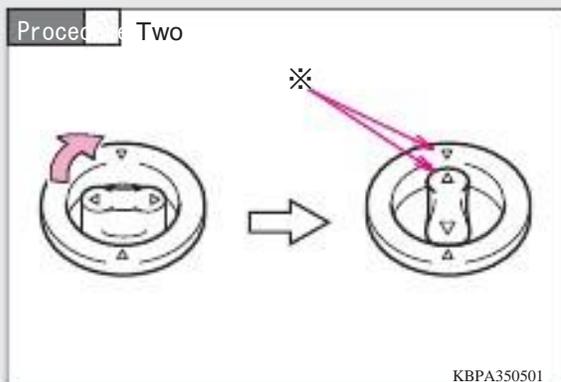

Fixed hook at the top of the (clip)  
Turn the lever floor mats  
To secure the

※△Please be sure to match the mark.

The shape of the (clip) may be different from the illustration a fixed hook.

### ⚠ Warning


Please observe the following.

If you do not observe imperative, to interfere with each pedal is displaced floor mats while driving, seems Such as making it difficult to stop the car in and out of unexpected speed, can lead to serious accidents

When you lay the floor mat to the driver's seat

- Even genuine Toyota, floor mats and a different model year vehicles do not use other
- Using a dedicated driver's seat floor mats
- Using the (clip), always fixed firmly fixed hook
- Do not use floor mats stacked with other species
- Or upside down around the floor mat, do not use turn over

Before operating

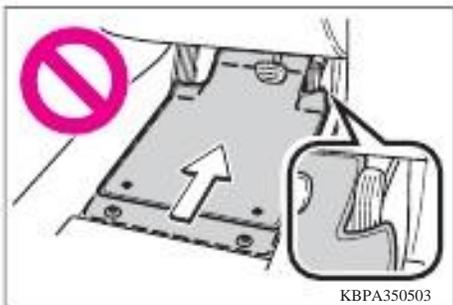

- All fixed floor mat hooks (h Fixed firmly in the correct position in the lip) Periodically check that it is, especially After the car wash is always carried out to confirm
- Stopping the engine and shift lever P The state of the In Thailand, stepped up to push the pedals, floor Ensure that the mat does not interfere with the

Three

Room  
In  
Instr  
Remark  
Of  
Use  
I  
More



Figure 4-1. Care of the discs

Care of the exterior..... 214  
Caring for your interior..... 217  
For tire..... 219

4-2. Inspection and parts replacement

simple Bonnet 223 .....  
Garage jack..... 226  
Exchange (Bulb) light bulb 229 .....  
Check the fuse, exchange 247 .....  
Key battery replacement..... 254  
Supply of washer fluid 258 .....  
Of the air conditioner filter  
Exchange ..... 260

## Care of the

Care, please perform the following items.


- In order from top to bottom the body, around the foot, while applying enough water around the bottom  
To wash off the dirt.
- The body wash with soft sponge or chamois leather like.
- When it is extremely dirty use a car shampoo, rinse thoroughly with water  
Be.
- Wipe off the water.
- At repelling water has become worse, do waxing.

When the water is not even dropped the ball in the shape of dirt on the surface of the body, the temperature of the body  
Or a wax (. Please use less as a guideline approximately body temperature) when it is cold

In addition, the Court Toyotakemi body, wheel Court, such as glass Court  
If it is local construction products, the way care is different. For details  
Please contact your Toyota dealer.

### Handling of the antenna

Antenna will be able to remove or store.

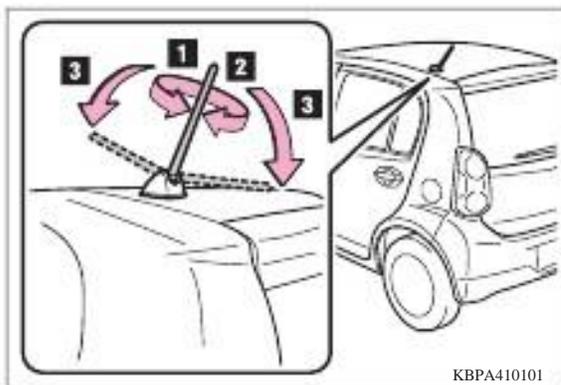

- 1 Remove
- 2 Install
- 3 Store

When radio reception, where there is a sense of  
moderation  
Please use standing up.

 Knowledge

■ When using the automatic car wash

- And then stores the state mirrors, remove the antenna, vehicle wash from the front side  
The car, please. In addition, before traveling be sure to replace the antenna,  
Please return the mirrors back to the state.
- You may scratch the vehicle body with a brush, damaging the paint.
- Before putting it into the automatic car wash machine, make sure that the filler neck of the vehicle is securely closed  
Please then.

■ When using high-pressure car wash

Because there is a fear of water entering the room, the door frame near the glass doors  
and the tip of the nozzle  
Please do not too close.

■ Aluminum wheel \*

- Using a neutral detergent, please drop the dirt as soon as possible. Detergent containing abrasive  
Please do not use hard brush and so damage the paint.
- When the wheel is hot after traveling long distances such as in summer, do not use a detergent  
Bloom.
- After using the detergent is enough to please wash as soon as possible.

■ Bumper

Please do not rub the abrasive detergent.

Four

You  
Hand  
Input  
Are  
Of  
Tooth  
Or  
Was

 Warning

■ When the car wash is

Please do not pour water in the engine room.

There is a risk of fire is dangerous vehicle and take to the water, such as electrical components.

■ For exhaust pipe

Since the exhaust pipe becomes hot by the exhaust gas, such as immediately after stopping the engine not to touch the  
Please be. May cause burns.

\* :Different equipment and optional equipment such as vehicle type



### Caution

■ In order to prevent corrosion (such as wheel) deterioration of paint and body parts

● In such cases, please wash immediately following.

- After traveling the coast

- After traveling the road was sprayed anti-freezing

agent

- When the carcass, such as coal tar droppings, pollen, tree sap, bird, insect is

attached.

- Where there is a lot was riding smoke, soot, dust, iron powder, a drop of chemical substances, etc.

After

- Violently when the dust dirt, mud, etc.

- When organic solvents such as benzene or gasoline was attached to

● If the paint is scratched, please repair as soon as possible.

● Storage when wheels are off the dirt in order to prevent corrosion, moisture protection, to areas where there is minimal Please the tube.

■ Cleaning of light

● Please wash with care. Stiff brush and please do not use organic solvents.

Can damage the light.

● Please do not light waxing.

You may damage the lens.

■ To prevent damage to the antenna

Such as the following: when, please store the antenna.

● When you hit the ceiling of the garage, such as

an antenna to

● When you make a car cover

■ For removal of antenna

● At the time of normal driving, please be sure to install the antenna.

● When you remove the antenna, such as the automatic car wash machines, so as not to lose the antenna.

Please be careful. Also, before traveling to replace the antenna always

Please.

# Caring for your

Care, please conducted in the following manner.

## ■Caring for your car

Cloth such as a vacuum cleaner to remove dust, moistened with water or lukewarm water  
Wipe.

## Knowledge

### ■Carpet cleaning

Type of commercially available foam cleaner is now available.  
Spread the carpet or foam using a sponge brush. In a circular motion  
Please fill crowded. Please do not over water. Leave the dry as much as possible  
Putting is the most effective.

### ■Seat belt

In mild detergent and warm water, please wash with a cloth or sponge. Sea  
Please inspect on a regular basis, such as scratches, fraying, worn seatbelt. (→ P. 51)

### ■Super UV For cut glass \*

- When the door glass is dirty, light with a cloth moistened with water or lukewarm water early  
Please wipe clean the network.
- When the dirt of the door glass is severe, do not repeat the opening and closing of the door glass  
Bloom.

Four  
You  
Hand  
Input  
Are  
Of  
Tooth  
Or  
Was

## Warning

### ■Infiltration of water into the vehicle

- Please do not spill any liquid or pour water into the car.

Water and is dangerous to take, such as electrical components, may result in failure or fire vehicle

- Be SRS Please do not expose the air bag components and wires. (→ P. 75)

A defect in the electrical, or air bag deployment, it is no longer functioning properly, death

May lead to an accident or serious injury.

\* :Different equipment and optional equipment such as vehicle type



### Warning

- When you take care of the interior (especially the instrument panel)

Please do not use a cleaner wax or glaze glaze. Instrumentation

Front panel to the front window glass is glare, hinders the visibility of the driver 思

I lead to accidents, it may extend to death or serious injury.



### Caution

- For the solvent to be used when cleaning

- Paint or stains, discoloration because the cause of refuge, benzene, organic solvents, such as gasoline

Solvent and acid or alkaline agent, staining agent, etc. Please do not use bleach.

- Please do not use a cleaner wax or glaze glaze. Instrumentation

May cause deformation of the peeling paint and dissolution of the front panel and other interior

You.

- And take water on the floor

Please do not wash with water.

Take water and electrical components under the floor carpet to audio or failure of the car cause and the cause, body is rust.

- When cleaning the inside of the rear window glass

- Because of the potential damage to the heat, such as a glass cleaner without the use of to heat

Please wipe lightly with a cloth moistened with water or lukewarm water

- Please be careful or scratching the heat, to avoid damage.

- Super UV \* When cleaning the glass is cut

When cleaning the glass door, or supplies abrasive compound (Garasuku

Please do not use, etc.) detergent cleaner-wax. Damage the coating

May be wound.

\* :Different equipment and optional equipment such as vehicle type

# For tire

Inspection of the tire are required by law. Sure as the daily inspection  
Please inspect the tire.

To extend the life of the tire to wear evenly, tire rotation  
(Replacement tire position) 5,000 km Please go to each.

## ■Item of tire inspection

Tire, please check the following items.

Inspection methods, please read "Maintenance Notes" separate volume.

### ●Tire pressure

Inspection of air pressure, please go to when the tire is cold.


### ●The presence or absence of cracks in the tire and damage

### ●The depth of the groove of the tire

### ●Or have only one side of the tire is worn excessively (abnormal wear of the tire,

Presence or absence, etc.) differ significantly from the other tire wear extent

## ■How the tire rotation

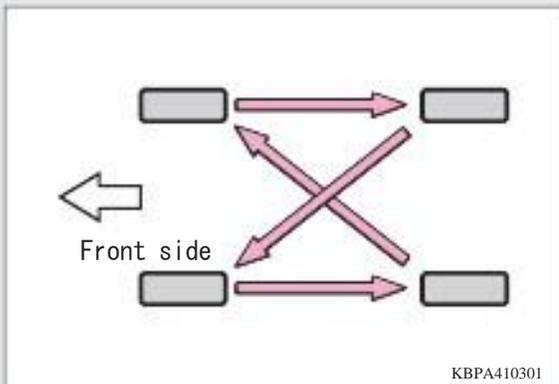

Rote the tire in the order shown in the figure

Please to the application.

To equalize the status of tire wear,

Kotobuki

To extend the life, regular Toyota

Rotation of each tire inspection


Is recommended.

Four

You Hand Input Are Of Tooth Or Was

 Knowledge

■ The number of tire pressure

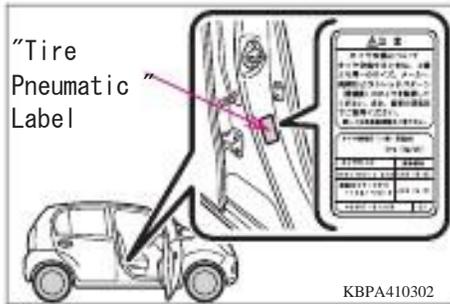

Specified air pressure of the tire, the tire side of the driver's seat  
You can check the air pressure label.

Tire size		※ air pressure [kPa (kg/cm <sup>2</sup> )]	
		Front wheel	Rear wheel
155/80R13 79S		240 (2.4)	
165/70R14 81S	FF (Front-wheel drive)	250 (2.5)	230 (2.3)
	4WD (Four-wheel drive)	220 (2.2)	

Tires for emergency: 420 kPa (4.2 kg/cm<sup>2</sup>)

※ air pressure when the tire is cold

■ When you replace a tire-related parts

When you replace the tires and disc wheel mounting nut wheel, Toyota  
Please consult the dealer.

**Warning****■ Inspection, when warning of exchange**

Please observe the following: always.

If you do not observe imperative, due to damage or unstable handling characteristics of the drive-line components, that death may lead to injury or accident.

- Tires are the same manufacturer, same brand, in the same tread pattern, wear all of the difference. Please do not use the tire.

- Please do not use the tires and wheels other than the size specified by the manufacturer.

- Do not use the mix radial tires, bias tires Ted Bell, the bias tire. Please Do not.

- Do not use mixed summer tires, all-season tires, winter tires. The stomach.

**■ Ban on the use of the tire is abnormal**

When traveling or taken to handle and has been installed as the tire is abnormal, You may feel excessive vibration. In addition, the following caused the situation, an unexpected May result in an accident.

- Can not give a damage repair, such as rupture

- Vehicle to skid


- (Fuel stability, of the vehicle, such as braking distance) of the original performance of the car is not demonstrated

Four

You  
Hand  
Input  
Are  
Of  
Tooth  
Or  
Was

**Warning**

- For replacing a tire
  - Remove the nut inside the tapered portion of Always  
Please be fitted. Outside the tapered portion  
If you install to, damage the wheel  
Misalign, or extends to serious injuries, the  
most  
There are the worst case could lead to death  
Be.

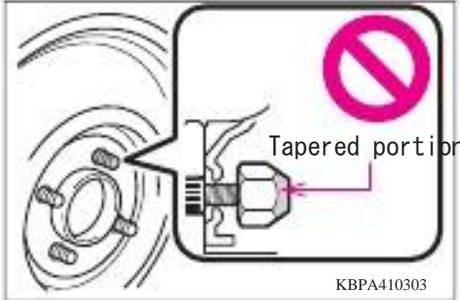


- Please do not be coated with oil or grease on the threaded portion.  
Tightened more than necessary to tighten the nut, bolt or damaged, disk  
Kuhoiru may be damaged. In addition, the loose wheel nut fall  
Then, extends to serious injury or lead to accidents, the worst case could lead to  
death  
There is. If oil or grease the string attached to the threaded portion, please wipe.


**Caution**

- If there are any air leaks while driving
  - Please do not continue to run.
  - May result in damage to the tire or wheel.
- Attention to driving on rough roads
  - When traveling on the road is uneven, please note.
  - Doing so may cause the tire missing, cushioning action of the tire is reduced.
  - In addition, some parts may be damaged tires, wheels, and body.


To remove the lock from the car and open the bonnet.

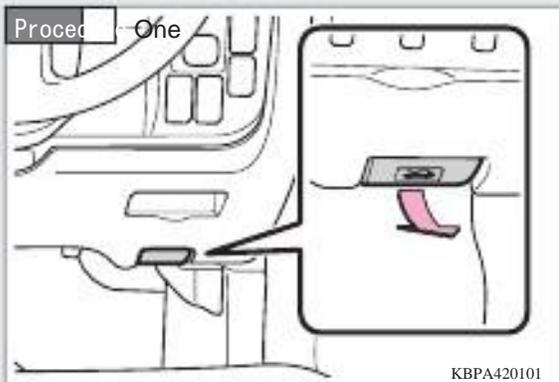

Pull the hood opener.  
Lift the hood a little  
Be.

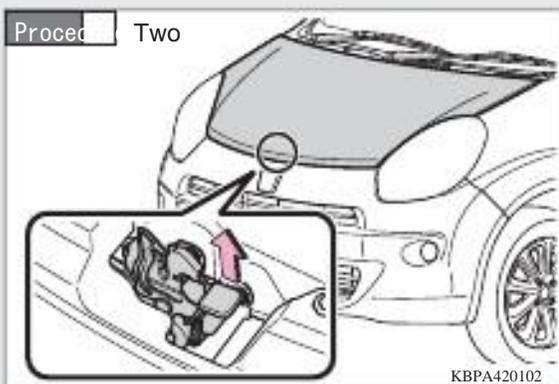

Bonnet by pulling the lever  
Open the.

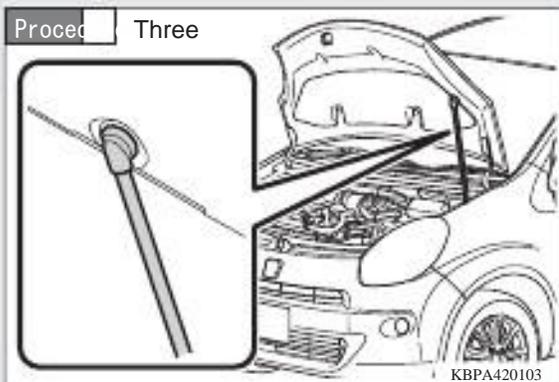

To stay the bonnet stay hole  
By inserting.

Four

You  
Hand  
Input  
Are  
Of  
Tooth  
Or  
Was

 Knowledge

■ When removing the battery terminal

Information stored on your computer will be erased. Has the battery terminals  
Please consult your dealer at Toyota should.

 Warning

■ Check before traveling

Please check that the hood is locked securely.

If you run without lock, hood to open unexpectedly while driving, your serious injuries Or referred to, can lead to death in the worst case.

■ After you inspect the engine room

Please confirm that you have not left loose tools or cloth in the engine room.

If left behind in the engine room, such as tools and cloth that was used to check and cleaning You can also become a cause of failure, vehicle fire in the engine room is to become a high temperature there is the danger that could lead.

■ When closing the hood



When closing the hood today and hand

Please be careful not to you.

Dangerous and may cause serious personal injuries

Be.

■ Please plug the hole stays dent the hood stays are

So that no child falls on the head and body bonnet, check that are plugged in correctly Please recognize that.



### Caution

- To prevent damage to the bonnet

When closing the hood, please do not strongly pressed to put a weight, such as. You may have dented hood.

- When closing the hood

Removed from the hole stays the bonnet stay, Do back properly in the clip Bloom. Bonnet and stay close in the state has been plugged in, the hood may be damaged There is injury or death.

Four

You  
Hand  
Input  
Are  
Of  
Tooth  
Or  
Was

## simple Garage jack


When you lift the car using the garage jack is in the correct position

Please attach the garage jack.


Failure to install the correct position, the risk of vehicle damage or injury if there is.

### ■ Front side

#### ▶ FF Car (front-wheel drive)

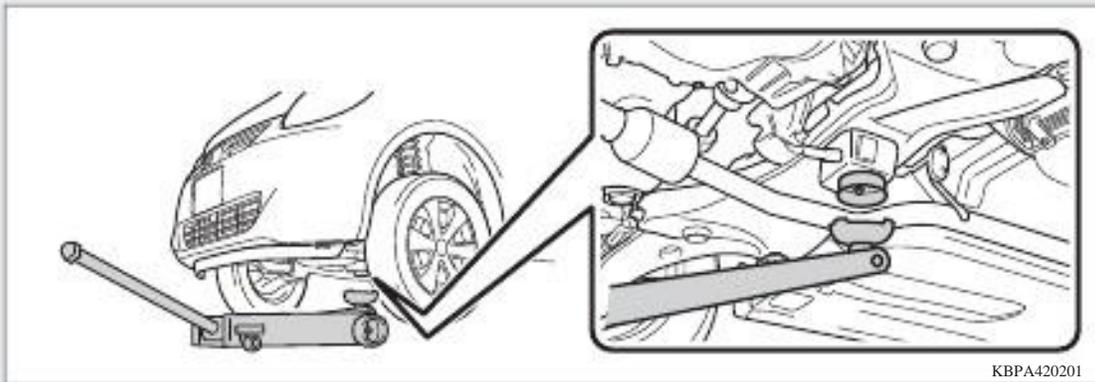


#### ▶ 4WD Car (Four Wheel drive)

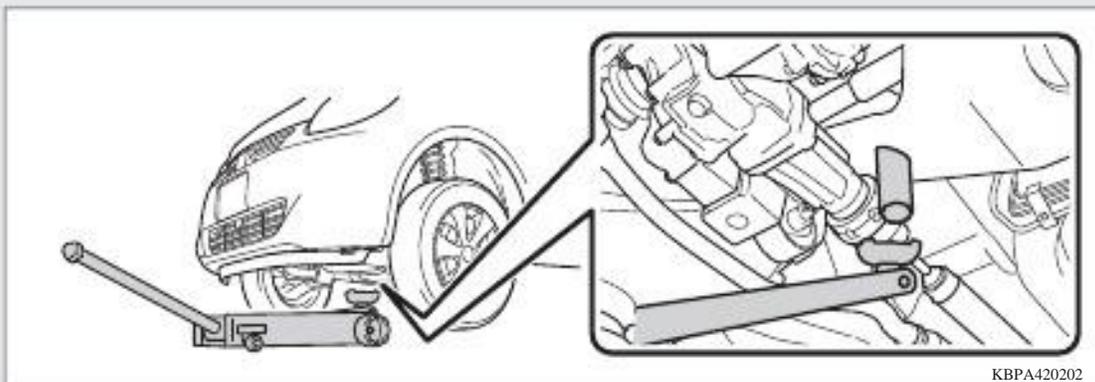


■Rear side

▶ FF Car (front-wheel drive)

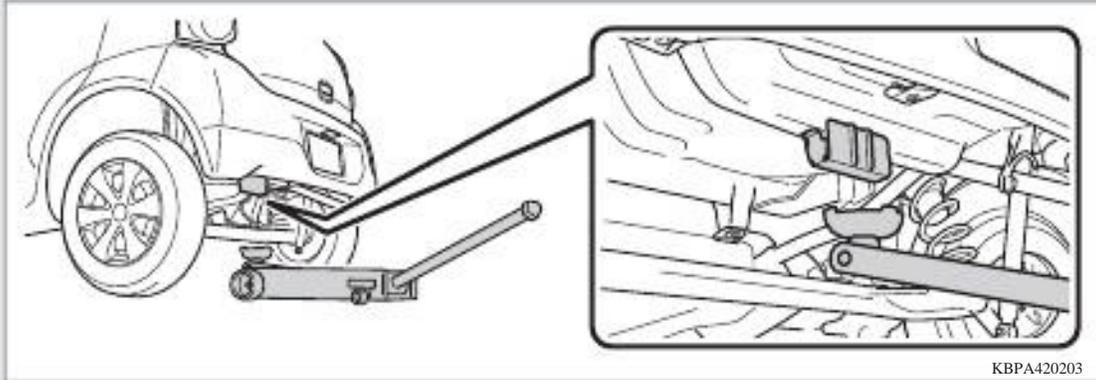

▶ 4WD Car (Four Wheel drive)

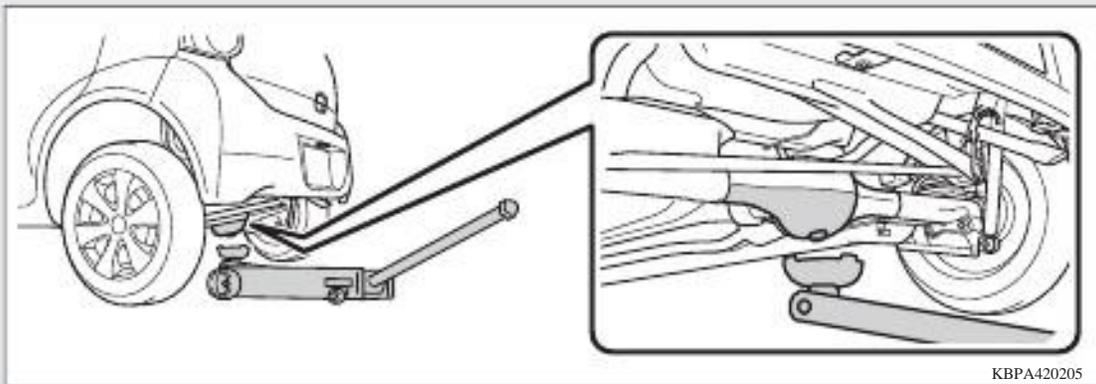

Four


You  
Hand  
Input  
Are  
Of  
Tooth  
Or  
Was

**Warning**

■ When you lift the vehicle

Please observe the following.

If you do not observe imperative, serious or lasting injury, your death will lead to the worst case that it has.

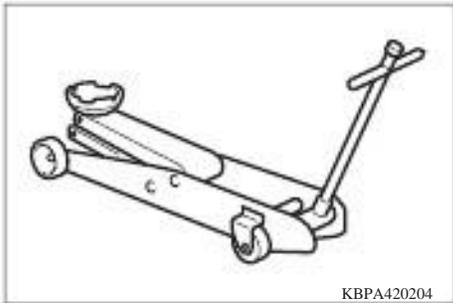

- Use the garage jack as shown in the figure  
Lifting the vehicle

- When you use the garage jack, garage jack always comes with instruction manual  
Confirm you want to use enough
- Do not use the jack that is installed in the car  
May cause the vehicle to fall.
- Or put any part of your body under the vehicle and was supported only garage jack, including speakeasy  
Dari does not
- Garage and jack, not of inclination to a solid automotive jack stands  
Not be used in flat floor
- If you are working under the car is dropped in to use the jack stand
- Not start the engine in the vehicle is jacked up
- Park the vehicle on the ground is flat, hard, firmly apply the parking brake, the  
The Futoreba P To
- Garage jack, the jack point to always set correctly  
Lifting the vehicle without properly set the garage jack, Isle of vehicle damage  
Be. May cause the vehicle to fall from the garage jack also.
- When there are occupants in the vehicle will not lift  
the vehicle
- When lifting the vehicle, do not put anything on the top and bottom of the  
garage jack

# simple Exchange (Bulb) light bulb


Light bulb will be described below, you can replace yourself. If the details are unknown or For other replacement bulb, please consult your Toyota dealer.

## ■ Prepared for light bulb

Of burned-out light bulb W Please make sure the number. (→ P.

## ■ Valve position of the front

### ▶ Standard car

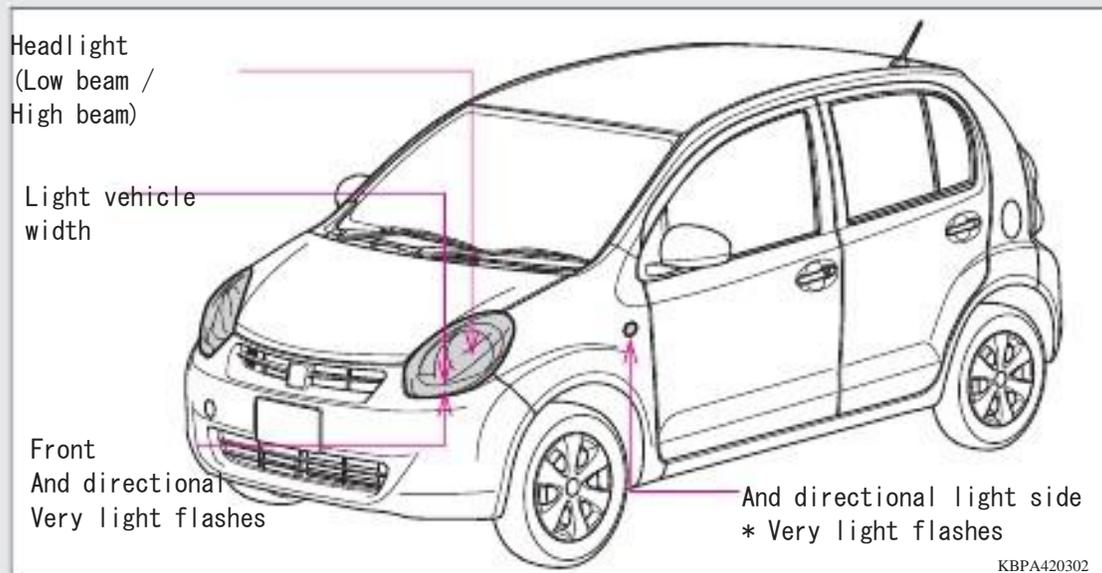


Four


You Hand Input Are Of Tooth Or Was

\* :Different equipment and optional equipment such as vehicle type

► + Hana Specification

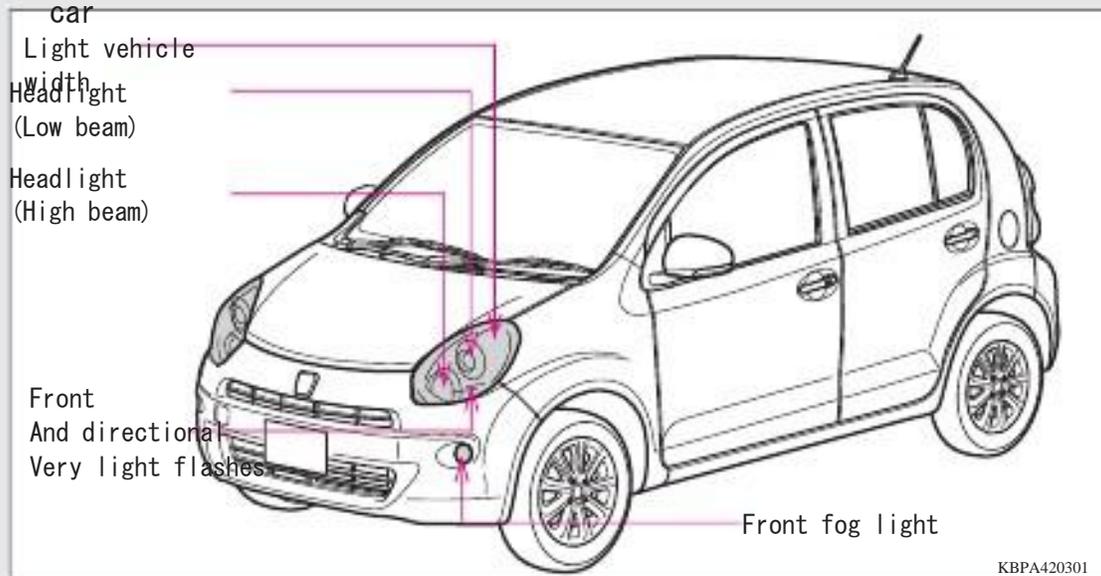

■ Valve position of the rear

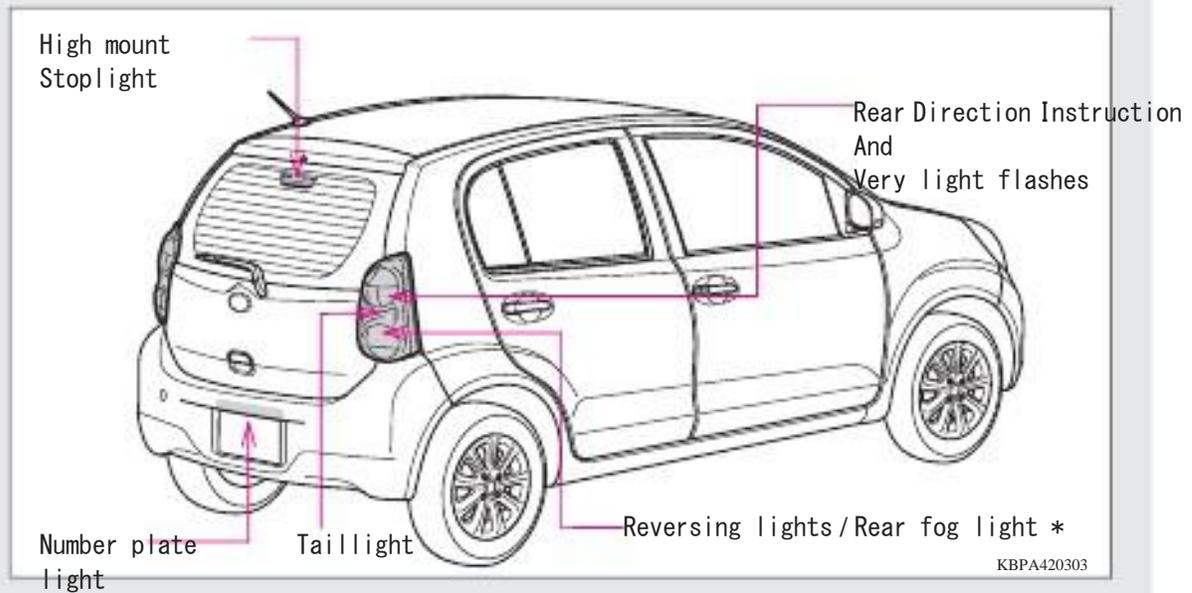


\* :Different equipment and optional equipment such as vehicle type


## How to change the light bulb

bulb

### ■ Headlights (standard car)

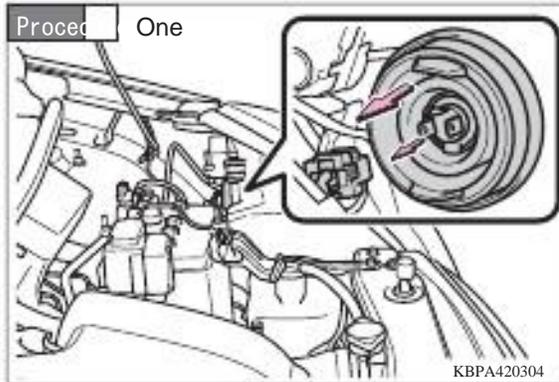

Connectors and take the rubber cover  
The Fig.

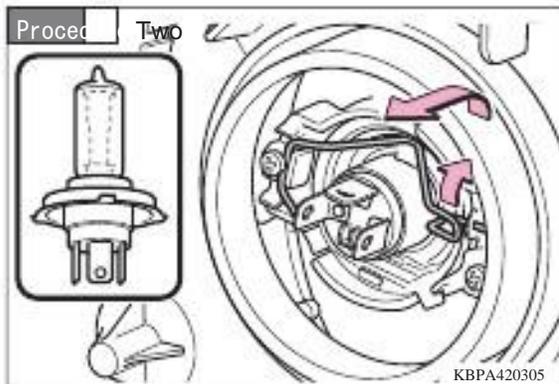

Remove the stopper, you should take a  
light bulb  
Be.


Procedure Three When installing, install in the reverse order it was removed.

Four


You  
Hand  
Input  
Are  
Of  
Tooth  
Or  
Was

### ■Headlight


(+ Hana Halogen low beam of the headlights of a car specifications)

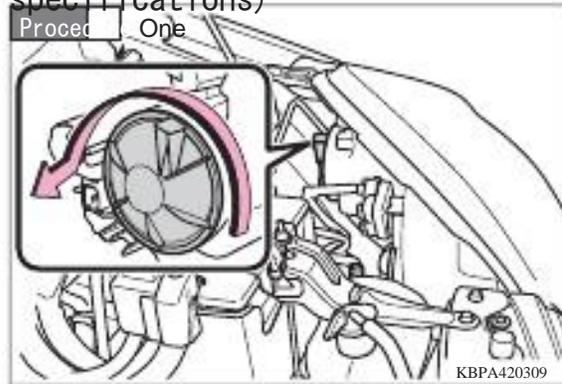

Remove the cover by turning fully to the left  
Remove the memory.

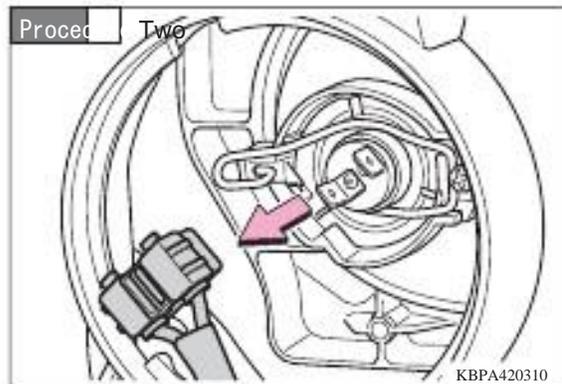


Remove the connector.

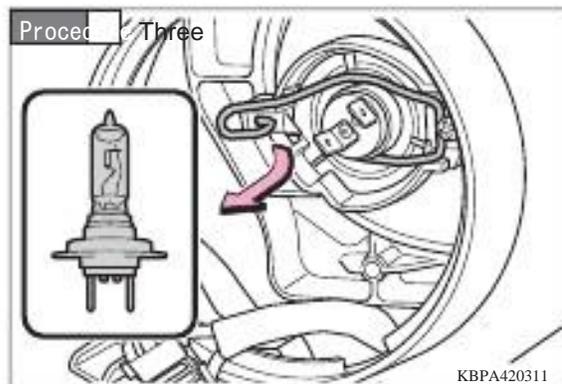


Remove the stopper, you should take a light bulb  
Be.

Procedure When installing, install in the reverse order it was removed.


■Headlight (+ Hana Specification of the car high beam)

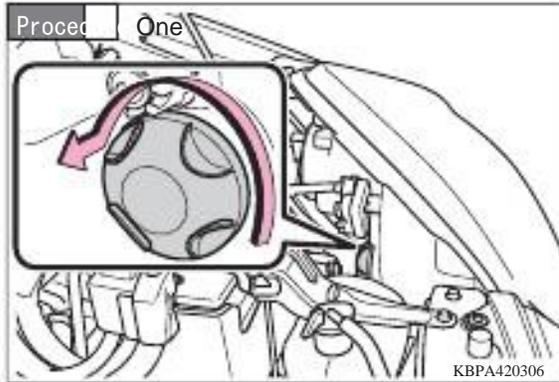

Remove the cover by turning fully to the left  
Remove the memory.

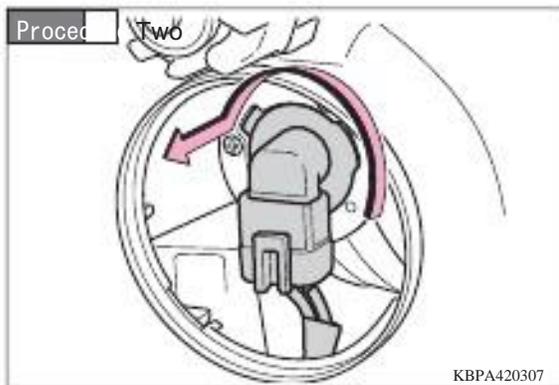

Remove the socket.

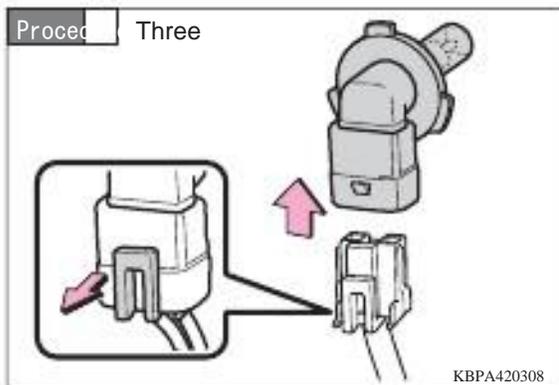

Remove the bulb.

When installing, install in the reverse order it was removed.


Four

You  
Hand  
Input  
Are  
Of  
Tooth  
Or  
Was


■ Light vehicle

Procedure One Remove the socket.


▶ Standard car

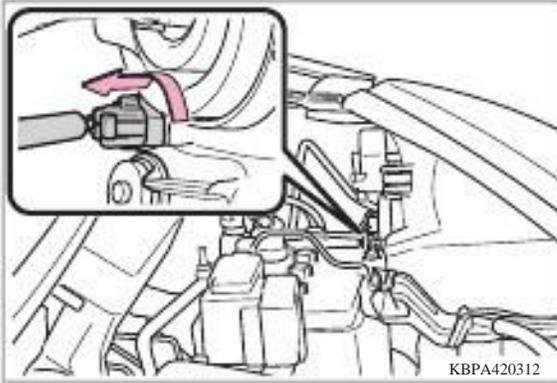

▶ + Hana Specification car

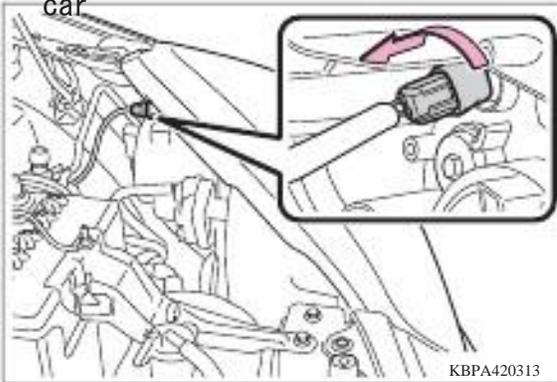

Procedure Two

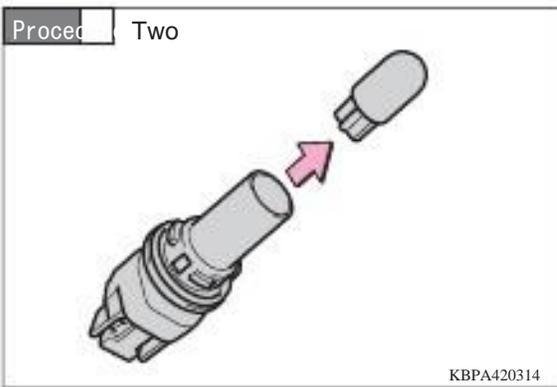


Remove the bulb.

Procedure Three When installing, install in the reverse order it was removed.

■ Front direction indicator light flashes

and very

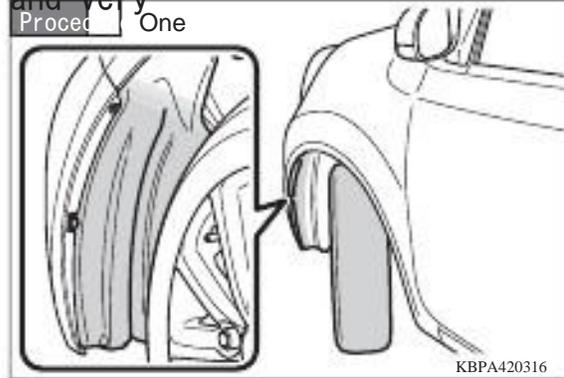


Hand to the other side of the light to be replaced

Turn the module, changing the direction of the light

When you replace the right to the left, replace the left

When converting to Turn the handle to the right

Be.

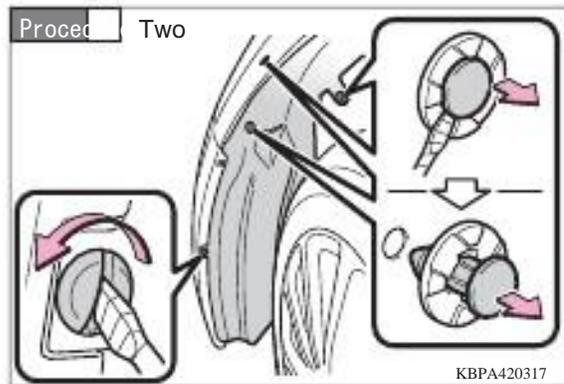


To remove the clip.

Four


You  
Hand  
Input  
Are  
Of  
Tooth  
Or  
Was

Procedure **Remove** the socket.

► Standard car

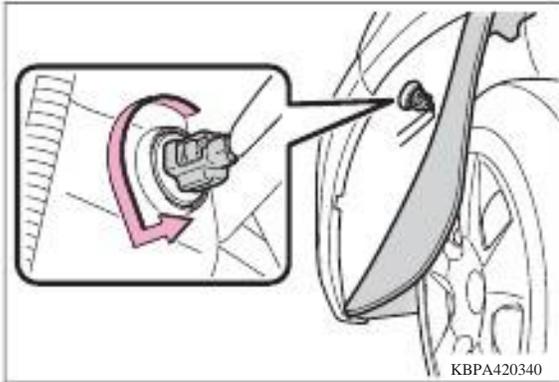


► + Hana Specification car

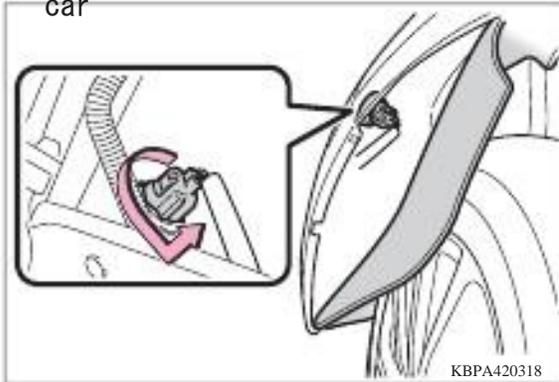


Procedure **Four**

Remove the bulb.

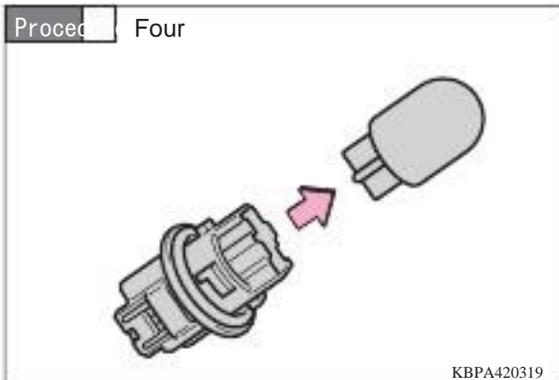


Procedure **When** installing, install in the reverse order it was removed.


### ■Front fog light\*

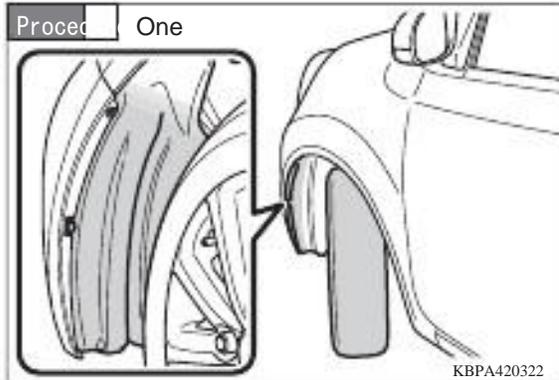

Hand to the other side of the light to be replaced  
Turn the module, changing the direction of the fire.  
When you replace the right to the left, replace the left.  
When converting to Turn the handle to the right Be.

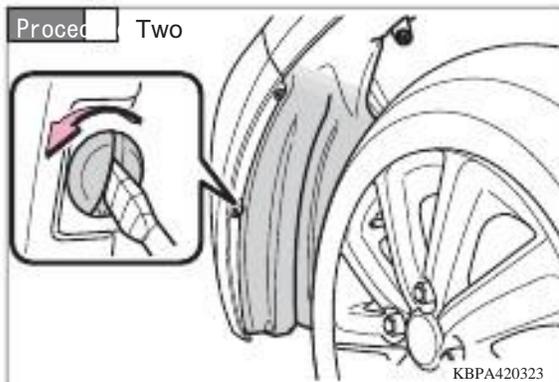

To remove the clip.

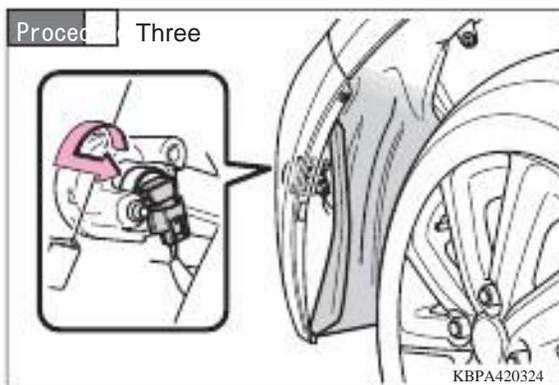


Remove the socket.

Four

You  
Hand  
Input  
Are  
Of  
Tooth  
Or  
Was


\* :Different equipment and optional equipment such as vehicle type

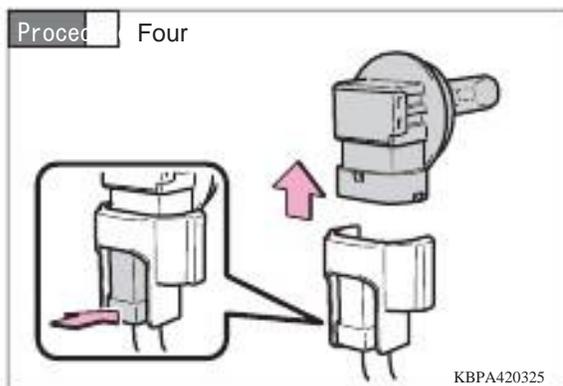


Remove the bulb.

Proced Five When installing, install in the reverse order it was removed.


■ Side direction indicator light flashes  
and very\*

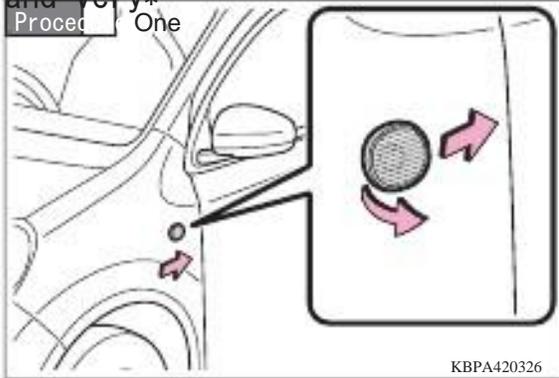

Remove the light body.

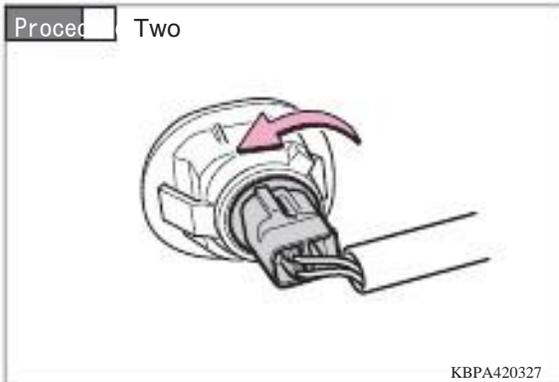

Remove the socket.

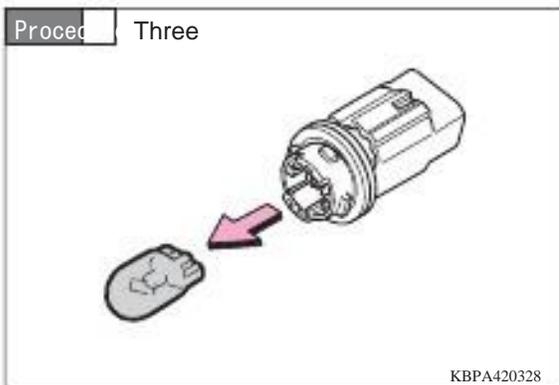

Remove the bulb.


Procedure Four When installing, install in the reverse order it was removed.

Four


You  
Hand  
Input  
Are  
Of  
Tooth  
Or  
Was

\* :Different equipment and optional equipment such as  
vehicle type

■ Reversing light, tail light, rear direction indicator light flashes  
and very, rear fog light\*

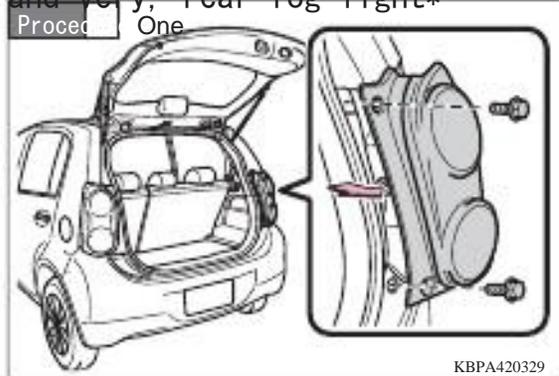


Opened the back door, the light body  
Removed.

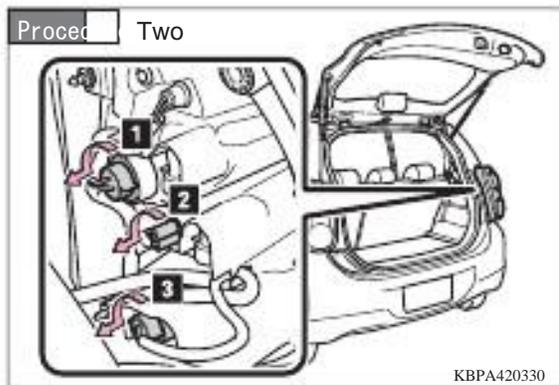

Remove the socket.

- 1 And rear direction indicator lights
- 2 flashing very  
2 taillight
- 3 Reversing lights/Rear fog light \*

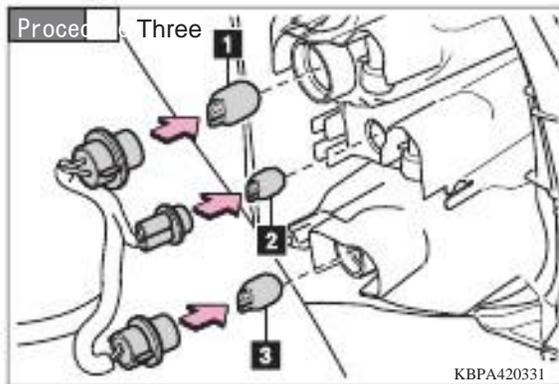


Remove the bulb.

- 1 And rear direction indicator lights
- 2 flashing very  
2 taillight
- 3 Reversing lights/Rear fog light \*

\* :Different equipment and optional equipment such as  
vehicle type

Procedure When installing a light bulb and socket, do the opposite to that when removed in order to install.

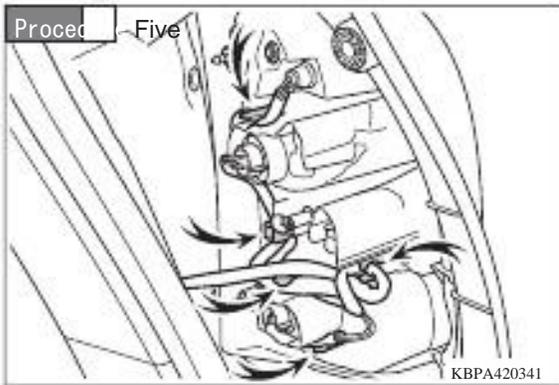

When installing the lamp body,  
Attach the lamp body to ensure that wiring  
is  
To make sure that was kicked.  
When installing the wiring, wiring table  
Clamp attached to the central part of Ping  
, Please.

Four


You  
Hand  
Input  
Are  
Of  
Tooth  
Or  
Was

### ■ Number plate


#### light



Remove the light body.

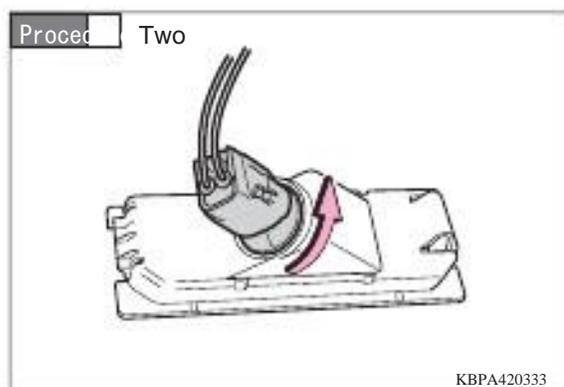


Remove the socket.

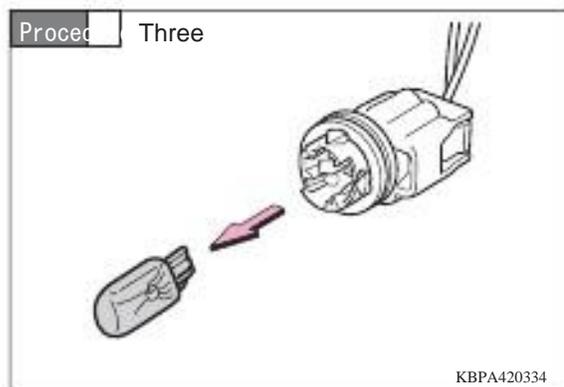


Remove the bulb.

Proced When installing, install in the reverse order it was removed.


### ■High-mount stop light

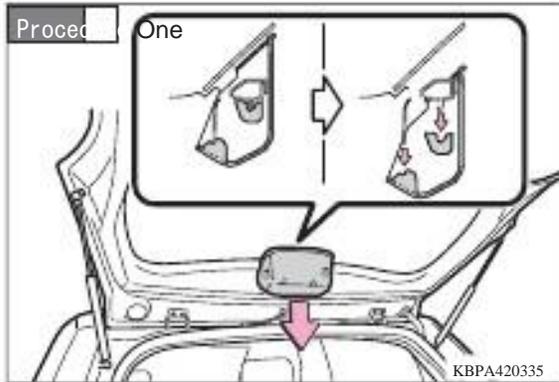

Opened the back door, the vehicle cover  
Removed by pulling on the lower side.

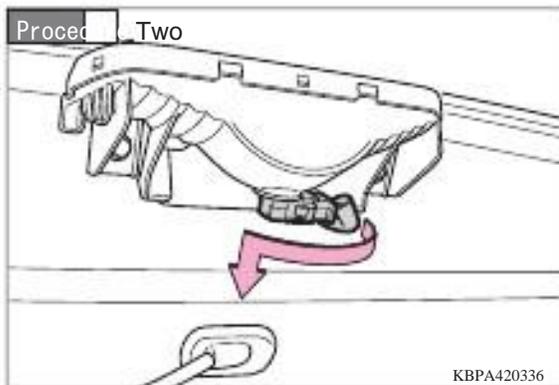

Remove the socket.

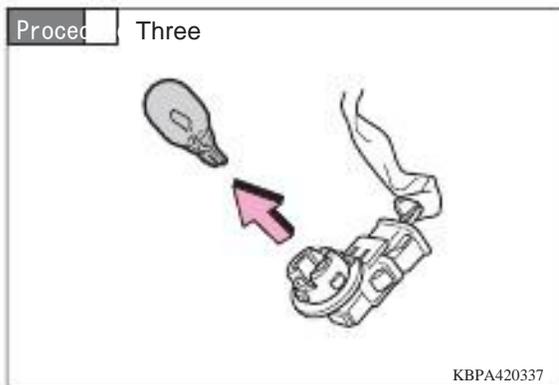


Remove the bulb.

Four

You  
Hand  
Input  
Are  
Of  
Tooth  
Or  
Was

Procedure When installing a light bulb and socket, do the opposite to that when removed.  
In order to install.

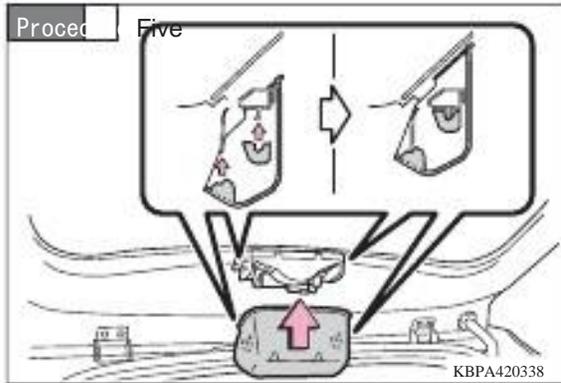

To determine the location of the nails,  
the cover  
Attach.

#### ■Other bulb

When the light bulb below has expired, please replace at Toyota dealers.


- Low-beam headlight (Discharge valve \*)
- Flashing light and very directional light side (Specification car door mirrors with side turn indicator light)
- Brake light

\* :Different equipment and optional equipment such as vehicle type

 Knowledge

- When installing the rubber cover of the standard car

Please check to make sure that you have fitted.

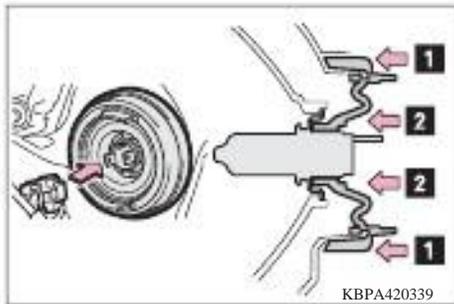

- 1 Fit firmly on the outer periphery of the rubber cover
- 2 Fit the entire circumference (around the light bulb) the inner circumferential rubber cover. Press the bracket portion of the light bulb until you can confirm or into the

- Cloudy with a drop of water in the lens

Time, such as the following, please consult your Toyota dealer. However, the one in the

lens. A temporary cloudiness is not a functional problem.

- With water droplets on the inside lens of large grain
- Water is accumulated in the light

- Operation of the discharge headlights

Out of the range and operating voltage, or light is off, you will not be lit.

The voltage returns to normal and re-lit.

- For replacement of the bulb

When working light bulb replacement, parts, etc. If you are concerned about corruption, please consult the Toyota dealers.

Four

You  
Hand  
Input  
Are  
Of  
Tooth  
Or  
Was



### Warning

■ When you replace the bulb

- Please write off. Off immediately because they are always hot, not replace Please.

You may want to burn.

- Please do not touch the glass part of bulb with bare hands.

Please Hold the plastic part or metal case. In addition, the light bulb hurt Lee, you may burst or burn out or when dropped.

- Parts for fixing the light bulb and the bulb is firmly seated, please. Be mounted If inadequate, internal failure due to flooding or headlight, heat or fire And there, that cloudiness in the lens may occur.

- Do not attempt to disassemble or repair, bulb components, sockets, and electrical circuit Bloom.

Is dangerous due to electric shock, it may cause serious personal injuries serious life-threatening.

■ For discharge headlights

- When replacing (including bulb replacement), please consult your Toyota dealer always.
- Lit, please do not touch the high voltage socket.

Instantaneously Two For ten thousand volts occurs, due to electric shock, heavy life-threatening there is the danger that a large susceptible to injury.



### Caution

■ To prevent failure of the car and fire

Please make sure that the bulb is securely attached to the correct position.


# simple Check the fuse, exchange

Electrical system when the device or when the light does not turn on does not work, fuse You could be off. Please Perform an inspection of the fuse.

Procedure The engine is switched "LOCK" To.

Procedure Open the fuse box.

► Engine room

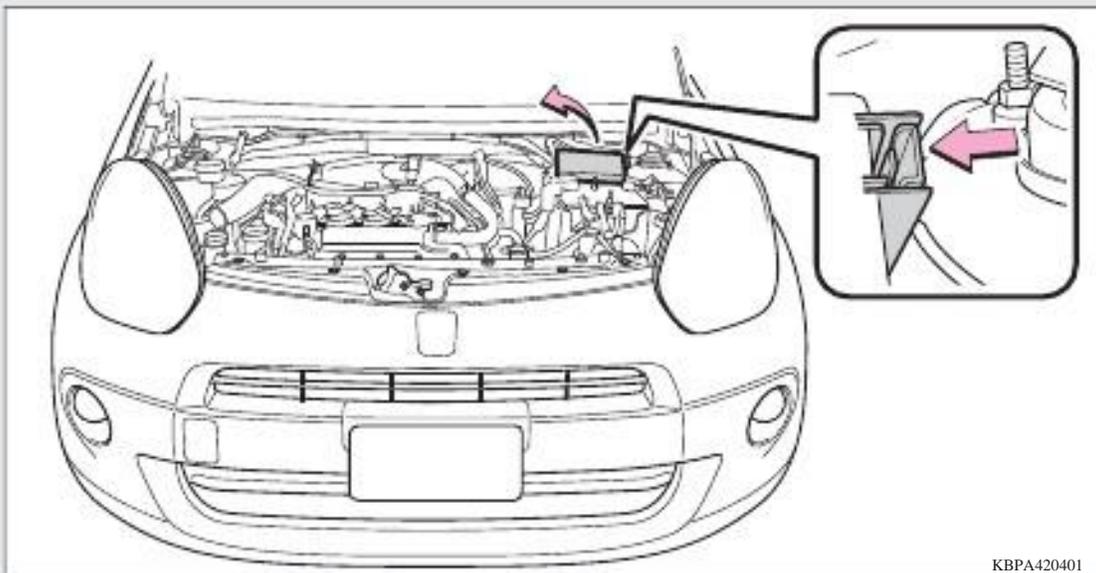


Hold down the nails, lift the cover.

Four


You  
Hand  
Input  
Are  
Of  
Tooth  
Or  
Was

► Foot passenger seat

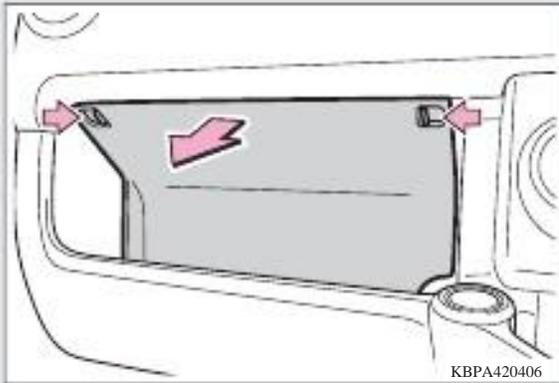


Press the left and right in the center of the knob, Department of Server — hand Before Minus Te preparative Lee Not Be.

Three From the situation of failure, and placement of the "fuse the fuse  
Two Load should be checked (→ P. 249) check in).

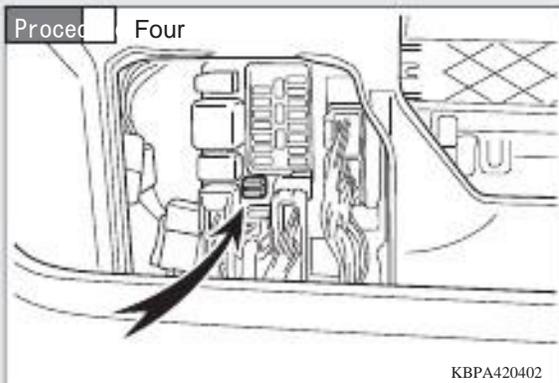

Pull the fuse in the fuse disconnect Pull the tree.

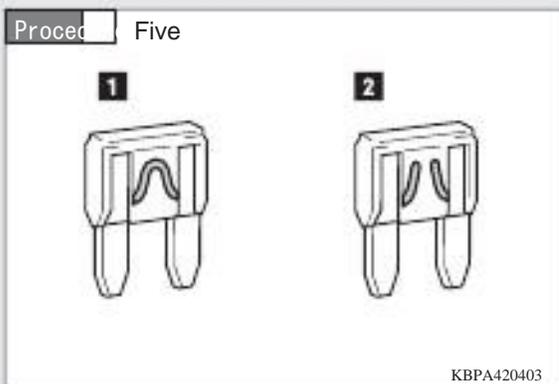


Check whether the fuse has not blown To.

- 1** Normal
- 2** A blown fuse

Display in accordance with the fuse box, Replace the fuse of specified capacity.

Placement of the fuse and the

load  
■Engine room

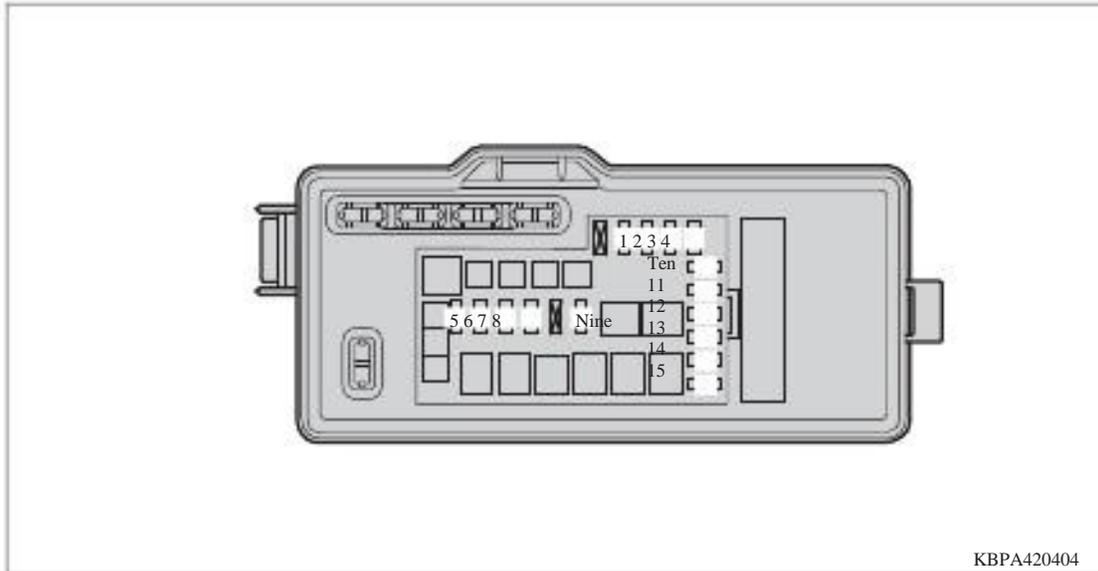

KBPA420404


	Hughes name	Amperage	The main responsible of the fuse device name
One	ECU-B	10A	Automatic transmission system Stem
Two	MGC	10A	Air conditioning
Three	FR DEFOG	20A	Front Wind encounter Sir
Four	ABS2	20A	ABS, VSC
Five	H-LP HI RH	10A	Headlight high beam (right)
Six	H-LP HI LH	10A	Headlight high beam (left)
Seven	H-LP RH	10A	Low beam headlights (right) / High Beam (halogen)
	H-LP LO RH		
Eight	H-LP LH	10A	Low beam headlights (left) / High Beam (halogen)
	H-LP LO LH		
	H-LP LO LH		
Nine	ST2	7.5A	Starter
10	STOP	7.5A	Brake light, ABS, VSC, EFI Computing Target
11	RR FOG	7.5A	Rear fog light

Four

You Hand Input Are Of Tooth Or Was

Hughes name	Amperage	The main responsible of the fuse device name
12 DOME	7.5A	Interior light
13 EFI	15A	EFI Computer
14 ST1	30A	Starter
15 BACK UP	15A	Audio, key-free system, Meter, Stop & Start System

■Foot passenger seat

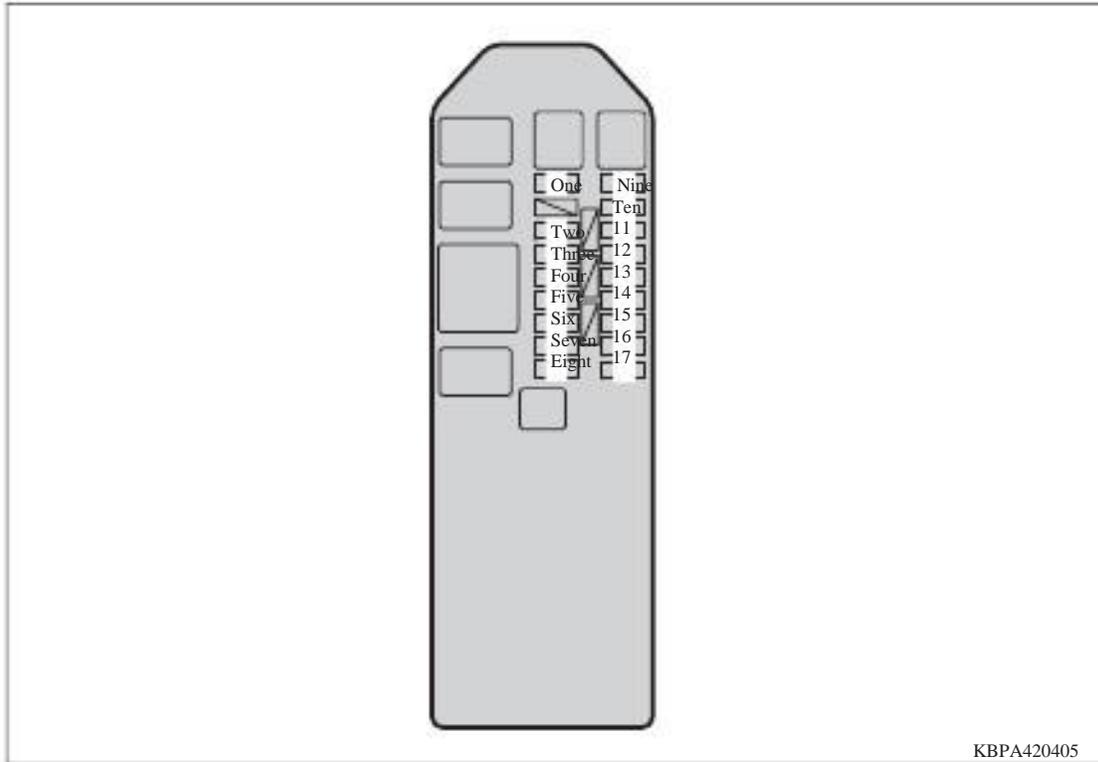

Hughes name	Amperage	The main responsible of the fuse device name
One ACC	7.5A	Audio, electric retractable door mirrors, Key-free system
Two ECU IG1	7.5A	Air bag, ABS, VSC, Electric performance Power steering, auto leveling System
Three HORN / HAZ	10A	Horn, lights flashing very key free system System
Four AM2	20A	↓
Five D / L	15A	Keyless entry system, key system free System
Six AM1	15A	↓
Seven TAIL	10A	Taillight, light vehicle width, number of lights
Eight ETCS	10A	EFI Computer
Nine FR WIPER	20A	Front wiper, front Wagga Shah

Four

You Hand Input Are Of Tooth Or Was

Hughes name	Amperage	The main responsible of the fuse device name.
10 RR WIPER	15A	Rear wiper, rear washer
11 FOG RH	7.5A	Front fog light (right)
12 DEFOG	20A	Front Wind Defogga
13 FOG LH	7.5A	Front fog light (left)
14 SOCKET	15A	Accessory socket
15 E / G	10A	Ignition system, EFI Computer
16 ECU IG2	7.5A	EFI Computer, automatic Transmission system, Stop & Start System
17 IG1/BACK	7.5A	Air conditioning, heating control, after Light leaving

---

 Knowledge

---

■ After replacing the fuse

- Or when the light is not lit and be replaced, please replace the bulb.

(→ P. 229)

- If the fuse blows again after replacement, do you inspect the Toyota dealers Dasai.

■ And take too much load from the battery circuit

Has been designed to cut the fuse before damage to the wiring.



### Warning

■ To prevent failure of the car and, a vehicle fire

Please observe the following.

May result in failure of the car and fire, injury and no charm imperative.

- Please do not use anything other than the fuse or fuse other than the prescribed capacity.
- Please use genuine Toyota always fuse or an equivalent.
- Please do not modify the fuses and fuse box.

Four

You  
Hand  
Input  
Are  
Of  
Tooth  
Or  
Was


# simple Key battery

When the battery is worn, please replace the batteries with new ones.


## ■What you need

- Flat-blade screwdriver
- Small Phillips screwdriver
- Lithium Battery
  - CR1632 (Vehicles equipped with key-free system)
  - CR1616 (Vehicles equipped with wireless door lock)


## ■How to change the battery (vehicles equipped with key-free system)

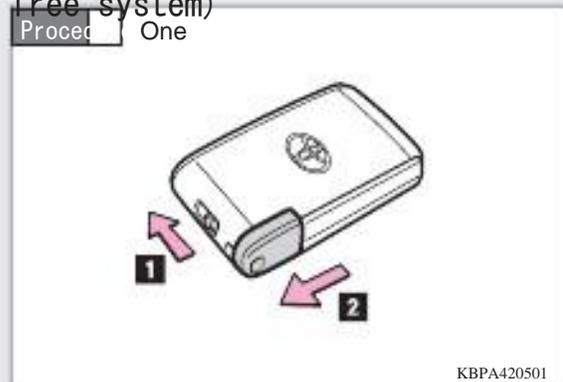


Disconnecting the mechanical key.

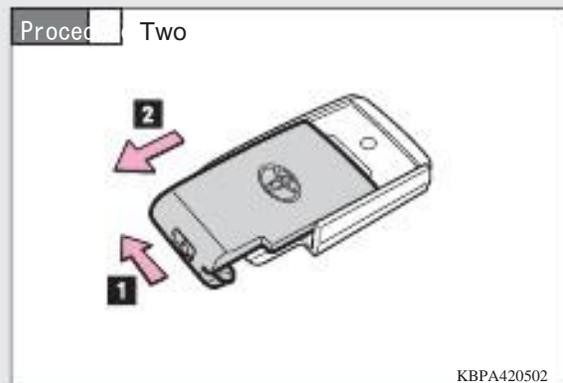

Remove the cover.

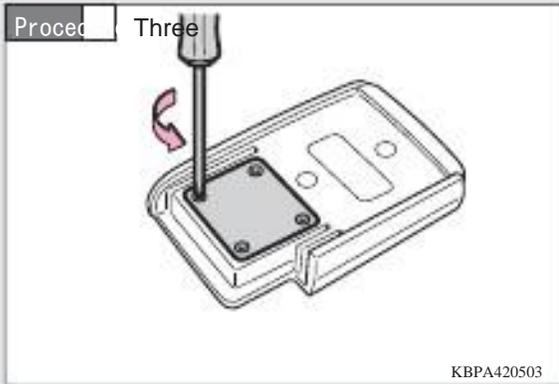


Remove the lid.

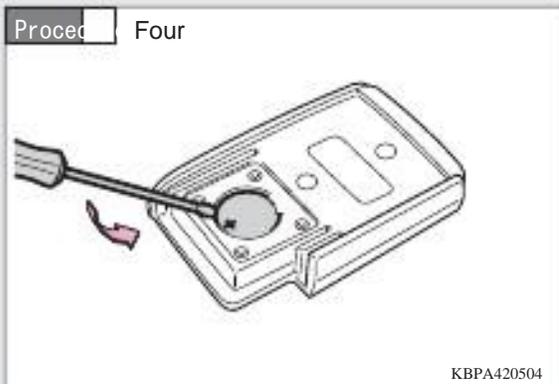

Remove the batteries were exhausted.  
New batteries + Taken at the top of a pole  
Give.

Procedure Five When installing, install in the reverse order it was removed  
File.


■ How to change the battery (vehicles equipped with wireless door lock)

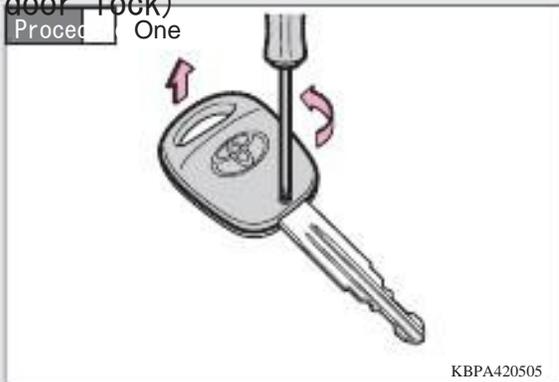


Remove the cover.

Four

You  
Hand  
Input  
Are  
Of  
Tooth  
Or  
Was

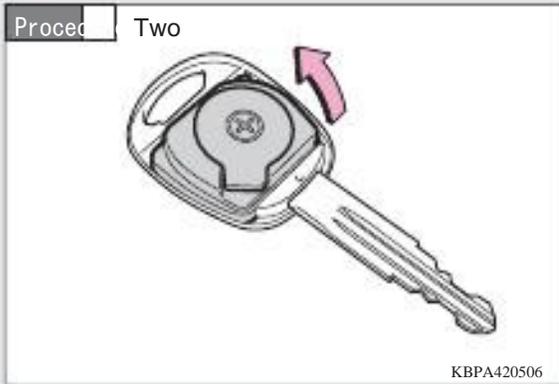

Removing the module.

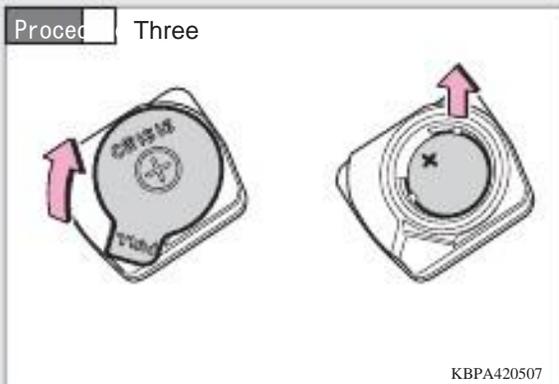

Remove the module cover consumables  
Remove the batteries were.

New batteries + Taken at the top of a pole  
Give.

Proced When installing, install in the reverse order it was removed  
File.

## Knowledge

- 
- 
- 
- Lithium Battery ),



### Warning



Section or, it may lead to death in the worst case.



### Caution

■ For after the exchange, to function properly

Please observe the following.

- Not replace the battery with wet hands.  
Can cause rust.

- To parts other than the battery, do not touch or move

- Not to bend the electrode


Four

You  
Hand  
Input  
Are  
Of  
Tooth  
Or  
Was

\* :Different equipment and optional equipment such as vehicle type

## Supply of washer fluid

"LOW" When is visible, because they complement the lack of washer fluid  
Please to feed.

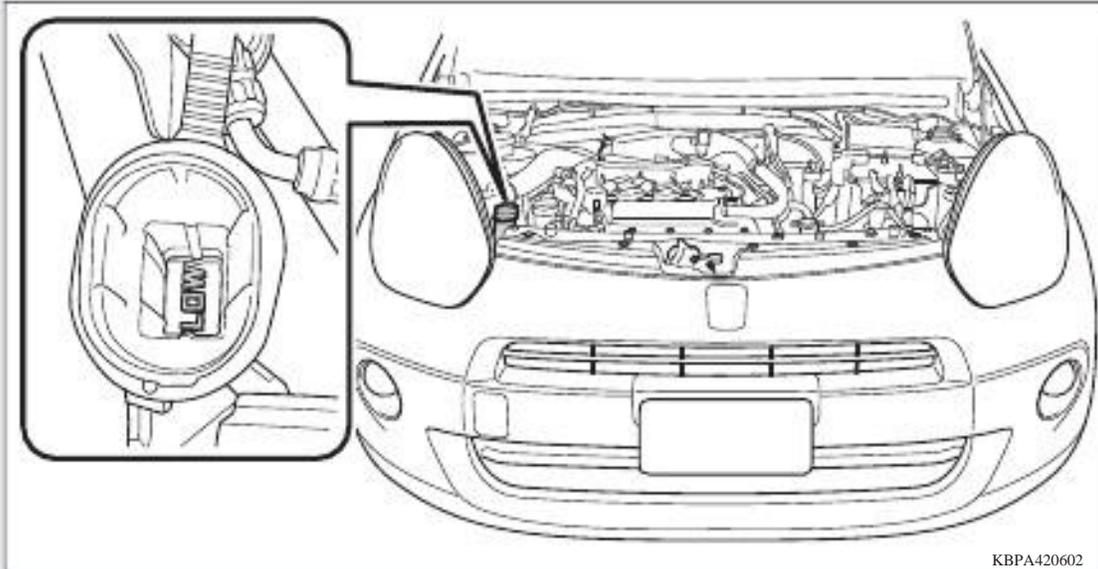

Make sure to open the lid.

### Knowledge

- For replenishment of the rear wiper washer fluid

Tank washer for the rear wiper for the front wiper is shared with.

### Warning

- When you supply the washer fluid is

When the engine is at stake or when the engine is hot, replenish washer fluid  
Please do not. The washer fluid because it contains alcohol component, painting  
Is dangerous and may result in fire, etc. according to the  
engine.



### Caution

■ For washer fluid

Instead of the washer fluid, antifreeze, etc. Do not put the soapy water and engine  
Dasai.

You, they may cause stains to paint of the vehicle  
body.

■ Way of washer fluid diluted

Please diluted with water if necessary. The percentage of water and washer fluid,  
washer  
Please refer to the freezing temperature of the liquid is then  
displayed on the container.

Four


You  
Hand  
Input  
Are  
Of  
Tooth  
Or  
Was

# Replacement of air filters

In order to use the air-conditioned comfort, air conditioning filters regularly Please exchange to.

## How to change the

Procedure One The engine is switched "LOCK" To.

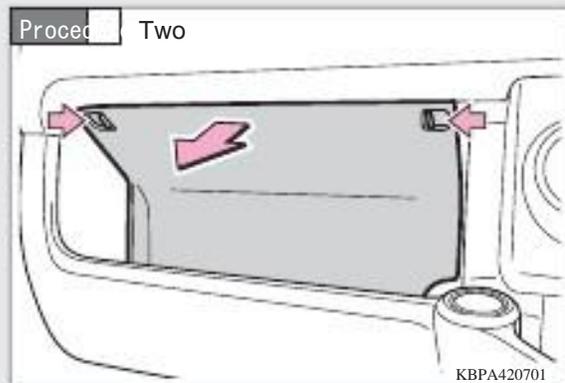

Press the left and right in the center of the knob, Department of Server — hand Before Minus Te preparative Lee Not Be.


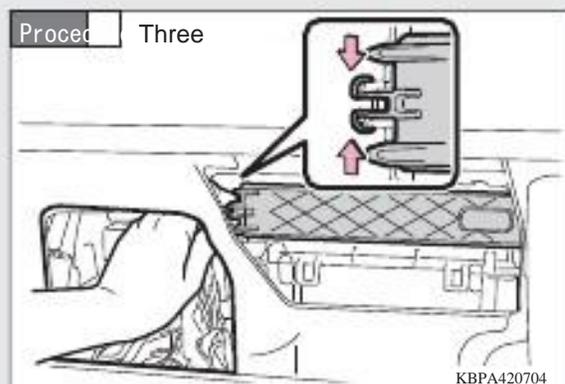



Figure Of Ranked # Position Or From Left Hand The Input Are Te, The nails of the left filter cover Pinch.

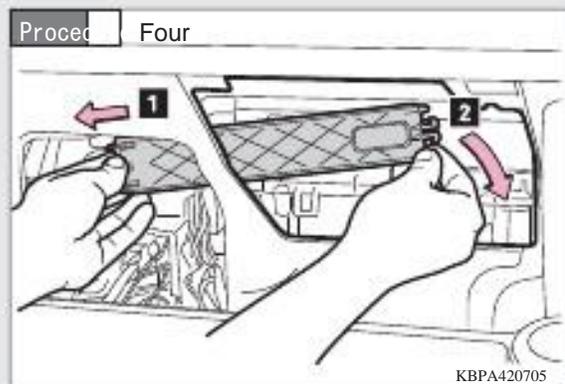

Off Filter — mosquito Bar Remove the Lee Not Be.

**1** Knob while the tabs on the left, The filter cover to the left Remove let ride.

**2** Withdrawn from the right.

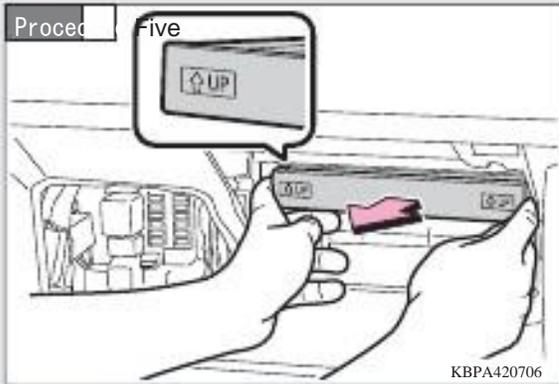

With your index finger in both ends of the filter  
Grasp and remove the filter  
Then, replace with a new filter  
File.  
"UP" arrow mark facing up  
Attach.

Procedure When installing, install in the reverse order it was removed  
File.

#### Knowledge

##### ■ For replacement of air filters

Air conditioning filters, please replace the timing of the following guideline.  
Exchange: 20,000 km [10,000 km ※] Each

※ cold regions such as metropolitan and district, a lot of traffic and dust

##### ■ When the amount of air conditioning wind has decreased

It could be clogging of the filter, please replace the filter.

#### Caution

##### ■ Caution when using the air conditioning

When you use the air conditioner without the filter installed, may cause a failure  
You. Please attach the filter always.

Four

You  
Hand  
Input  
Are  
Of  
Tooth  
Or  
Was



## If you encounter trouble **Five**

Table 5-1. First

When the failed 264 .....
Very light flashes 265 .....
Warning flare..... 266
For traction 268 .....
Fuel Pump
Shut-off system 274 .....

Figure 5-2. Remedy Emergency

With a warning light when 275 .....
When you punk..... 280
Engine
If you do not take the 291 .....
Shift lever is
If you can not shift 293 .....
If you have lost the key 294 .....
Electronic key card
If you do not work properly
(Key-free system
Vehicle-mounted)..... 295
The battery is
When the up 297 .....
Overheat
When you are 300 .....
When the stack 302 .....
To stop the vehicle emergency 303 .....

# When the failed

In case of trouble, please follow the instructions below as soon as possible.




While flashing the lights flashing very  
The shoulder submitted to stop the car.

(→ P. 265)

Flashing light is very, yam, such as  
failure in

If you park on the street without  
obtaining, other vehicles

Used to inform.

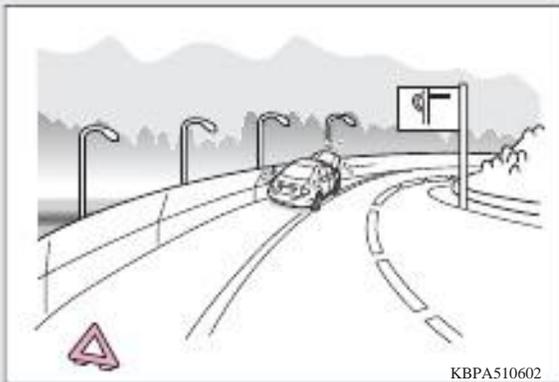


High speed Road And self- Automobile Only  
Road In

Is also the display board to the rear of  
the vehicle stop

Does not stop Stop table 示灯 Place the It  
has Kuda ' S

The stomach. Also required to have been  
legal (

You. )

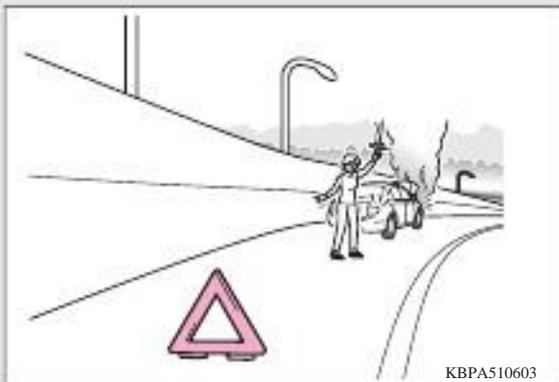


If in a case requiring emergency flares  
The figure. (→ P. 266)

## Table 5-1. First Very light

Please use it, such as when an accident or malfunction.


- ▶ Vehicles equipped with automatic air conditioning

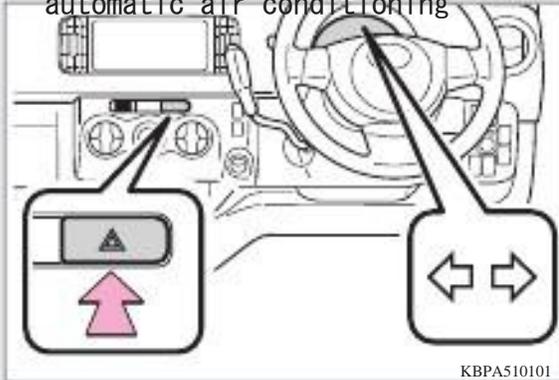

KBPA510101

When you press the switch in all directions  
Indicator light will blink, and press it again  
And will turn off.

- ▶ Vehicles equipped with manual air conditioning

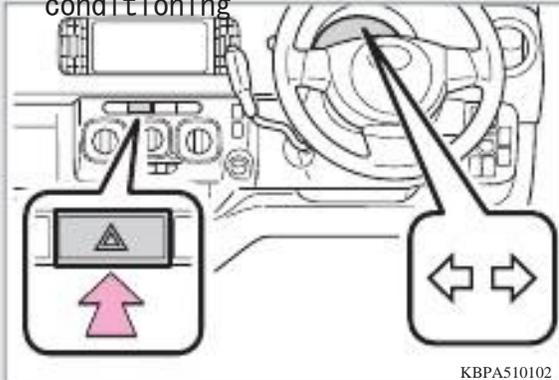

KBPA510102

### Caution

- In order to prevent the battery up


Please do not use very long blinking lights in the engine is stopped.

Five


Port  
La  
Block  
Le  
Is  
Cause  
I  
Was  
From

## Table 5-1. First Warning


Such as when an accident or breakdown, please use in an emergency. Duration of flaming is about Five Minutes. Please use in conjunction with very light flashes.

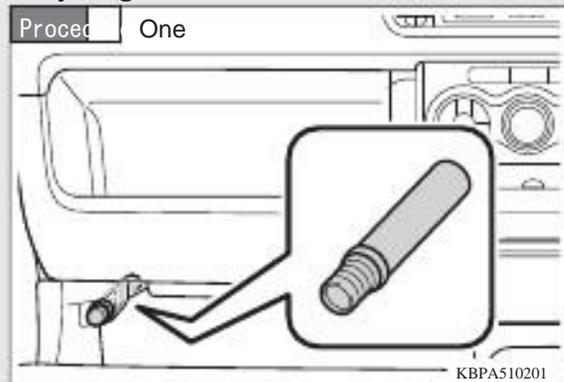

Assistant Seat leg Original Flame from The tube Take Out Be.

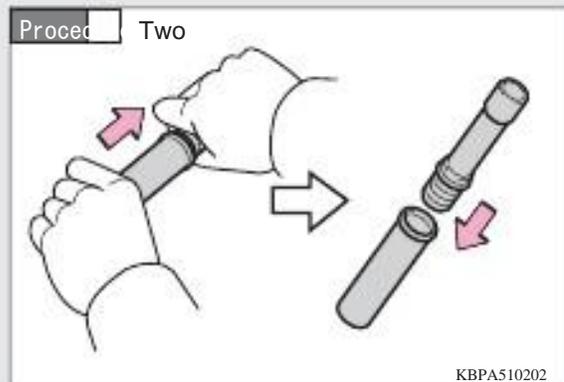

While turning the body without the body By inserting and then upside down.

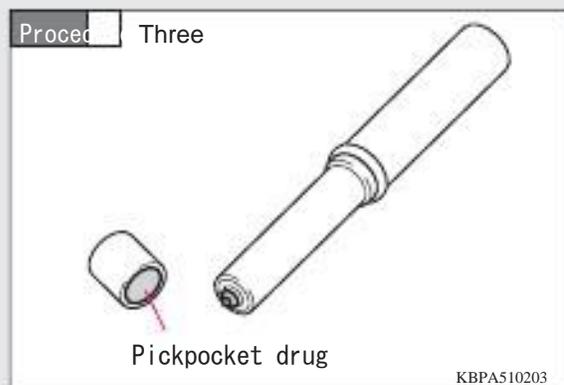

Remove the lid of the tip, sliding Medicine and rub the tip of the flares, wearing To Tues.

### Knowledge

#### ■ Expiration date of flares

Before a certain validity period expires to display, please be purchased from Toyota dealers.

**Warning**

- Flares can not be used where

At the following locations, please do not use the flares.

Is dangerous because it may get worse visibility in smoke, ignite.

- In the tunnel.
- Near flammable materials such as gasoline

- Treatment of flares

Please observe the following.

There is the danger may be subjected to serious injuries and no charm imperative.

- In use, or a flare toward the face and body, or does not close
- Flares does not touch the children

# Table 5-1. First For traction

Tow, please ask your dealer or manufacturer Toyota as much as possible  
The stomach.

## ■ In front of the tow


In the following cases, be considered for the failure of the drive system,  
your dealer about Toyota

Please tell me.

- The engine starts, the car does not move


- There are any unusual sounds

## ■ When it is towing

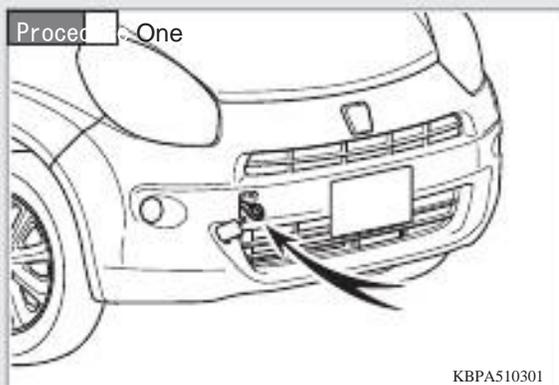

Low so as not to damage the vehicle  
Applied to the tow hook group.

Please step forward in the direction of the  
tow.

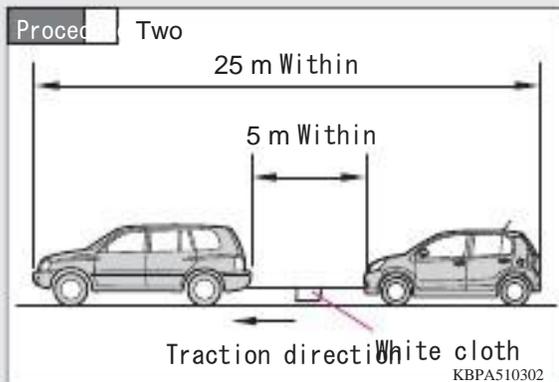

(B) Of the Group Center White to Cloth  
With the Only  
File.

The size of the cloth:

0.3 m Square (30 cm × 30 cm)

Or more

**Procedure** Start the engine of a vehicle which is towing.

When the engine is not applied, the engine is switched "ACC" or "ON"

Please then.

**Procedure** The shift lever of a vehicle which is towing N From then on, Perkin


To cancel the Gubureki.

In tow, you should not slack rope brake light note of the car in front

Please.

#### ■ When you tow


Was forced to tow rope by another car on the street generally failed  
Is of the eye. Heavier than the vehicle towing the car is not available.

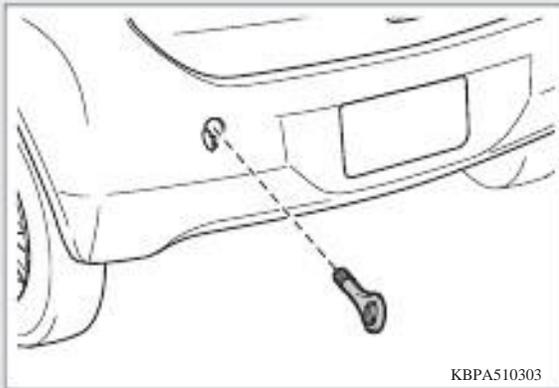


## Attaching the tow hook

Procedure: Remove the lid with a cloth and rely on flat-blade screwdriver.


### ► Front (standard car)

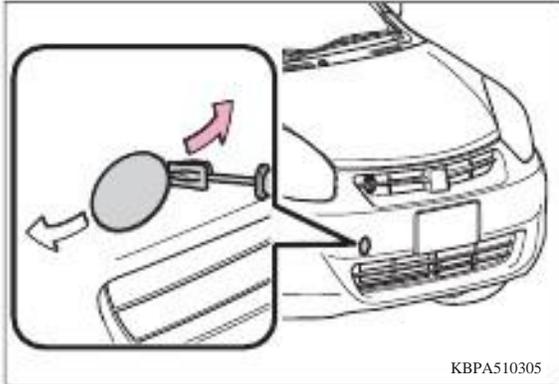


### ► Front (+ Hana Vehicle specifications)

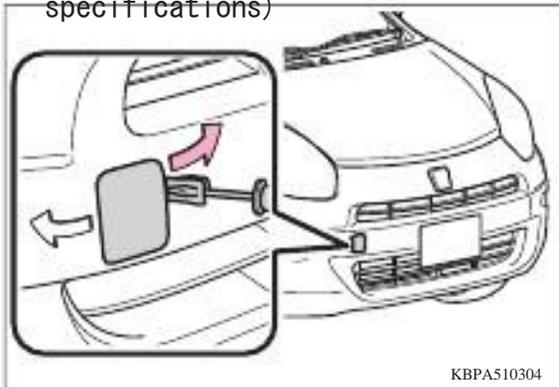


### ► Rear

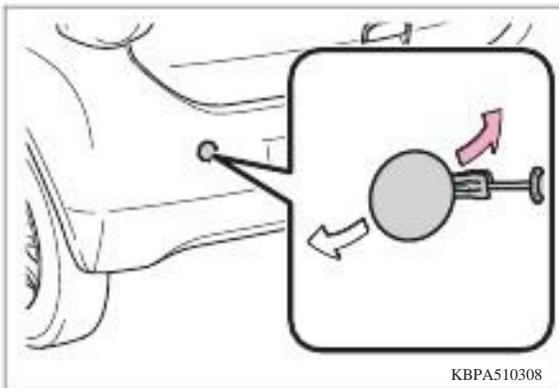

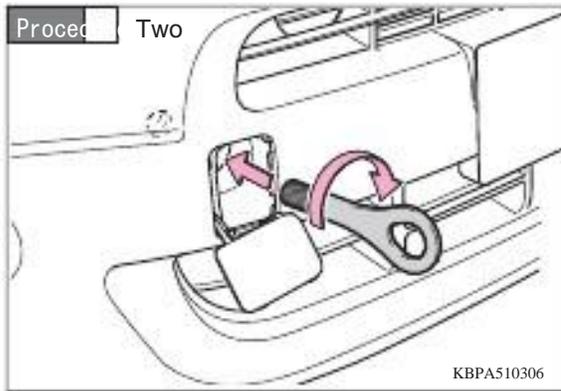

Insert the hook into the hole lightly  
traction  
Tighten.

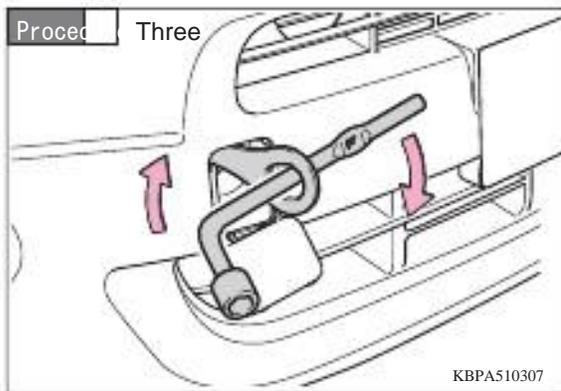

Reliably use the wheel nut wrench  
Attach to.

 Knowledge

- The stowed position of the tow hook
- II. 280

**Warning**

## ■ When installing the vehicle towing hook

Please attach firmly to the specified position.

Come off when not towing and securely attached to the specified position, the unexpected risk therefore is dangerous.

## ■ When transporting a vehicle

Surely Four Ground or wheel, Four Please be transported in state wheels also

Doing so may cause burn-in is causing the drive unit, and the car burst from the truck. Also, when the failed component seems to be the drive system is always Four Lift the wheel to transport please.

## ■ For operation in the tow

## ● When performing towing please pay close attention.

Sudden acceleration or incorrect vehicle operation overloading the hook and rope tow Please be avoided.

Tow hooks and rope may be damaged. In the unlikely event that debris Per person is dangerous such as ambient, may give a serious injury.

## ● The engine is switched "LOCK" Please do not.

Operation will not be able to handle the handle is locked, you will lead to an unexpected accident there is the danger it is.

## ● Car to be towed, please drive carefully.

Becomes weak or effectiveness of the brakes, I usually have a handle and the engine will be stopped heavily Lee.



### Caution

■ To prevent damage to the vehicle

● When you tow Please observe the following.

- Do not use wire rope
- Speed 30 km / h Below, the distance 50 km Traction within
- Traction in the forward direction
- Not apply to the Ministry of suspension rope

● Please do not tow the car is heavier than the vehicle.

May cause serious damage to parts such as drive system.

■ When you tow with a long downhill

Please tow truck to drive by car.

If you do not tow with a tow truck, there is a risk overheating brake effectiveness deteriorates  
You.

## Fuel pump shut-off system

And when the engine has stopped SRS When the airbag is  
Fuel pump shut-off system is activated, stop the fuel supply  
Then, minimizing fuel leakage.

After the system has been activated, to start the engine, follow these steps:  
, Please.

Procedure To restart the engine is switched "ACC" or "LOCK" To

Procedure To restart the engine



### Caution

- Before starting the engine

When you cancel the suspension of the fuel supply, make sure that you do not have  
enough fuel leakage  
The stomach.

## With a warning light when

If you leave lights or warning light is flashing, as follows: calm  
Please deal with later. Even if the flashing lights, then turn off is normal  
if  
No.

, Please stop immediately. It is dangerous to continue driving.

The following warning means that there is a risk of failure of the brakes. It  
immediately  
Stop in a safe place, please contact your Toyota dealer.

Warning light	Na content warning warning
	<p>Brake warning light (buzzer warning) ※</p> <ul style="list-style-type: none"> <li>- Lack of brake fluid</li> <li>- Abnormality of the braking system</li> </ul> <p>Also illuminates when the parking brake is not released. Solution After removal, it is normal if you go out.</p>

※ not release the parking brake warning buzzer when traveling:

The vehicle speed 5km/h Warning buzzer will be exceeded.

, Please stop immediately.

The following warnings that can lead to dangerous and unexpected damage to the means. Stop in a safe place immediately, and contact Toyota dealer Please.

Warning light	Na content warning warning light
	Charging warning light Abnormality of the charging system
	Oil pressure warning light Abnormality of engine oil pressure
	High water temperature warning light Abnormality of the engine cooling water temperature

Please immediately for inspection.

The following warning, and allowed to stand, the system will not work correctly, and therefore unexpected danger, this means that there is a failure could result. Inspection at Toyota dealers immediately.  
Please receive.

Warning light	Na content warning warning light
	Engine warning light - Engine electronic control system malfunction
	SRS Warning light air bag / pretensioner - SRS Abnormality of the air bag system - Abnormality of the seat belt system with pretensioners
	ABS Warning light - ABS Abnormality of
	Power steering warning light - EPS Abnormalities (Electric Power Steering)
	Discharge warning light headlight auto leveling * - Automatic optical axis adjustment system malfunction
 (Flashing)	Shift position indicator - Automatic transmission electronic control system malfunction
	Slip indicator light * - VSC Abnormality of the system - TRC Abnormality of the system
 (Blinking amber)	Stop & Start Indicators * - Stop & Start Abnormality of the system - Time to replace the starter, the battery

\* :Different equipment and optional equipment such as vehicle type

Treated immediately, please.

The following warnings are treated according to the method of each deal, the warning light to off. Please check that the file.

Warning light	Na content warning warning	How to deal
	Half door warning light Door closed to ensure that either Do not wait	All close the door.
	Seat belt driver's seat Wear warning light (Buzzer warning) ※ One Non-wearing of seat belt driver's seat	Wear a seat belt
	Fuel level warning light The remaining amount (of fuel) approximately 7.5L Below, 4WD Is ※ about 6.5L Flashes and less than or equal to) Two	Refueling

※One Wear seat belt warning buzzer non-driver's seat:

About the vehicle speed remains non-seat belt wearing driver's seat 20 km/h Greater than or equal to the buzzer and warning  
30 The second to become intermittent. And non-wearing of seat belt remains the driver's seat and then also part

※Two Will change the sound of the user 90 Seconds will sound.

Low fuel warning light:  
Faster and blinks even less fuel.

Treated immediately, please (vehicles equipped with key-free system)

Treated according to the method to check each deal, it turns off warning light, Please.

Warning buzzer Vehicle ( )	Key free System Warning light	Content warning	How to deal
※ continuous sound One	 (Flashing fast)	Electronic key card to mobile With no engine or the And that as only	Mobile electronic key card ※ to band Two
FiveTime	 (Flashing fast) vehicle Mobile	The engine switch "LOCK" In a state other than, Opened the door of one, Or The same electronic key card to the outside of the Out immediately and closed the door	The engine is switched "LOCK" To ※ to band Two

※One When the door is open either, warning buzzer will sound.

※Two If the engine does not start even though the car has electronic key card, the battery  
You may have expired. (→ P. 254)

Five

 Port  
La  
Block  
Le  
Is  
Cause  
I  
Was  
From

## When you punk


Please replace it with tires equipped with first aid, a flat tire.

(For more information on tire P.219 Please see the. )


### ■ Before lifting the vehicle with jack

- Moves to the ground firmly on a flat surface
- Apply the parking brake
- The shift lever P Add to
- Stop the engine
- Flashing lights blink very


### ■ Tools and jack position

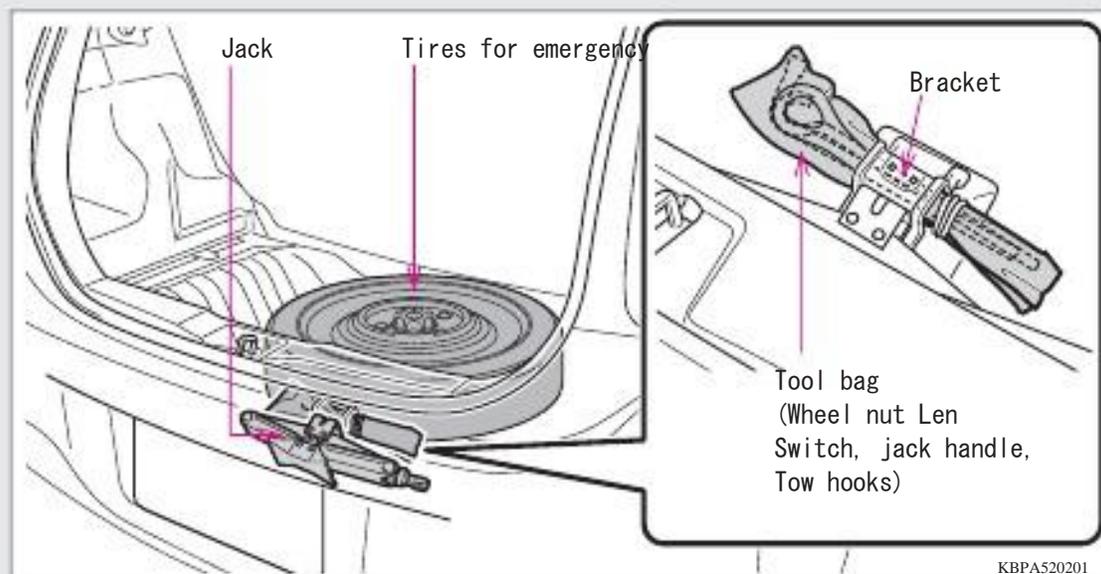

To eject a jack

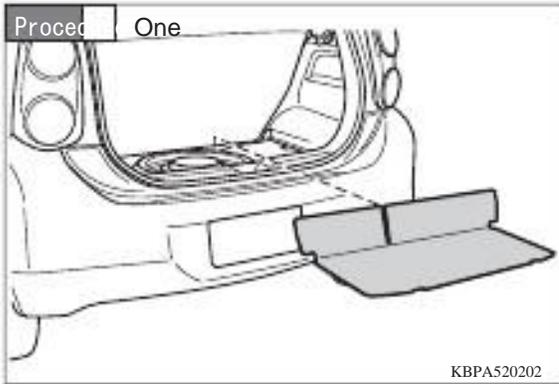


Remove the deck board.

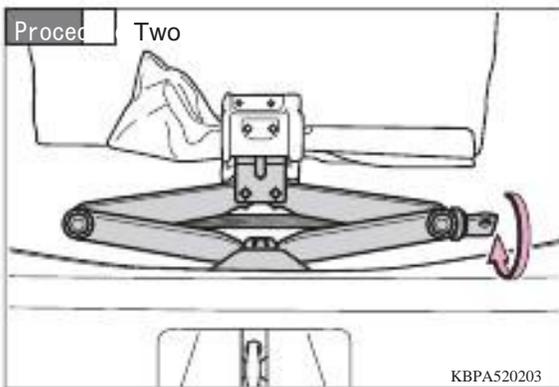


Take out the jack.

### Removing a tire for emergency

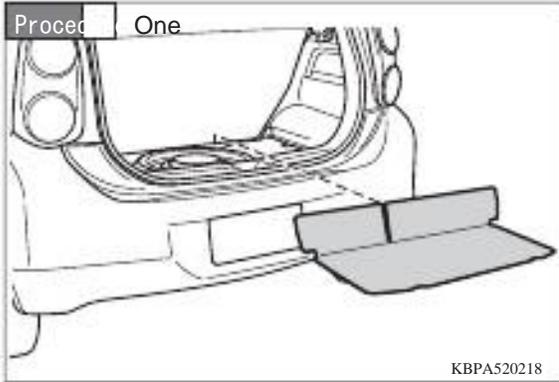


Remove the deck board.

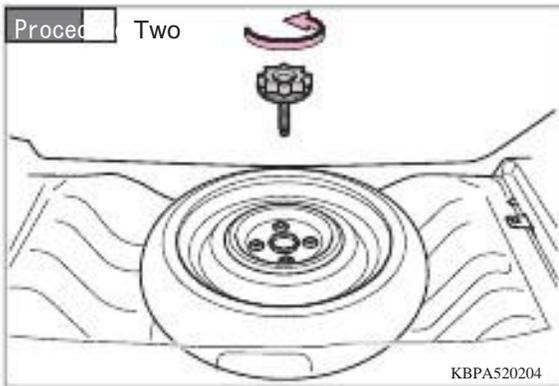

Remove the stopper, take out the tire.  
Be.


Replacement of a flat tire

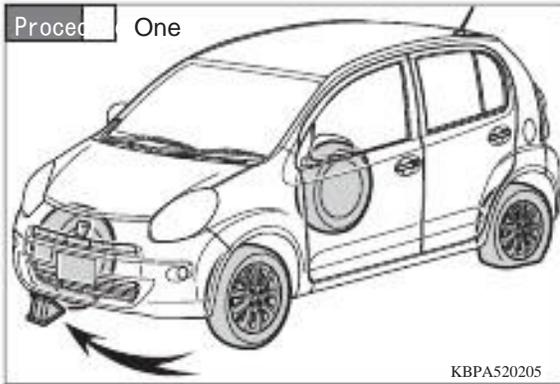


※ wheel to stop.

A flat tire		Stop position of the wheel
Front wheel	Left	Behind the right rear wheel
	Right	Behind the left rear wheel
Rear wheel	Left	Right front wheel before
	Right	Left front wheel before

※ Wheel is stopped, Buy Toyota dealers You can.

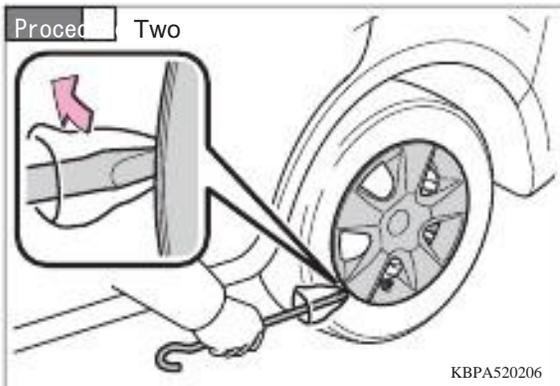


Di- ~Ya ~Tsu Key Ha Application De Le The Use For And, (e) Wheel cap \* Remove the.

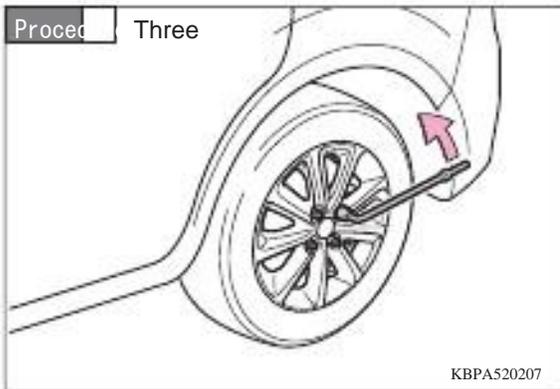


About a little (the nutOneLoosen the rotation).


\* :Different equipment and optional equipment such as vehicle type

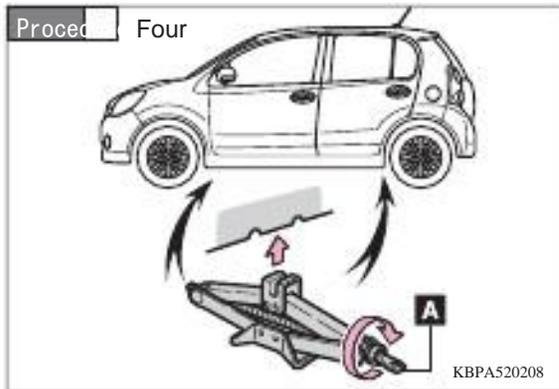

Jack A Turn the unit by hand,  
Set the groove position jack jack  
Firmly put.

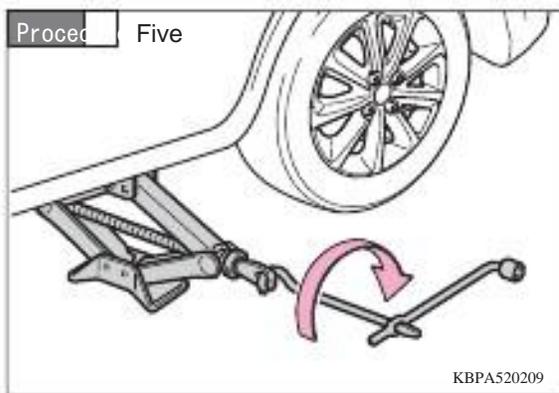


Data Lee Ya Earth is Surface From Small Away  
to Are Ru Or  
Is, raise the vehicle.  
Wheel nuts and jack handle  
Use in combination wrench as shown in the  
figure Please then for.

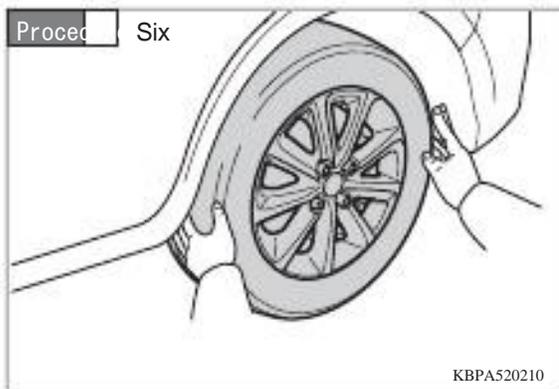

Remove the nut all, Thailand  
Remove an arrow.

When you place directly on the ground the tire,  
the host  
Design that will not damage the surface of the  
handwheel  
Please keep you on the design surface.

Mounting of the tire

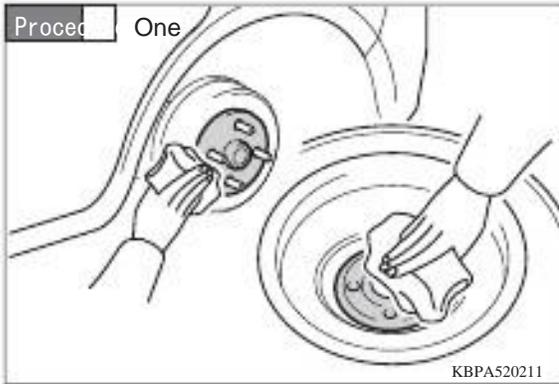


(E) Lee — Le contact Touch Of surface Pollution Are Off the I Preparative File.

A dirty wheel contact surface, traveling Loose nut in, out of the tires There is injury or death.

▶ When mounting the tire, the tire nut by hand until the degree is not Gatatsuka To tightening.


▶ When changing from steel to steel wheels for emergency tire wheel ( Including a)

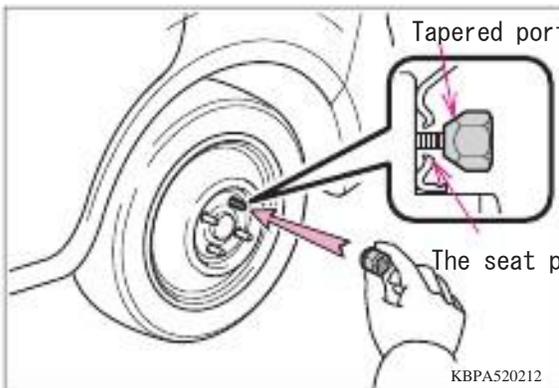

Of the tapered portion of the wheel nut System — Port unit To Light Do this Was Ru To Or I Be.

The seat portion

▶ When changing from aluminum wheels to tires for emergency

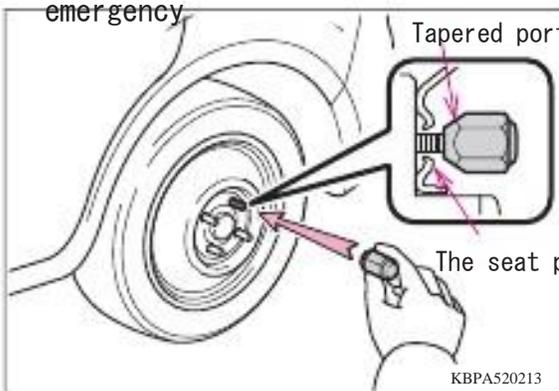


Of the tapered portion of the wheel nut System — Port unit To Light Do this Was Ru To Or I Be.

The seat portion


Five

Port  
La  
Block  
Le  
Is  
Cause  
I  
Gas  
From

► When changing from aluminum to aluminum wheel wheel

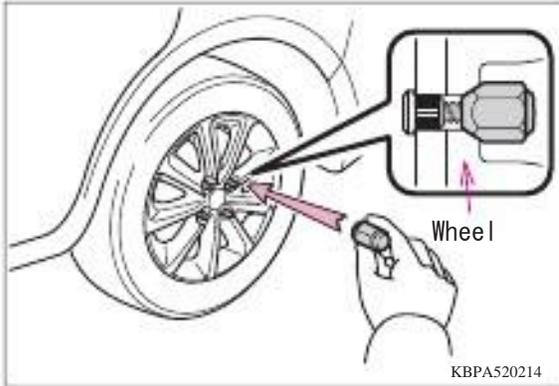


The tapered portion of the wheel nut  
Tightening until it hits you.

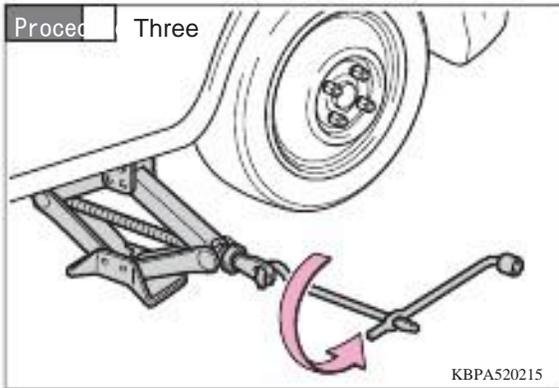


Proced Three

Lowering the body.

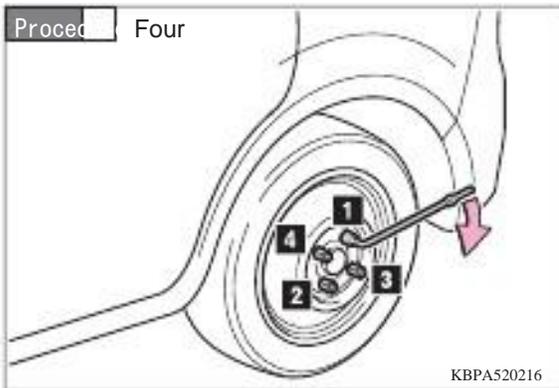

Proced Four

The nut in the order number of the figure  
Two, Know timeThree  
Borrowed tighten.  
Tightening torque:  
103 N-m (1050 kgf-cm)

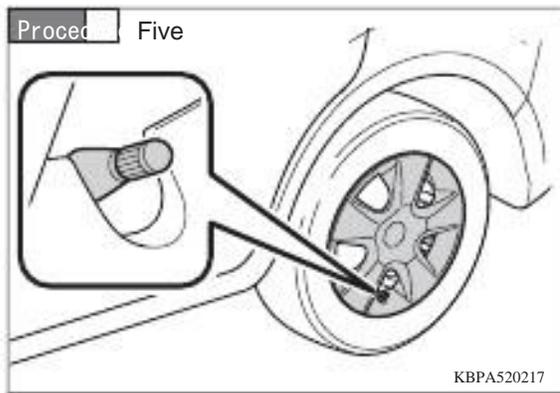

Hubcap \* Attach the  
File. ※

Valve of the tire and wheel (air vents)

Align the notch in the cap, Hoi

Reliably by pressing the outer periphery of the  
Le. Cap  
Attach.

※ Be mounted on the tire for first aid  
Can not be.

Procedure Storing the tire jack was punk-all tool.

## Knowledge

### ■Tires for emergency

- On the side of the tire TEMPORARY USE ONLY It is written with. Of emergency for  
Please use only.
- Please be sure to check the air pressure. (→ P. 310)

Five

Port  
La  
Block  
Le  
Is  
Cause  
I  
Was  
From

\* :Different equipment and optional equipment such as  
vehicle type



### Warning

#### ■ About the use of jack

Misuse of the jack, or serious injuries over the car to fall off, if the worst Can lead to death if.

Please observe the following things.

- Replacement tire jack, the purpose of mounting the tire chain use, other than the removal.  
Not for

- Jack built-in, in other cars because you can not use your car only Or use, not use your car jack of other cars

- Make sure that it takes to properly position jack jack set

- Do not put the body under the car that is supported by a jack

- In a state that is supported by a jack, or not to run over the engine

- Do not lift the car while the car carrying the human

- When lifting a car, do not put anything above or below the jack

- When lifting a car, do not raise more than the tire height can be exchanged

- If you are working under the car is dropped in to use the jack stand

When lowering the vehicle, in particular, pay attention to yourself and people around will not make the injury  
Bloom.

**Warning****■ For tire replacement**

- Immediately after driving, such as brake discs and wheel around Please do not touch. After traveling around the brake disk or wheel of Thailand, where it is exposed to high temperatures, do not touch the hands and feet and in exchange, such as wires, may cause burns.
- If you do not loose nut imperative that the next talisman, a wheel fell off, heavy Extends to a large or injury, can lead to death in the worst case.
  - Immediately after the replacement of the wheel 103 N·m (1050 kgf·cm Nut with the power of)
  - Tighten the
  - The mounting of the tire, using a dedicated wheel nut that you are using
  - Things such as collapse or cracking of nuts and bolts and the threaded portion, the bolt holes of the wheel
  - If an abnormality is subject to inspection by Toyota dealers
  - When installing the nut is mounted to the inner side tapered portion always (→ P. 222)

**■ When you use the tires for first aid**

- Because it is dedicated to your car, the car, please do not use other
- Please do not use a tire at the same time for two or more emergency
- Please replace it with a regular tire as soon as possible
- Sudden acceleration, sudden braking, sudden deceleration, please avoid sharp turn

**■ Speed limit when using the tires for emergency**

When you are fitted with tires for emergencies, 100 km/h Do not travel at a speed greater than the Basal.

For emergency tire, because it does not suitable for high-speed driving, could lead to an unexpected accident there is.

Five

Port  
La  
Block  
Le  
Is  
Cause  
I  
Was  
From

 **Warning**

■ **Mounting tires in first aid**

If there is a precise vehicle speed can not be detected, the system is not operating correctly following  
May cause.

- ABS
- VSC \*
- TRC \*
- Brake Assist \*
- Navigation system \*

Also, the system below, the performance is not only to function poorly, the drive system unit  
May adversely affect the product.

- Flex full-time 4WD System \*

 **Caution**

■ **For a flat tire while driving**

Please do not continue to run in the state I've got a flat tire.  
Even driving a short distance, you will damage the tire and wheel about can not be repaired.

■ **Mounting tires in first aid care to the step**

First aid in mounting tires, ride height is lower when compared to standard tire mounting stage.  
Please note that when you get over the difference.

■ **Tire chains for the tires fitted when using the emergency**

To tire emergency, please do not install the tire chains. Tire chain  
You may hit the vehicle body side, adversely affect the traveling. Snow-covered road, frozen road  
If the front wheel punctured, the front wheels without tires for use as emergency, use the rear wheel.  
Please install the tire chains attached to the front wheel from the rear wheel was removed.

■ **For storage of tires for emergency**

After storing a tire emergency, please make sure that it is securely fixed.

\* :Different equipment and optional equipment such as vehicle type

## Does not apply when the engine is

How to make a proper engine (→ P. 114, 117) Also, according to  
Released (the steering lock → P. 115, 118) The engine or even if)  
When not driven, please refer to the following.

### ■ Engine starter does not apply, even though it turned into a normal If

Possible causes include the  
following

- There is a possibility that does not contain fuel.  
Please to refuel.

- You may have too much fuel suction.  
Procedure again, the correct (→ P. 114, 117) According to), the engine  
Please spend.

- Engine immobilizer system \* There may be abnormal  
You. (→ P. 72)

### ■ Starter headlight interior light / dark around is slowly / If not, or the sound of the horn is small

Possible causes include the  
following

- There is a possibility of up battery. (→ P. 297)

- May be terminal of the battery is loose.

### ■ Starter does not rotate (vehicles equipped with key-free system)

It is possible that the abnormal electrical system, such as a blown fuse or  
disconnection of electrical equipment  
Be.

\* :Different equipment and optional equipment such as  
vehicle type

■ Starter does not rotate is not lit headlight interior light /  
If the / horn does not sound well

Possible causes include the  
following.

- May be terminal of the battery is disconnected.
- There is a possibility of up battery. (→ P. 297)
- There may be an abnormality in the steering lock system.

Engine also does not apply to the treatment, or when you do not know the methods of  
treatment

Time, please contact your Toyota dealer.

## When the shift lever can not be shifted

If the shift lever can not be shifted on the state stepped on the brake pedal,  
May be faulty (such as equipment to prevent accidental operation of the shift  
lever) shift lock  
You are. Please check in by Toyota dealer immediately.

## If you have lost the key


And the rest of the key from the key number is stamped on the key number plate,  
You can create a new key for genuine Toyota Toyota dealers.

(→ P. 18)

## When the electronic key card does not work properly

Or interfere with communication between the electronic key card and vehicle (→ P. 23) E  
 When the battery of the card key has expired, and wireless key-free system Remote control is no longer available. In such cases, the degree of the following steps:  
 You can open the software, or to start the engine.

### Unlocking of the door- locking

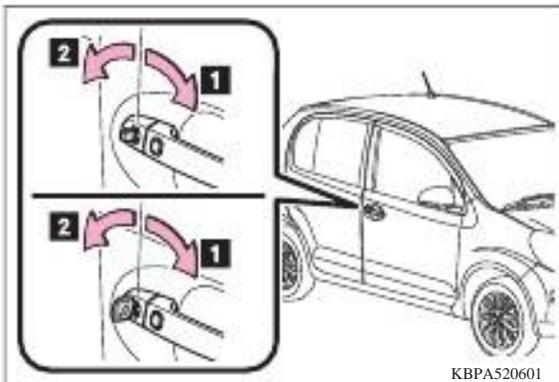


Mechanical key (→ P. 19) Also  
 Is Media Lee Helsinki — Use ~Tsu Te  
 operations Work Tooth Or  
 Be.

- 1** Locking all doors
- 2** Unlock all doors

### Way of starting the engine

► If you are using a mechanical key

Procedure Shift lever is P Step on the brake pedal in the state of.

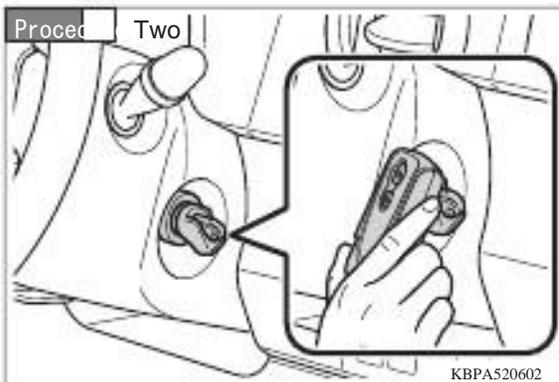

Toyotaen the back of the card electronic  
 key

The switch engine near the Bourem  
 State to touch, mechanical key

Insert firmly as far as it will go,  
 painting

Girls press the button switch to ensure

Please operate at.

Procedure Switch while turning the engine is brought into contact with the  
 electronic key card.


The engine is switched "ACC" If you, the security indicator (→ P. 128)

Turns off.

When not working, even after treatment, please contact the Toyota dealers.

► If you want to use the main key

Proceed **One** Shift lever is P Step on the brake pedal in the state of.

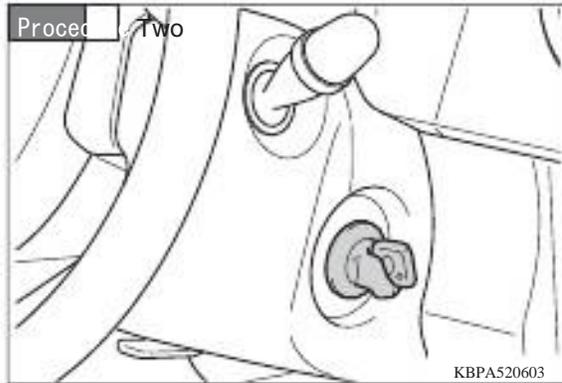

Firmly inserted as far as it will go the main key

Press into place, the engine switch. Please plug in the engine switch to ensure

Please operate at.

Proceed **Two** Press and hold to turn the engine switch.

The engine is switched "ACC" If you, the security indicator (→ P. 128) Turns off.

When not working, even after treatment, please contact the Toyota dealers.

## Knowledge

### ■ How to stop the engine

As well as how to stop normal engine, the shift lever P The engine carried out to Rotate while pressing the switch.

### ■ To change the battery

Way of starting the engine of the previous page is a temporary measure. When the battery has expired, it immediately. It is recommended to replace the battery. (→ P. 254)

### ■ When using the mechanical key, the main key is

Do the mechanical and push down firmly until the connectors to the back main key or key to ensure Boom.


Even when the key is not plugged in securely, and spins when the engine switch There. In this case, regardless of the position of the engine switch, a key late escape There is.

If the key had been missing, "LOCK" That inserting a key at a location other than a I can not, stop in a safe place once, that it does not interfere with the traffic the car. The engine is switched "LOCK" From back to the position of, inserted into the key again Please.

## When the battery has gone flat is

If the battery has gone flat, you can start the engine with the following steps:

And a set of booster cables 12V There is a car with a battery of relief For example, the following steps, you can start the engine.

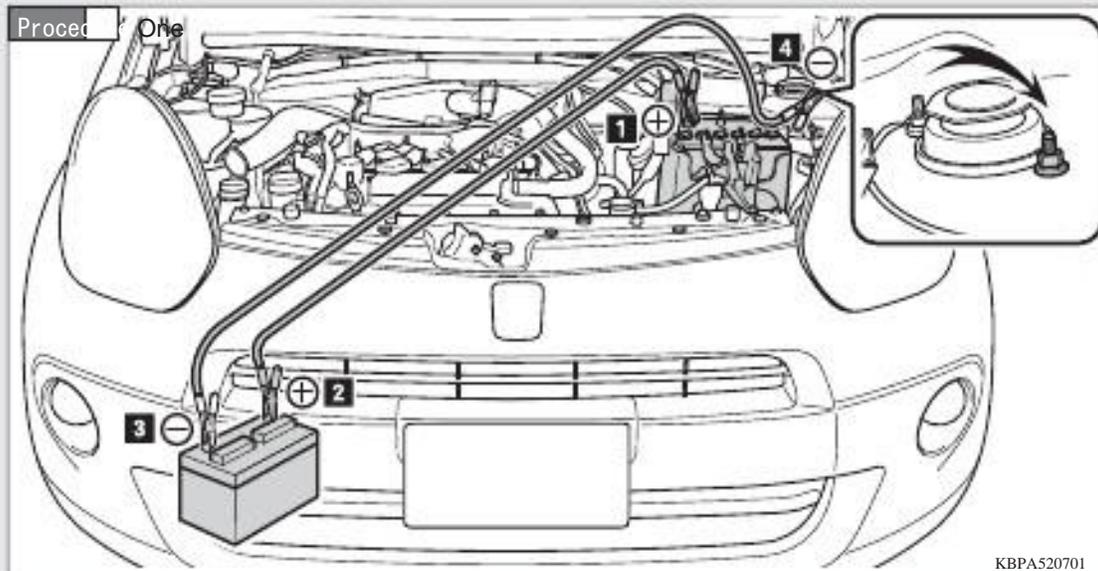

Of battery + Remove the terminal cover, the following order: the booster cable Connect with.

- 1** Connect the battery of the vehicle to the + terminal of the red booster cable
  - 2** Car batteries relief the other end of the red booster cable Connect to the + terminal fields.
  - 3** Relief of the car battery booster cables of black-Not one to terminal Tool.
  - 4** Away from the other end of the booster battery black cable Other link (the part that is fixed as shown in the figure) unpainted metal parts
- Procedure: Relief over the engine of the car, and then a little higher than the rotation about Five Minutes

Procedure: The engine switch "LOCK" Opening and closing the door of any in the state of (Vehicles equipped with key-free system)

**Procedure** While maintaining the engine speed of relief car, the engine is switched ON. Start the engine of the vehicle from then on.

**Procedure** After the start-up engine of the vehicle, connect the booster cable. Remove in reverse order when he and After you disconnect the booster cables, battery + The terminal cover Please return to the original.

Even if it takes the engine, please inspect the Toyota dealers in the early The stomach.

### Knowledge

■ For start up when the battery

This vehicle can not be started due to push-start.

■ In order to prevent the battery up

● When he is not suffering from the engine, make sure to turn off the lights and audio Bloom.

● When you are stopped a long time in traffic jams, etc., make sure to turn off the unnecessary electrical equipment Bloom.

■ When the battery has gone flat is

Information stored on your computer will be erased. Battery has gone flat Time, please inspect the Toyota dealers.

**Warning**

- In order to prevent ignition or explosion of battery

There is a risk of explosion is dangerous to ignite the flammable gas generated from the battery. So, please do not fire or sparks, such as that occur as follows.

- Booster cables are not accidentally be contacted in addition to the correct terminals or connection points
- Booster cables "+" and "-" Not to come into contact with the terminals of the
- Near the battery, does not cause a fire with matches or lighters, such as smoking or

- Handling of the battery

The battery is also in the related parts, has entered an acidic electrolyte solution that toxic and corrosive. Goods because it contains a mixture of lead or lead, concerning the handling, the following: Please observe.

- When handling the battery to wear safety glasses, (Acid) Skin, clothing, body fluid is

You do not want to adhere to the

- Not close to the battery, such as the face and head more than necessary
- In case of eye contact or body fluid is attached to the battery accidentally, immediately with plenty of water. Washing, seek medical advice immediately

In addition, your sponge or cloth to the affected area devoted to a doctor, was included in the water

- After handling related components of the battery post, the other terminal, wash your hands
- Keep away from children, to the battery

**Caution**

- Handling of the booster cable

Or connect the booster cable, when removed, the cooling fan and belts

Please use caution so as not to get involved.

Five

Port  
La  
Block  
Le  
Is  
Cause  
I  
Was  
From

## When the projector overheats

When you overheat:

**Procedure** Parked car in a safe place, stop the air conditioner.

**Procedure** Check that out steam from the engine room.

If the steam has gone out:

Stop the engine. If you no longer steam, Bonn with care

Open the net, to restart the engine.

If steam is not it:

Open the hood with care while I started the engine.


**Procedure** Check that the radiator cooling fan is operating.

If the fan is running:


Stop the engine high water temperature warning light

goes off. If the fan is not working:

Stop the engine immediately, to contact Toyota dealers.

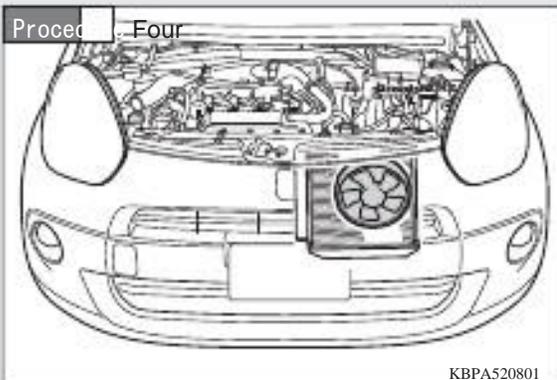

From the engine is cold enough,  
The amount of cooling water radiator and  
core  
Point the leak of cooling water (heat  
radiating section) section  
To Ken.

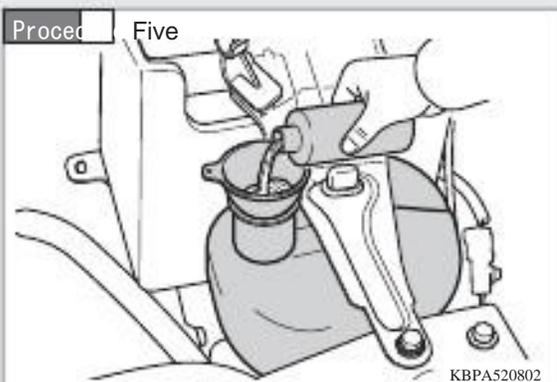

If you do not have enough cooling water,  
To replenish the cooling water.

If not, cooling water and first aid  
To replenish the water to.

, Please inspect the nearest Toyota dealer as soon as possible.

 Knowledge

■ And overheating

Here is a state of overheating.

- High water temperature warning light is lit or blinking, engine output is reduced
- Steam exits from the engine room

 Warning

■ In order to prevent accidents and injury in the engine room inspection

- If the steam has gone out from the engine room, the hood until there are no steam

Please do not open. In the engine room for is hot, I burn

Which may cause serious injury.

- When you are suffering from the engine, do the clothes away from the belt and hand fans and  
The stomach.

- Do not open hot radiator cap the radiator and engine

Please.

Fear the high-temperature steam and cooling water spouted by the pressure, resulting in serious injury such as burns

 Caution

■ Note When you put the cooling water

Please put the engine from cold enough.

Please put slowly cooling water.

Add cold water and sudden cooling when the engine is hot, late damage to the engine

There is.

Five

Port  
La  
Block  
Le  
Is  
Cause  
I  
Was  
From

## When the stack

Do not move or slip into a tire filled mud and sand, such as snow-covered road  
When the screen becomes, please try the following methods.

Procedure 1 Stop the engine. Apply the parking brake lever shift

The P To.

Procedure 2 Before and after removing the soil and

Procedure 3 snow tires. Such as wood and stone cut out the bottom of

Procedure 4 the tire. Restart the engine.

Procedure 5 The shift lever D Or R Placed to ensure that access to care while  
Go through the cell.

VSC Vehicle mounted, TRC-VSC If it is difficult to escape is working, TRC Or

VSC Please stop. (→ P. 156)



### Warning

#### ■ Warning when you escape

If you want to escape from the stack and repeat the forward and backward, the other  
Please make sure that there is nothing around to avoid the  
collision.  
When you escape from the stack, it may jump out the car forward or backward  
So, please pay particular attention.

#### ■ When you operate the shift lever is

Please be careful not to manipulate it remains pushed down on the accelerator  
pedal.  
The car is dangerous to sudden acceleration, may lead to an unexpected  
accident.



### Caution

■

●

●

# To stop the vehicle emergency

Procedure One

Procedure The shift lever N Add to.

► Shift lever is N If you went into the


Procedure After deceleration, stop the car in a safe  
side of the road.  
Procedure To stop the engine.

► Shift lever is N If you do not enter the

Procedure Continue stepping on the brake pedal with both feet, slowing down as  
much as possible.  
Procedure The engine is switched "ACC" Then, to stop the engine.



Vehicles equipped with key-free system

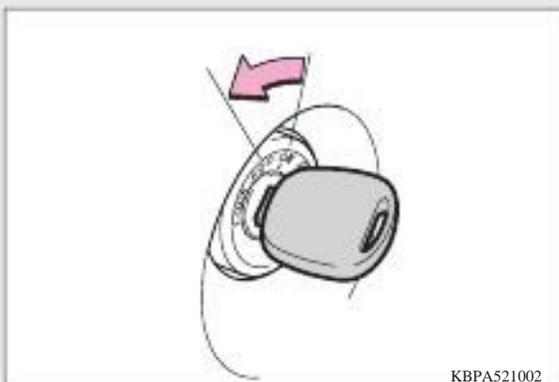

Vehicles equipped with non-key-free system

Procedure Safe side of the road to park the car.



**Warning**

- When forced to stop the engine while driving

Handle for heavier braking is poor, to the control of the car

Usually pose a safety hazard. Before stopping the engine, but try to correct the slow  
down enough

Vehicle  
specification

**Six**

Figure 6-1. Specification

List Maintenance data  
(Capacity and stocks of oils and fats) .....  
306

6-2 Customization feature

User customization  
Feature List..... 313

6-3 Initial setting

Initial items that need to be set 314 .....

Figure 6-1.

Specification List

Maintenance data (Capacity and stocks of oils and

The quality of oil you use, the life of the car will depend significantly. On Toyota vehicles, Toyota genuine kind that is most appropriate for liquid oil. (hereinafter referred to as specified inscription." It is therefore recommended to use a) referred to as " pattern. Are using a non-designated stock. If you, please use the things of quality corresponding to the specified stock.

Fuel

Specified fuel	Capacity [L] (Reference value)	
	FF (Front-wheel drive)	4WD (Four Wheel drive)
Regular unleaded gasoline	40	38


Engine oil

Designated stock	Oil and Engine Oil only Oilrufi Luther exchange Exchange	Capacity [L] (Reference value)	
Toyota Genuine Motor Oil SN 0W-20 ※ ↓API SN, RC / ILSAC GF-5, SAE 0W-20	1KR-FE	2.9	3.1
Toyota Genuine Motor Oil SN 5W-30 ↓API SN, RC / ILSAC GF-5, SAE 5W-30	1NR-FE	3.2	3.4

※ 0W-20 oil is a most excellent fuel economy.

### ■Recommended engine oil


API Standard SN / RC 0r, ILSAC It is recommended to pass the standard oil. In addition, ILSAC has a network. Cars of oil to pass standard ILSAC CERTIFICATION (authentication Irusaku)

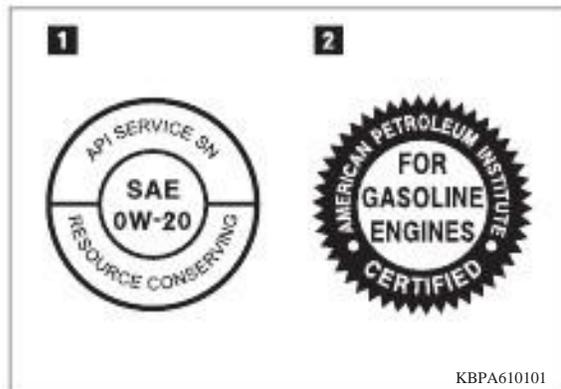

- 1 API Mark
- 2 ILSAC Certification mark

### ■Recommended engine oil viscosity

Based in the table below, please use the oil of viscosity suitable for the outside temperature.

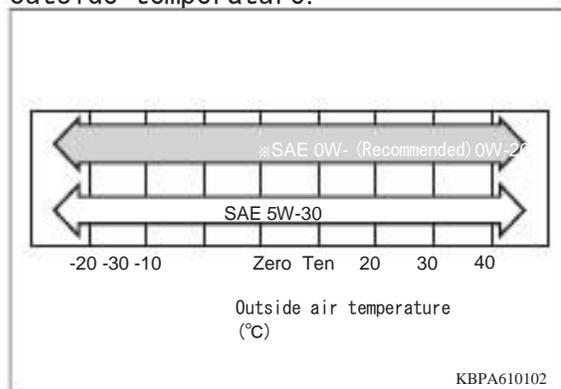

※ This oil is excellent in most fuel-efficient.

Oil viscosity for the degree (as an example 0W-20 Described in):

- 0W-20 Of 0W , Shows the characteristics of the engine starting at low temperatures. Before theW Engine start when cold winter and will be easier than a small number.
- 0W-20 Of 20 , Shows the characteristic viscosity at high temperatures. The number of high viscosity ( The value is greater) oil is suitable for driving high speed or heavy load.

### Radiator

Designated stock	Engine	Capacity [L] (Reference value)
Genuine Toyota Super Long Life Coolant Guaranteed temperature freezing Concentration 30%-12 °C Concentration 50%-35 °C	1KR-FE	4.0
	1NR-FE	4.5

### Automatic transmission

Designated stock	Engine	Capacity [L] (Reference value ※)
Toyota Genuine CVT FroudeTC	1KR-FE	5.8
	1NR-FE	6.4

※ Capacity is a reference value. When replacement is required please contact the Toyota dealers.

### Rear differential (4WD Car)

Designated stock (viscosity recommended)	Capacity [L] (Reference value)
Hypoid gear oil Toyota genuine SX (API GL-5 SAE 85W-90)	0.83

Transfer (4WD Car)

Designated stock (viscosity recommended)	Capacity [L] (Reference value)
Hypoid gear oil Toyota genuine SX (API GL-5 SAE 85W-90)	0.57

Brake

■ Brake fluid

Designated stock
Toyota genuine brake fluid 2500H

■ Brake pedal

Item	Reference value [Mm]
Play	0.5 ~ Three
And gaps in the floorboards when he stepped	70 Or more

※ When the engine rotation 294 N (30 kgf) Minimum value of the clearance between the floor boards pedal force when multiplied by the

■ Parking brake


Item	Reference value (count)
White tread Operating force 245 N (25 kgf) ※ when the number of	Five~Seven

※ Notches  
Notch, the moderation of when applying the parking brake ("Clicks into place" That of sound) that Is.

Six

Car  
Both  
Specit  
hake

Figure 6-1. Specification List

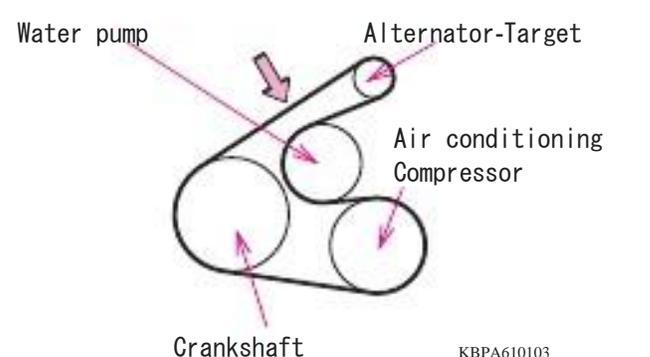VRibbed belt	
Item	Reference value [Mm]
<p>Amount of deflection</p> <p>▶ 1KR-FE Vehicles with engine</p>  <p>押力 100 N (10.2 kgf) ( Cold )</p>	11 ~ 14

※ 1NR-FE Vehicles equipped with engine inspection is not required.

Washer
Capacity [L] (Reference value)
2.0

Tire

Tire size	When the tire is cold Air pressure kPa (kg/cm <sup>2</sup> )	
	Front wheel	Rear wheel
Standard tires	155/80R13 79S	
	240 (2.4)	
	FF (Front-wheel drive)	250 (2.5) 230 (2.3)
Tires for emergency	165/70R14 81S	4WD (Four Wheel drive) 220 (2.2)
	T115/70D14	FF (Front-wheel drive) 420 (4.2)
	T105/70D16	4WD (Four Wheel drive) 420 (4.2)

Bulb (bulb)		
	Light bulb	WNumber (Watts)
Exterior	Headlight (+ Hana Vehicle specification, Vehicles equipped with discharge headlights) High beam (bulb type:HB3) Low beam (discharge headlights:D4S)	65 35
	Headlight (+ Hana Vehicle specification, Vehicles equipped with halogen headlights) High beam (bulb type:HB3) Low beam (bulb type:H7)	65 55
	Car headlights (standard, Vehicles equipped with halogen headlights) High beam / low beam (bulb type:H4)	60 / 55
	Light vehicle	Five
	Front fog lights * (bulb type:H8)	35
	Front direction indicator light flashes	21
	Side direction indicator light flashes and very Mounted on the fender Mounted on the door mirror	Five LED ※
	And rear direction indicator lights	21
	flashing very Brake light	LED ※
	Taillight	Five
	Reversing lights	16
	Rear fog light *	21
	High-mount stop light	16
	Number plate light	Five
Car	Room Light	Eight
	Personal Light	Five
	Light multi-tray	LED ※

※ LED IsLight Emitting DiodesStands for (light-emitting diode), is a semiconductor light-emitting electronic devices.

\* :Different equipment and optional equipment such as vehicle type

Six

Car  
Both  
Specit  
hške

Figure 6-1. Specification List

Vehicle specification		
Type	Engine	Drive system
KGC30	1KR-FE (1.0L Gasoline )	FF (Front-wheel drive)
KGC35		4WD (Four Wheel drive)
NGC30	1NR-FE (1.3L Gasoline )	FF (Front-wheel drive)

## List of user customization feature

The car is now equipped with a number of settings that can be changed. You can change the settings of your choice such as Toyota dealers operating in the area.

Some features, some configuration changes in conjunction with other features. For more information client Please contact your Toyota dealer.

Item	Feature content	Initial setting	After the change
Key free System (→ P. 20)	Key-free system	There are	No
Iruminesho Time to turn off		15 Second	7.5 Second
Application (→ P. 196)	Engine switch OFF Later Operation of the	There are	No

## Initial items that need to

The following items or after you reconnect the battery, maintenance procedures. For example, it is necessary to set initial work properly for the system.

Item	When you need a default setting	Reference
Power windows	- When reconnection after charging the battery exchange - After replacing the fuse	P. 64

## Index

Abbreviations and Acronyms 316  
.....

Alphabetical index 317 .....

Another symptom index 330 .....

Navigation systems, see "Certificate navigation system handling the separate"  
Please read the.

# Abbreviations and Acronyms Abbreviations and Acronyms

Alphabet abbreviation	Katakana
4WD	FourWheel drive
ABS	Anti-lock brake system
EPS	Electric power steering
INT	Intermittent
LED	Light Emitting Diode computing
SRS	Supplemental restraint system
VSC	Vehicle Stability Control
TRC	Traction Control

**The** Armrest 208 .....  
 Armrest pocket ..... 202  
 Outer mirror..... 61  
 Accessory socket ..... 207  
 Anti-lock brakes  
     System ..... 155  
 Antenna 194 .....

**I** Ignition  
     Switch ..... 114, 117  
 Ted Naples Illuminator entry  
     System ..... 196  
 Inner mirror..... 60

**I** Winker  
     WNumber ..... 311  
     Replacing the bulb 229 .....  
     Lever ..... 122  
 Window  
     Washer 140 ..... 142  
     Power windows..... 64  
     Rear window  
         Defogga182 .....  
 Window lock switch64 .....  
 Warning light 275 .....  
 Washer  
     Supply of liquid 258 .....  
     Switch 140 ..... 142  
     Tank capacity 310 .....  
     Preparation and inspection before the winter  
     162 .....  
 Operation  
     Operation at the time of cold .....  
     162  
     Good posture 73 .....  
     Procedure ..... 104  
 Seat belt driver's seat  
     Wear warning light non- ..... 278

For

- Air conditioning
  - Auto air conditioning ..... 168
  - Manual air conditioning 176 .....
  - Replacing the filter ..... 260
- Air bag
  - SRS Air bag 75 .....
  - General warning ..... 80
  - Care for children..... 80
  - To the curtain shield airbag
    - Warning about 81 .....
  - Curtain shield airbags
    - Operating condition 77 .....
  - Modify or disassemble 83 .....
  - Warning light..... 277
  - The side air bag
    - Warning about 81 .....
  - Of side air bag
    - Operating condition 77 .....
  - Operating condition..... 76
  - Good posture 73 .....
  - Placement ..... 75
- Eco-driving indicator
  - Of eco-driving indicator
    - Display switch ..... 133
    - Environment-friendly operation 105 .....
- Electric Power
  - Steering..... 155

- Engine
  - Ignition
    - Switch ..... 114, 117
  - Engine does not apply 291 .....
  - Engine warning light277 .....
  - Engine switch114 ....., 117
  - Overheat300 .....
  - How to make ..... 114, 117
  - Bonnet 223 .....
- Engine immobilizer
  - System 72 .....
- Engine oil
  - Preparation and inspection before the winter  
162 .....
  - Capacity ..... 306

## You Oil

- Capacity and stocks of oils and fats 306
- Tires for emergency
  - Air pressure..... 310
  - Spare tire ..... 280
- Audio
  - CD Player 188 .....
  - Antenna..... 194
  - Audio 184 .....
  - Adjustment ..... 193
  - Radio..... 186
- Auto air conditioning..... 168
- Automatic transmission
  - Automatic transformer
    - Mission 119 .....
  - Shift lever is
    - Can not be shifted 293 .....
- Auto-leveling system 137 .....
- Overheat (engine)..... 300
- Opener
  - Filler neck..... 68
  - Bonnet 223 .....
- Open tray..... 203

- For the safety of children
  - Window lock switch 64 .....
  - Air bag warning 80 .....
  - Seat belts for children
    - Wear ..... 55
  - A dedicated seat for children..... 84
  - Seat belt warning 56 .....
  - Child seat..... 84
  - Fixed child seat 94 .....
  - Child protector 31 .....
  - Of electronic key card
    - Battery Warning ..... 257
    - Warning about the battery 299 .....
    - To power window
      - Warning about 66 .....
  - Odometer ..... 131
- Or
  - Curtain shield airbags 75 .....
  - Outside temperature display .....  
131
  - Shopping hook ..... 209
  - Customization feature 313 .....
  - Information at a gas station 336 .....
  - Cup holder 201 .....
  - Garage jack 226 .....

I

Key

- Engine switch ..... 114, 117
- Key ..... 18
- Key number ..... 18
- Remote Keyless Entry 27 .....
- I lost the key ..... 294
- Electronic key card 18 .....
- Electronic key card
  - Not work properly 295 .....
- Mechanical key 19 .....
- Wireless door lock..... 27
- Key-free system
  - Starting the engine ..... 114
  - Unlocking of the door-locking 21 .....
- Filler neck 68 .....
- Emergency situations,
  - Engine does not apply..... 291
  - The overheat 300 .....
  - I lost the key ..... 294
  - With a warning light ..... 275
  - Tow.....268 .....
  - Shift lever is
    - Can not be shifted 293 .....
  - Emergency shutdown of the
    - vehicle  
to the 303 .....
  - The stack ..... 302
  - Electronic key card
    - Not work properly 295 .....
  - Warning flare..... 266
  - Battery has gone flat..... 297
  - Punctured 280 .....

Do

- Air pressure (tire)..... 310
- Air Conditioning
  - Auto air conditioning168 .....
  - Replacing the filter260 .....
  - Manual air conditioning 176 .....
- Distance meter interval ..... 131
- Cloudy takes
  - Front window
    - Glass 171,178 .....
  - Rear window
    - Defogga182 .....

## On Instrument

- Meter ..... 125
- Warning light
  - SRS Air bag 277 .....
  - Anti-lock brakes
    - System 277 .....
  - Non-driver's seat wearing seat belt.... 278
  - Engine..... 277
  - Engine oil pressure 276 .....
  - The engine cooling water temperature  
Key-free system 279 .....<sup>276</sup>
  - Charge ..... 276
  - Discharge headlights
    - Auto-leveling.277 .....
  - Remaining amount of fuel.....<sup>278</sup>
  - Power steering 277 .....
  - Half door..... 278
  - Pretensioner ..... 277
  - Brake..... 275
- Warning buzzer
  - Non-driver's seat wearing seat belt.... 278
  - Key-free system 25 .....
  - Forgot to remove key ..... 118
  - Brake..... 275
  - Forgetting to turn off lights .....<sup>137</sup>
- Cosmetic mirror 206 .....
- Tow 268 .....

## Thi Exchange

- Battery of key 254 .....
- Tire ..... 280
- Light bulb ..... 229
- Battery of electronic key card 254 .....
- Fuse 247 .....
- Tool 280 .....
- Reversing lights
  - WNumber ..... 311
  - Replacing the bulb 229 .....
- Only child seat 84 ..... 94
- ' S Side air bag 75 .....
- Side turn signal lights
  - W Number ..... 311
  - Replacing the bulb 229 .....
  - Lever ..... 122
- Sun visor ..... 205

Tool Sheet

Only child seat 84 .....	
Good posture 73 .....	
Fixed child seat..... 94	
Care..... 217	
Adjustment of front seat..... 37	
To adjust the front seat	
Warning about 38 .....	
Headrest .....	49
Adjustment of the rear seat 39 .....	
On adjusting the rear seat	
Warning.....46 .....	
Seat belt	
Children's wear 55 .....	
Seat belt when emergency	
Fixation mechanism 55 .....	
Seat belt warning light 278 .....	
Seat belt	
Pretensioner..... 54	
Will enter the hand-cleaning .....	
Correct wear 51 .....	
Fixed child seat..... 94	
Adjustment .....	51
Type of wear during pregnancy 56 .....	
Seat belt	
Information	
Indicator light..... 128	
Interior light	
WNumber .....	311
Switch 196 .....	
Shift lever	
Automatic transformer	
Mission119 .....	
Shift lever is	
Can not be shifted 293 .....	
Jack	
Garage jack226 .....	
Vehicle jack .....	280
Jack handle 280 .....	
Light vehicle	
width	
WNumber .....	311
Replacing the bulb 229 .....	
Light switch135 .....	
Vehicle type..... 312	
Vehicle specification..... 306	
Storage equipment..... 197	
Initial setting..... 314	
Sheet tray under the passenger seat 204 .....	

**The** Water temperature indicator 128  
 Switch.....  
     Stop & Start Canceled  
     Switch..... 145  
     VSC OFF ..... 156  
     Ignition  
         Switch ..... 114, 117  
     Window lock switch..... 64  
     Engine switch ..... 114, 117  
     Hazard light switch..... 265  
     Power window switch..... 64  
     Flasher switch very 265 .....  
     Fog light switch..... 138  
     Front wiper  
         Dea isa 183 .....  
     Light switch ..... 135  
     Wiper and washer  
         Switch ..... 140, 142  
 Stack  
     The stack ..... 302  
 Steering wheel  
     Adjustment ..... 59  
 Speedometer..... 125  
 Spare tire (for emergency tire)  
     Air pressure..... 310  
     Stowage..... 280  
 Spec 306 .....

**Let** Cleaning  
     Exterior ..... 214  
     Seat belt ..... 217  
     Interior ..... 217  
 Brake light  
     WNumber ..... 311  
     Replacing the bulb 229 .....  
 The total distance meter ..... 131  
 Car wash 214 .....  
 Headlight  
     WNumber ..... 311  
     Switch 135 .....  
     To discharge headlights  
         Warning about 246 .....  
         Replacing the bulb 229 .....  
 Lower center box 201 .....

**Res** Speedometer 125 .....

**Was** Tire

Tires for emergency ..... 280  
 Air pressure..... 310  
 Exchange ..... 280  
 Chain..... 162  
 Inspection ..... 219  
 Punctured 280 .....  
 Winter tires 162 .....  
 Rotation ..... 219

**Chi** Chain (tire chains)..... 162

Change lever (shift lever)  
 Automatic transformer  
     Mission 119 .....  
 Shift lever is  
     Can not be shifted 293 .....

Child seat  
     ISOFIX Fixed at the bar..... 97  
     Fixed in the seat belt..... 95

Child protector 31 .....

Parking brake 123 .....

**One** Tool..... 280

**Te** Care

Exterior ..... 214  
 Seat belt ..... 217  
 Interior ..... 217

Tail lamp

WNumber ..... 311  
 Switch 135 .....  
 Replacing the bulb 229 .....

Deck side pocket 204 .....

Light bulb

W Number ..... 311  
 Exchange ..... 229

Electronic key card

Not work properly 295 .....  
 Battery replacement 254 .....

And	<ul style="list-style-type: none"> <li>Door                             <ul style="list-style-type: none"> <li>Glass door 64 .....</li> <li>Door mirror 61 .....</li> <li>Door lock ..... 20, 27, 30</li> </ul> </li> <li>Glass door ..... 64</li> <li>Door mirror                             <ul style="list-style-type: none"> <li>Adjustment ..... 61</li> </ul> </li> <li>Anti-theft system                             <ul style="list-style-type: none"> <li>Engine immobilizer                                     <ul style="list-style-type: none"> <li>System 72 .....</li> </ul> </li> </ul> </li> <li>Watch 125 .....</li> <li>Traction Control 155 .....</li> <li>Drip meter ..... 131</li> </ul>
I	<ul style="list-style-type: none"> <li>※ navigation system</li> </ul>
To	<ul style="list-style-type: none"> <li>Luggage                             <ul style="list-style-type: none"> <li>Gained attention when ..... 160</li> </ul> </li> </ul>
I	<ul style="list-style-type: none"> <li>Display with fuel consumption display function 131 Fuel                             <ul style="list-style-type: none"> <li>Information at a gas station... 336</li> <li>Refueling ..... 68</li> <li>Type ..... 306</li> <li>Fuel gauge..... 125</li> <li>Capacity ..... 306</li> </ul> </li> </ul>

Is	<ul style="list-style-type: none"> <li>High-mount stop light                             <ul style="list-style-type: none"> <li>WNumber ..... 311</li> <li>Exchange ..... 229</li> </ul> </li> <li>Parking brake 123 .....</li> <li>Hazard light switch 265 .....</li> <li>Personal Light                             <ul style="list-style-type: none"> <li>WNumber ..... 311</li> </ul> </li> <li>Warning flare..... 266</li> <li>Backup light                             <ul style="list-style-type: none"> <li>WNumber ..... 311</li> <li>Replacing the bulb 229 .....</li> </ul> </li> <li>Backdoor 33 .....</li> <li>Battery                             <ul style="list-style-type: none"> <li>Battery has gone flat 297 .....</li> <li>Preparing for inspection before the winter 162</li> </ul> </li> <li>Vanity mirror 206 .....</li> <li>Valve                             <ul style="list-style-type: none"> <li>WNumber ..... 311</li> <li>Exchange ..... 229</li> </ul> </li> <li>Power windows 64 .....</li> <li>Punk                             <ul style="list-style-type: none"> <li>Punctured 280 .....</li> </ul> </li> <li>Light number (license plate lamp)                             <ul style="list-style-type: none"> <li>WNumber ..... 311</li> <li>Switch 135 .....</li> <li>Replacing the bulb 229 .....</li> </ul> </li> <li>Handle                             <ul style="list-style-type: none"> <li>Adjustment ..... 59</li> </ul> </li> </ul>
----	--

※: Please refer to "Navigation System manual handling separate volume".

**Fir**

Vehicle stability  
 Control..... 155  
 Very light flashes 265 .....

Heater  
 Auto air conditioning ..... 168  
 Manual air conditioning 176 .....

Taillight  
 WNumber ..... 311  
 Switch..... 135  
 Replacing the bulb 229 .....

Fuse 247 .....

Indicator light 127 .....

**Fu**

Fog lights  
 W Number ..... 311  
 Switch..... 138  
 Replacing the bulb 229 .....

Hook  
 Tow hooks ..... 268

Fuel Pump  
 Shut-off system 274 .....

Winter tires 162 .....

Brake  
 Parking brake 123 .....

Brake Assist..... 155

Floor mat 210 .....

Floor tray 203 .....

Front seat  
 Adjustment ..... 37

Front turn signal lights  
 W Number ..... 311  
 Replacing the bulb 229 .....

Lever ..... 122

Front fog light  
 W Number ..... 311  
 Switch 138 .....

Replacing the bulb 229 .....

Front wiper service encounter 183 .....

- To** Headlight  
     W Number ..... 311  
     Switch.....135 ....  
     To discharge headlights  
         Warning about 246 .....  
         Replacing the bulb 229 .....
- Headrest  
     Adjustment ..... 49
- Mos** Wheel 219 .....
- Directional light  
         W Number ..... 311  
         Replacing the bulb 229 .....
- Lever..... 122
- Bottle holder..... 200
- Horn (horn instrument)..... 124
- Bonnet 223 .....
- Or** Manual air conditioning 176 .....
- Multi-tray ..... 203
- Bod** Miller  
     Inner mirror..... 60  
     Door mirror 61 .....
- Vanity mirror206 .....
- Fir** Meter..... 125
- Maintenance  
     Maintenance data 306 .....
- Yu** User customization feature313 .....
- Oils and fats ..... 306

<p><b>Fro</b> License plate light (light number)</p> <ul style="list-style-type: none"> <li>WNumber ..... 311</li> <li>Switch..... 135</li> <li>Replacing the bulb 229 .....</li> </ul> <p>Light</p> <ul style="list-style-type: none"> <li>W Number ..... 311</li> <li>Interior light..... 195</li> <li>Replacing the bulb 229 .....</li> <li>Personal Light ..... 196</li> <li>Light hazard ..... 265</li> <li>Very light flashes 265 .....</li> <li>Fog lights ..... 138</li> <li>Headlight ..... 135</li> <li>Directional light 122 .....</li> <li>Room Light ..... 196</li> </ul> <p><b>Tha</b> Rear window Defogga</p> <ul style="list-style-type: none"> <li>(Tri cloudy)..... 182</li> </ul> <p>Rear seat</p> <ul style="list-style-type: none"> <li>Adjustment ..... 39</li> <li>Ahead of schedule..... 41</li> </ul> <p>Rear turn signal lights</p> <ul style="list-style-type: none"> <li>W Number ..... 311</li> <li>Replacing the bulb 229 .....</li> <li>Lever..... 122</li> </ul> <p>Rear fog light</p> <ul style="list-style-type: none"> <li>W Number ..... 311</li> <li>Switch..... 138</li> <li>Replacing the bulb 229 .....</li> </ul> <p><b>Ru</b> Room Light</p> <ul style="list-style-type: none"> <li>W Number ..... 311</li> <li>Switch..... 196</li> </ul>	<p><b>Are</b> Cooling water</p> <ul style="list-style-type: none"> <li>Preparation and inspection before the winter 162 .....</li> <li>Capacity ..... 308</li> </ul> <p>Cooling system</p> <ul style="list-style-type: none"> <li>Engine overheating 300 .....</li> </ul> <p><b>I</b> Rack wide free 203 .....</p> <p>Wiper</p> <ul style="list-style-type: none"> <li>Switch 140 ..... 142</li> </ul> <p>Sir meeting wiper 183 .....</p> <p>Wireless door lock</p> <ul style="list-style-type: none"> <li>Battery replacement 254 .....</li> <li>Remote ..... 27</li> </ul>
--	--


- A** ABS (Anti-lock brakes System) ..... 155  
AM / FM Radio..... 186
- C** CD Player 188 .....
- E** EPS (Electric Power Steering) ..... 155
- I** ISOFIX Bar ..... 94
- S** SRS Air bag..... 75  
Stop & Start System  
  Idling time.... 131  
  Stop & Start  
    Cancel switch..... 145  
  Stop & Start System 144 .....  
  Stop & Start Indicator light 128 .....
- T** TRC (Traction Control) ..... 155
- V** VSC (Vehicle Stability Control) ..... 155

## Another symptom index


Tires were punctured	P. 280	When you punk
Engine does not apply	P. 291	Does not apply when the engine is
	P. 72	Engine immobilizer system
	P. 297	When the battery has gone flat is
Shift lever does not move	P. 293	When the shift lever can not be shifted Is
High water temperature warning light is lit	P. 300	When the projector overheats
From the engine room Rose up steam was		
I lost the key	P. 294	If you have lost the key

Battery has gone flat	P. 297	When the battery has gone flat is
Door can not be locked	P. 20 P. 27 P. 30	Door
Such as mud and sand Was stuck	P. 302	When the stack
Warning light is lit, the flashing	P. 275	With a warning light when

Non-drive vehicles equipped with sport switch

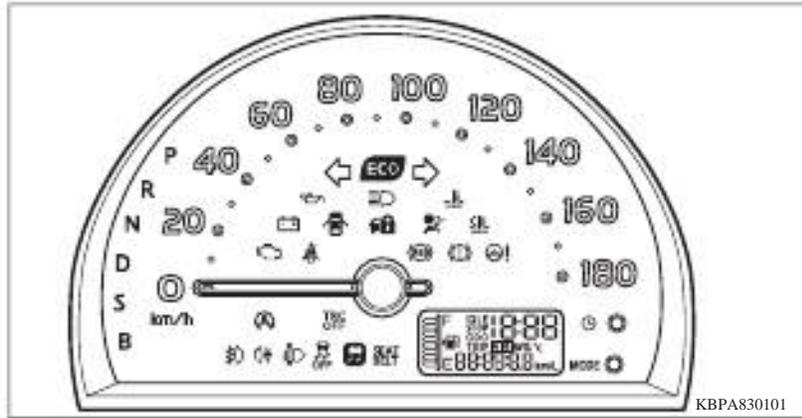

Drive vehicles equipped with sport switch

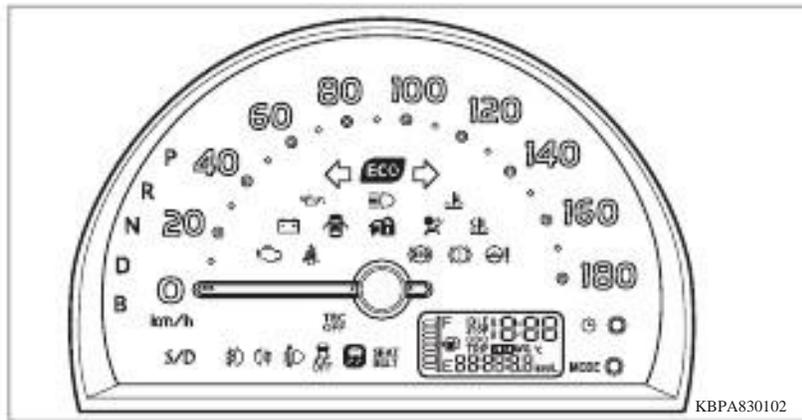

## ■List of warning light

	Brake warning light P. 275		Shift position indicator (Blinking) P. 277
	Charging warning light P. 276		Slip indicator P. 277
	Oil pressure warning light P. 276		Stop & Start Indicator system (Flashing amber) P. 277
	Engine warning light P. 277		Half door warning light P. 278
	SRS Airbag / Puriten Shona warning light P. 277		Non-driver's seat wearing seat belt Warning light for P. 278
	ABS Warning light P. 277		Fuel level warning light P. 278
	Power steering Warning light P. 277		High water temperature warning light P. 276
	Oh discharge headlights Leveling warning light port P. 277		

The alarm rang


- Warning light is illuminated, flashing (→ P. 275)
  
- When no warning light is lit, flashing, please check the following.

Status of the car	Situation when it becomes	See page
In the parking / stopping	When I opened the door	P. 25
While driving	The shift lever R When set to	P. 121
	When I stepped on the brake	P. 112



## Information at a gas station

Summarizes the items needed, such as when refueling or replacement.

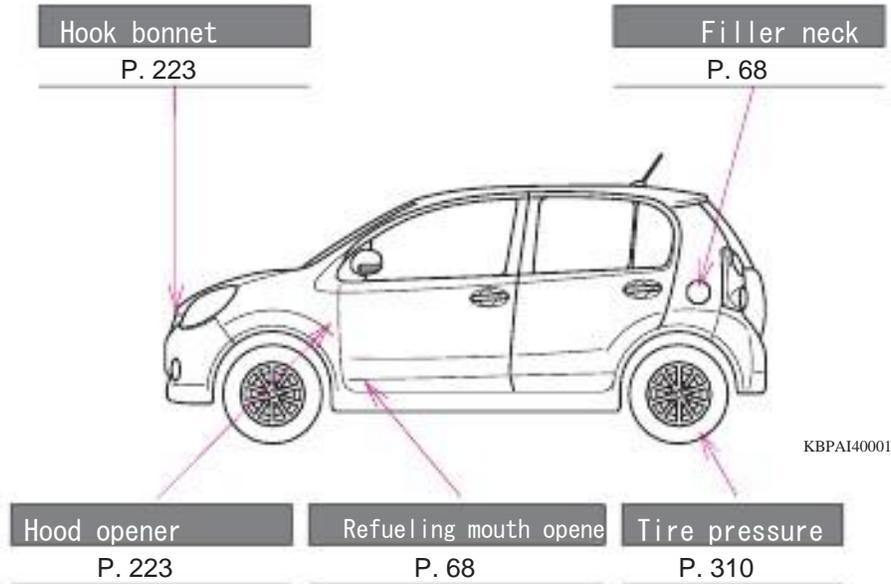

Capacity of the fuel (Reference value)	FF (Front-wheel drive) : 40L 4WD (Four Wheel drive) : 38L
Type of fuel	Regular unleaded gasoline <span style="float: right;">P. 69, 306</span>
The tire is cold When the air pressure	155/80R13 79S Front and rear wheels : 240 (2.4) kPa (kg/cm <sup>2</sup> ) 165/70R14 81S ● FF (Front-wheel drive) Front wheel : 250 (2.5) kPa (kg/cm <sup>2</sup> ) Rear wheel : 230 (2.3) kPa (kg/cm <sup>2</sup> ) ● 4WD (Four Wheel drive) Front and rear wheels : 220 (2.2) kPa (kg/cm <sup>2</sup> )
Engine oil capacity (Reference value)	When replacing the oil only 1KR-FE Car engine : 2.9 L 1NR-FE Car engine : 3.2 L When replacing the oil and filter 1KR-FE Car engine : 3.1 L 1NR-FE Car engine : 3.4 L
Kind of engine oil - SN 5W-30 (API SN, RC) Kind	Toyota Genuine Motor Oil / ILSAC GF-5, SAE 5W-30) - SN 0W-20 (API SN, RC / ILSAC GF-5, SAE 0W-20)

お問い合わせ、ご相談は  
下記へお願いいたします。

トヨタ自動車株式会社 お客様相談センター  
全国共通・フリーコール

 **0800-700-7700**

オープン時間 365日 9:00～18:00

所在地 〒450-0002 名古屋市中村区名駅西丁目10の27  
第二豊田ビル西館7階

「個人情報保護方針」については、  
<http://www.toyota.co.jp>にて掲載しております。

**トヨタ自動車株式会社**  
**<http://toyota.jp>**



M B1154  
01999—B1154  
KB-2012Years00Month00DaySix 20  
2012Years00Month00Day First  
editionSix 27  
Passo